

ユーザー マニュアル

機種名: KDS-SW2-EN7 4K AVoIP エンコーダー





目次

目次	2
はじめに	3
ご使用前に	3
概要	4
代表的なアプリケーション	5
KDS-SW2-EN7の説明	6
KDS-SW2-EN7の説明	6
KDS-SW2-FN7 を設置する	8
KDS-SW2-FN7 と KDS-DEC7 を接続する	9
音声/入出力の接続	10
L FDの機能	11
BS-232経由でKDS-SW2-FN7に接続	11
KDS-SW2-FN7の操作と制御	12
ネットワークスイッチの設定	12
メニュー ナビゲーション ボタンの使用	12
イーサネット経由で操作	15
KDS-SW2-FN7 内蔵Webページの使用	20
ΔVIIティング パラメータの設定	20
オートフィッチングの設定	22
信号指生 タイムアウトの設定	25
旧り頂大フィムアフトの設定	25
音声の設定	20
	20
LDID の自理 一般設定	21
NDC CM/2 FN7 フットローク設定	25
KDS-SW2-EN7 ホットノーク設定 KDS SW2 EN7 時刻と日台の設定	25 27
KDS-SW2-EN7 村刻C口100000 KDS SW2 EN7 セキュレニュの氾守	2/
KDS-SWZ-EN7 ビキエリナイの設定 KDS SW2 EN7 ユーザー アクセスの部字	 ⊿1
KDS-SW2-EN7 ユーリー アクセスの設定	41
KDS-SW2-EN7 クートウエイの設定 KDS-SW2-EN7 フニークスのまニ	44
KDS-SWZ-EN/ 人ナーダ人の衣示 KDS-SWZ-EN/ 人ナーダ人の衣示	47
KDS-SWZ-EN7 接続人ナータスの表示	48
KDS-SW2-EN/ 詳細人ナータ人の表示	49
	50
KVMローミング、USDメニュー、高速スイッナング	51
KVMローミングの設定	52
- 局速人イッナンク設定 	55
ファームワェアのアッフクレード	56
	5/
KDS-SW2-EN/ 仕禄	5/
テフォルト通信パフメータ	58
テフォルト EDID	58
テフォルトバラメータ	61
フロトコル 3000	62
フロトコル3000 について	62
フロトコル3000 コマンド	63
結果とエラーコード	78

はじめに

クレイマーエレクトロニクスへようこそ!1981年以来、Kramer Electronicsは、ビデオ、オー ディオ、プレゼンテーション、および放送の専門家が日常的に直面する幅広い問題に対して、 ユニークで創造的で手頃な価格のソリューションの世界を提供してきました。近年、私たちは ラインのほとんどを再設計およびアップグレードし、最高のものをさらに良くしました!

ご使用前に

(

次のことをお勧めします:

- 機器を慎重に開梱し、将来の出荷に備えて元の箱と梱包材を保管してください。
- このユーザーマニュアルの内容を確認してください。

www.kramerav.com/downloads/KDS-SW2-EN7 マニュアル、アプリケーションプログラムを確認し、ファームウェアのアップグレード が利用可能かどうかを確認します(該当する場合)。

最適な動作を得るために

- 干渉、マッチング不良による信号品質の低下、ノイズレベルの上昇(多くの場合、低品質のケーブルに関連する)を回避するために、高品質の接続ケーブルのみを使用してください(Kramerの高性能、高解像度ケーブルをお勧めします)。
- ケーブルをきつく束に固定したり、たるみをきつく丸めて巻き込んだりしないでください。
- 信号品質に悪影響を与える可能性のある隣接する電化製品からの干渉を避けてください。
- クレイマー KDS-SW2-EN7 を湿気、過度の日光、ほこりから離して配置します。

安全上の注意

注意:

- この機器は、建物内でのみ使用してください。建物内に設置されている他の機器にの み接続できます。
 - リレー端子とGPI/Oポートを備えた製品については、端子の横またはユーザーマニュアルにある外部接続の許容定格を参照してください。
 - ユニット内に使用者が保守可能な部品はありません。

警告:

- 装置に付属の電源コードのみを使用してください。
- •継続的なリスク保護を確保するには、ユニットの底面にある製品ラベルに指定 された定格に従ってのみヒューズを交換してください。

クレイマー製品のリサイクル

廃電気電子機器(WEEE)指令2002/96/ECは、収集とリサイクルを要求することにより、埋 立地または焼却処分のために送られるWEEEの量を減らすことを目指しています。WEEE指 令に準拠するために、クレイマーエレクトロニクスは欧州先進リサイクルネットワーク (EARN)と取り決めをしており、ARN施設に到着した時点でクレイマーエレクトロニクスブ ランドの廃棄物機器の処理、リサイクル、回収の費用を負担します。特定の国におけるクレ イマーのリサイクルの取り決めの詳細については、

www.kramerav.com/il/quality/environmentのリサイクルページをご覧ください。

概要

Kramer KDS-SW2-EN7 4K AVoIP エンコーダをお買い上げいただきありがとうございます。 KDS-SW2-EN7 は、選択した4K@60Hz (4:2:0) 映像信号、USB、IR、RS-232、CEC信号を メタルケーブル上のイーサネット経由でユニキャスト (1対1)、またはマルチキャスト(1対多) 構成で ストリーミングするためのオート スイッチャーおよび高度なエンコーダです。

KDS-SW2-EN7 は、選択可能な2系統の入力の1系統の映像信号をUSB、IR、RS-232、CEC 信号と共にIPネットワーク経由でストリーミング送信します。Kramer KDS-DEC7 は映像信号 をデコードし、USB、IR、RS-232、CEC 信号を受信します。

KDS-SW2-EN7 は、優れた品質、高度でユーザーフレンドリーな操作、および柔軟な制御を 提供します。

特長

- 瞬時切り替え時間:映像入力間の選択切り替え時間は1秒です
- 映像ストリーミング送信器:1G ネットワーク インターフェイス経由で最大 4K@60Hz (4:2:0) 解像度の信号をストリーミングします
- HDR対応: HDR10 最大4K@30Hz 4:2:2 12ビット
- ストリーミング対応:ユニキャストおよびマルチキャスト ストリーミングを提供します
- 柔軟なアナログ音声のエンベディングとディエンベディング:バランス アナログ音声を入力として選択してストリーミングおよび HDMI™出力信号にエンベッドするか、出力として HDMI信号から抽出したバランス アナログ音声信号を出力します
- 簡単操作のKM/KVM対応:検索可能なKM用の OSDメニュー、および全て設定可能な KVMローミング

先進的で使いやすい操作性

- 使い勝手の良い総合的な制御:直感的な内蔵Webページ、イーサネット経由のプロトコル3000 APIコマンド、またはフロントパネルの LCD およびナビゲーションボタンを使用してユニットを制御します
- PoE対応: PoE LANスイッチからの PoE接続により電力供給
- キーボードとマウスのローミング
- コントロール ゲートウェイ: プロトコル3000 または特有のTCP接続を 通じて、ユーザーは IR、RS-232、CEC を使用して接続されたデバイ スを制御/通信できます
- 独立したサービス LAN ポート: セキュリティと信頼性を目的として、AVスト リームとコマンド ストリームを物理的に分離するため LANを分離して使用でき ます

Flexible Connectivity

- 選択可能な入力: HDMI 1入力 と USB-C 1入力
- アナログ/エンベッド音声入力および出力
- NetgearM4250 AVoIPスイッチ、Kramer Control、および KDS-USB2 によるプラグ アンド プレイ

代表的なアプリケーション

KDS-SW2-EN7 は、次の一般的なアプリケーションに最適です:

- 指令室や制御室などのリアルタイム性を必要とする設備
- 企業オフィスや政府機関のアプリケーションなど既存の配線とインフラストラク チャを使用した大規模な AVコンテンツ共有設備
- 学校、大学、公共施設における 複数のソースと複数のディスプレイを備えた AV 配信システム
- 低遅延の KM/KVM機能が必要な AV設備

KDS-SW2-EN7の制御

KDS-SW2-EN7 はナビゲーションボタンで直接制御するか、次の方法で制御します:

- 内蔵のユーザーフレンドリーな Webページを使用したイーサネット制御
- プロトコルコマンド

KDS-SW2-EN7の説明

このセクションでは、KDS-SW2-EN7の説明をします。



図1:KDS-SW2-EN7 4K AVoIP Encoder

No.	機能		説明
1	HDMI IN コネクタ		HDMI ソースに接続します。
2	USB-C IN ポート		USB-Cソースに接続します。
			Kramer 24V 電源 (オプション) で電力を供給すると、(USB Power
			Delivery 2.0 をサポートする) 電源を最大60W まで充電できます。
3	LCDディスプレイ		エンコーダーの独自のチャンネル/AV ストリーム設定などデバイス設定に使用します。
4	Menu	<	押すと、前のメニューに戻ります。
	ナビゲーショ		押すと、次の設定パラメータに上方移動します。
	ンボタン	►	押すと、次のメニューに進みます。
		▼	押すと、次の設定パラメータに下方移動します。
		Enter	押すと、変更を受け入れます。
5	LINK LED		LEDの機能を参照(11ページ)
6	5 NET LED		
7	ON LED		
8	24V/5A DC コネク	 ゆ	電源アダプタ(別売り)に接続します。
9	RESET凹型ボタン		10秒間押し続けると、本機は工場出荷時のデフォルト値にリセットされます。す べてのLEDが点滅します。
10	LAN MEDIA 1G(PoE)	ユニキャスト:ストリーミングのためにデコーダーに直接接続するか、LAN経由で
	RJ-45ポート		接続します。マルチキャスト:複数のデコーダーに接続するか、SERVICE (1G)
			ボート経由で複数のテコーターかテイジーチェーン接続されている1台のテコーター に接続します。
11	11 LAN SERVICE 1G RJ-45		オプションで、セキュリティと信頼性を目的として AVストリームとコマンド スト
			リームを物理的に分離し、LAN を分離するために使用されます。
12	12 RS-232 3ピンターミナル		RS-232 機器に接続して、ゲートウェイおよび双方向信号延長として使用しま
	ブロックコネクタ		す(AV 信号が延長されていない場合でも)。
13	13 AUDIO IN/OUT 5ピンターミ		バランスアナログステレオ音声ソース/アクセプターに接続します。
	ナルブロックコネクタ		

No.	機能	説明
14	IR 3.5Φ ミニジャック	双方向信号延長のためにIRセンサーまたはエミッターに接続します(AV信号が延 長されていない場合でも)。IR受信機の期待電圧-(3.3V)。
15	USB Type A 充電ポート (1、2)	スピーカーフォンやウェブカメラなどの USBデバイスに接続します。
16	HOST USB Type B ポート	USB ホストに接続します。
17	HDMI OUTコネクタ	信号をループさせるときに接続します。

KDS-SW2-EN7 を設置する

このセクションでは、KDS-SW2-EN7の取り付け手順について説明します。設置する前に、環境が推奨範囲内であることを確認してください:



- 動作温度:0℃~40℃
- 保存温度:-40℃~+70℃
- 湿度: 10%~90%、RHL 結露なき事

警告:

注意:

•環境(例えば、最大周囲温度や空気の流れなど)が機器に適合していることを確認してください。

•ケーブルや電源を接続する前に KDS-SW2-EN7を取り付けてください。

- •機器に不均一な負荷をかけないでください。
- ●回路の過負荷を回避するために、装置の記載されている定格を適切に順守してください。
- ラックに設置する際は、確実な接地を維持してください。
- 設置の最大高は2mです。

KDS-SW2-EN7をラックに取り付ける:

推奨ラックアダプタを使用します。
 www.kramerav.com/product/KDS-SW2-EN7 を参照

次のいずれかの方法を使用して、KDS-SW2-EN7 を平面に取り 付けます:

- ゴム足を取り付け、ユニットを平らな面に置きます.。
- 両方のブラケット(同梱)を取り付け、平面に設置します。

詳細については、<u>www.kramerav.com/downloads/KDS-SW2-EN7</u>



KDS-SW2-EN7 と KDS-DEC7 を接続する

デフォルトでは、デバイスは PoE を使用してデバイスに電力を供給します。オプションで、製品に接続して主電源に接続するための電源アダプターを別途購入できます。

KDS-SW2-EN7 および KDS-DEC7 を接続する前に、必ず各デバイスの電源をオフにしてください。デバイスを接続したら、電源を接続し、各デバイスの電源を入れます。



図2: KDS-SW2-EN7 と KDS-DEC7 の接続

上の例に示すように KDS-SW2-EN7 を接続するには、次の手順で行います:

- 1. HDMIソース (サーバーやメディア プレーヤーなど) を KDS-SW2-EN7 の HDMI IN 1 コネクタ ① に接続します。
- 2. 映像ソース (PCなど) を KDS-SW2-EN7 の USB INコネクタ ② に接続します。
- 3. バランス ステレオ 音声ソース (サーバーの音声コネクタなど) を KDS-SW2-EN7 の AUDIO IN/OUT 5ピンターミナルブロックコネクタ ⑬ に接続します。
- 4. LANスイッチ経由で、KDS-SW2-EN7 の LAN MEDIA 1G(PoE) RJ-45 ポート ⑨ を KDS-DEC7 デコーダーの LAN MEDIA 1G(PoE) RJ-45 ポート ⑭ に接続します。
- 5. KDS-DEC7 の HDMI OUTコネクタを HDMI アクセプタ (ディスプレイなど) に接続します。
- KDS-DEC7 の AUDIO OUT 5ピンターミナルブロックコネクタをバランス ステレオ 音 声アクセプタ (オーディオ アンプなど) に接続します。

- 7. USB ポートを接続します:
 - KDS-SW2-EN7 で、2つの USB タイプ A ポート ⑮ を (たとえばWebカメラとス ピーカーフォン)に接続します。
 - KDS-DEC7 では、マウスとキーボードを 2つの USB タイプ A ポートに接続します。
- 8. KDS-DEC7に接続されているディスプレイをエンコーダー側から IRで制御します:
 - KDS-SW2-EN7 で、IR 3.5mm ミニ ジャック ^① をPC/コントローラーに接続します。
 - KDS-DEC7 では、IR 3.5mm ミニ ジャックをエミッター ケーブルに接続し、 エミッター側をディスプレイの IRセンサーに取り付けます。
- 9. RS-232 3ピンターミナルブロックコネクタを接続します:
 - KDS-SW2-EN7 で、RS-232 ポート ⑪ をPC/コントローラーに接続します。
 - KDS-DEC7 では、RS-232 をディスプレイに接続します。

RS-232 双方向信号は、ディスプレイと KDS-DEC7 の HDMI OUT コネク タに接続されたPCの間で送信できます。

音声/入出力の接続

以下は、入力/出力をバランスまたはアンバランス ステレオ音声アクセプターに接続す るためのピン配置です:



L+ L- G R+ R-





図5:アンバランス ステレオ音声ソースをバラン ス入力に接続する



図4:アンバランスステレオ音声アクセプター への接続

LEDの機能

KDS-SW2-EN7 のLEDは次のように機能します:

LED	色	説明	
LINK LED	緑色に点灯	KDS-SW2-EN7 とデコーダーの間にリンクが確立され、A/V 信号が送信 されています。	
	緑色に点滅	信号が確立されていて、問題が検出されました。	
NET LED	消灯	IPアドレスが取得できません。	
	緑色に点灯	有効なIPアドレスが取得されました。	
	緑色に非常に速く点滅 (60秒間)	デバイス識別コマンドが送信されました (Flag me)。	
		デバイスはフォールバック (デフォルト) IPアドレスになっています。	
	赤色に点灯	セキュリティが IP アクセスをブロックしています。	
ON LED	赤色に点滅	フォールバック アドレスを取得すると、デバイスの「ON」LED が 0.5/10 秒の遅い周期で点滅し続けます。	
	緑色に点灯	通電中です。	
	緑色に遅く点滅	デバイスはスタンバイモードです。	
	緑色に速く点滅	ファームウェアがFWはバックグラウンドでダウンロードされました。	
	緑色に非常に速く点滅 (60秒間)	デバイス識別コマンドが送信されます (Flag me)。	
	黄色に点灯	デバイスはデフォルトの IPアドレスに戻りました。	
	赤色に点灯	セキュリティが IP アクセスをブロックしています。	
再起動後、す	べての LED が 3秒間点灯し、通常の L	ED表示モードに戻ります。	

RS-232経由でKDS-SW2-EN7に接続

PC などを使用して、RS-232接続 ⑫ 経由で KDS-SW2-EN7 に接続できます。

KDS-SW2-EN7 は、RS-232 3ピンターミナルブロックコネクタを備えており、RS-232 で KDS-SW2-EN7 を制御できます。

次のように、KDS-SW2-EN7 のリアパネルにある RS-232ターミナルブロックコネクタを PC/コ ントローラーに接続します:

RS-232 9ピン D-sub シリアル ポートから次のように接続します:

- ピン2から KDS-SW2-EN7 RS-232ターミナルブロックの TXピンへ
 RS-232 Device KDS-SW2-EN7 RS-232
 RS-232 Device KDS-SW2-EN7
 RS-232 Device RS-232
 RS-232 Device RS-232
- ピン3から KDS-SW2-EN7 RS-232ターミナルブロックの RXピンへ
- $\begin{array}{c|c} & \text{Pin 5} & \text{Ground} \\ \hline 9 & 4 & \\ 8 & 4 & \\ 8 & 3 & \\ 7 & 3 & \\ 7 & 3 & \\ 7 & 2 & \\ 6 & 2 & \\ 6 & 1 & \\ \end{array} \xrightarrow{} Rx$

RS	5-2	32
G I	Rx	Tx
$\overline{\cdot}$	•	•

 ピン5から KDS-SW2-EN7 RS-232ターミナルブロック の Gピンへ

KDS-SW2-EN7の操作と制御

このセクションでは、次の操作について説明します:

- ネットワークスイッチの設定(12ページ)
- メニュー ナビゲーション ボタンの使用(12ページ)
- イーサネット経由での操作(15ページ)

ネットワークスイッチの設定

システムを設定する前に、AV over IP ネットワーク スイッチが次の最小要件を満たしていることを確認してください:

- Jumbo Frames On (少なくとも 8000 bytes)
- IGMP Snooping On
- IGMP Querier On
- IGMP Immediate/Fast Leave On
- Unregistered Multicast Filtering On

メニュー ナビゲーション ボタンの使用

デバイスを 24V DC電源アダプタに接続し、アダプタを主電源に接続します。ON LED が 緑色に点灯し、LINK LED が点滅します (ストリーミング アクティビティが検出されてい ないことを示します)。

ナビゲーション ボタンを使用すると、デバイスの LCDディスプレイ ② に表示される デバイス メニューから基本的なデバイス パラメータを簡単に表示および設定できます。 13ページの「KDS-SW2-EN7 ナビゲーション ボタンの使用」を参照してください。

ナビゲーション ボタン ③ の使用 / 以下を使用します:

- 上矢印:前の設定パラメータに移動します
- 下矢印:次の設定パラメータに進みます
- 左矢印:前のメニューに戻ります
- 右矢印:次のメニューに進みます
- Enterボタン:変更を受け入れて保存します

デバイスの設定がされます。

KDS-SW2-EN7 ナビゲーション ボタンの使用

- デバイスステータスの設定(13ページ)
- デバイス情報の表示(13ページ)
- EDID の選択(14ページ)
- HDCPの設定(14ページ)
- エンコーダ デバイス チャネル番号の設定(14ページ)

デバイスステータスの設定

デバイスパラメータを表示します。

デバイスパラメータを表示するには:

- 1. 左または右の矢印を押して、デバイス ステータス (DEV STATUS) メニューにアクセスします。
- 2. 上矢印または下矢印を押すと、次の情報が表示されます:
 - LAN1ステータス (IPアドレス、サブネットマスク、ゲートウェイアドレスを含む)
 - LAN2ステータス (IPアドレス、サブネットマスク、ゲートウェイアドレスを含む)
 - HDMIステータス (映像入力解像度と HDCP設定ステータスを含む)。
 - デバイスチャネルID (CH DEFINE) を表示します。
 - デバイスの内部温度 (°C)

デバイスのステータスが表示されます。

デバイス情報の表示

デバイスパラメータを表示するには:

- 1. 左または右の矢印を押して、デバイス ステータス メニューにアクセスします。
- 2. 上矢印または下矢印を押して、デバイスのファームウェアとハードウェアの情報を表示します:
 - ファームウェア バージョン (FW)
 - ブートローダー情報 (BL)
 - ハードウェア バージョンHardware version (HW)

デバイス情報が表示されます。

映像入力の選択

- 1. 左または右の矢印を押して、デバイス ステータス メニューにアクセスします。
- 2. 上矢印または下矢印を押して入力を選択します:
 - HDMI IN
 - USB-C IN

入力信号が選択されます。

EDIDの選択

EDID を選択するには:

- 1. 左または右の矢印を押して、デバイス設定メニューにアクセスします。
- 2. 上矢印または下矢印を押して、EDID設定メニューを選択します。
- 3. 次のオプションから EDID を選択します:

選択	EDID設定
0	Default
1	4K30_2.0CH
2	4K30_Dolby
3	1080P50_Dolby
4	720P50_2.0
5	720P50_Dolby

4. Enter を押して変更を受け入れます。

入力側のEDIDが設定されました。

HDCPの設定

ナビゲーションボタンを使用して、入力の HDCP を有効または無効にします。

HDCPを設定するには:

- 1. 左または右の矢印を押して、HDCP設定メニューにアクセスします。
- 2. 上または下のボタンを押して、HDMI IN または USB-C IN 入力を選択します。
- 3. 選択した入力ごとに、上矢印または下矢印を押して HDCPサポート モードを選択します:
 - HDCPサポートを有効にするには、ONを選択します。
 - HDCPサポートを無効にするには、OFFを選択します。
- 4. Enter を押して HDCPモードを受け入れます。

エンコーダデバイス チャネル番号の設定

デバイスのチャネル番号を1~999で設定します。

エンコーダのチャネル番号を定義するには、次の手順で行います:

- 1. 左または右の矢印を押して、CH DEFINE メニューにアクセスします。
- 2. 上または下矢印を押して、最初の桁 (0~9) を設定します。
- 3. 左矢印と右矢印を押して、他の数字(0~9)を追加します。
- 4. Enter を押してチャネル番号を受け入れます。

このデバイスのチャネル番号が設定されました。

イーサネット経由で操作

このセクションでは、次の操作について説明します:

- LCD画面メニューによる IPアドレスの設定(15ページ)
- Web UI へのアクセス(16ページ)
- Ethernet ポートを PC に直接接続する(16ページ)
- ネットワーク ハブまたはスイッチを介したイーサネット ポートの接続(19ページ)
- イーサネットポートの設定(19ページ)

LCD画面メニューによる IPアドレスの設定

KDS-SW2-EN7 のデフォルトの静的IPアドレスは 192.168.1.39 です。デフォルトでは、 DHCP が有効になっており、デバイスに IPアドレスが割り当てられます。DHCPサーバーが利用 できない場合、たとえば、デバイスがPCに直接接続されている場合、そのデバイスはデフォルト の IPアドレスを取得します。これらの IPアドレスがすでに使用されている場合、システムは 192.168.X.Y の範囲でランダムな一意の IP を検索します。割り当てられた IPアドレスは、 LCD画面のメニューを使用して確認できます。

チャンネル番号の設定

各エンコーダには一意のチャネル番号が必要であり、接続されたデコーダはそのエンコーダ チャネルに同調する必要があります。チャネル番号は、LCD画面メニューまたは内蔵Webペー ジを介して設定できます。

LCD画面メニューから KDS-SW2-EN7 のチャネル番号を設定するには:

- 1. デバイスを 24V DC電源アダプタに接続し、アダプタを主電源に接続します。ON LED が 緑色に点灯し、LINK LED が点滅します (ストリーミング アクティビティが検出されてい ないことを示します)。
- 2. LCD 画面メニューで、DEV SETTINGS > CH DEFINE に移動します。
- 3. 矢印ボタンを使用して、一意のチャンネル番号を変更/設定します。
- 4. Enter を押して選択内容を保存します。

Webページからチャネル番号を設定するには:

- 1. KDS-SW2-EN7 イーサネット ポートをネットワークに接続し、デバイスに電力を供給しま す。
- 2. 内蔵Webページにアクセスします。
- 3. メインページにて:
 - AV Routingに移動します。
 - Channel ID を選択し、チャネルID番号を設定します。

デフォルトで、KDS-SW2-EN7 は DHCP対応です。このセクションでは、DHCP が有効に なっている場合と静的IPアドレスが使用されている場合に、イーサネット経由で操作し、IPア ドレスにアクセスする方法について説明します。 次のいずれかの方法を使用して、イーサネット経由で KDS-SW2-EN7 に接続できます:

DHCP が有効な場合 (たとえば、35ページの「KDS-SW2-EN7 ネットワーク設定」を参照)。

静的IPアドレスを使用する場合 (DHCP が無効になっている場合):

- クロスケーブルを使用して PC に直接接続します (16ページの「イーサネット ポートを PC に直接接続する」を参照)。
- ストレート ケーブルを使用して、ネットワーク ハブ、スイッチ、またはルーター経由 (静的 IP アドレスを使用) (19ページの「ネットワーク ハブまたはスイッチを介した イーサネット ポートの接続を参照」。
- **注:** ルーター経由で接続する必要があり、IT システムが IPv6 の場合は、IT部門に具体的 なインストール手順を問い合わせてください。

Web UIへのアクセス

デフォルトで、KDS-SW2-EN7 の IP設定は DHCP です。

Web UI にアクセスするには、次の手順を実行します:

- デバイスの LAN ポートをローカル エリア ネットワークに接続します。デバイスが有効 な IPアドレスを取得できるように、ネットワークに DHCPサーバーが存在することを確 認してください。
- 2. PC をデバイスと同じネットワークに接続します。
- ブラウザにデバイスの IP アドレスを入力して Enter キーを押すと、次のウィンドウが表示されます。割り当てられたIPアドレスはLCD画面のメニューで確認できます。

Logi	n
Username	
Password	
Sign II	1

図6:ログイン ウインドウ

4. ユーザー名とパスワード(デフォルトのユーザー名/パスワード:admin/admin)を 入力し、クリックします。

サインインして、Web UI のメイン ページに入ります。

EthernetポートをPCに直接接続する

Ĭ

RJ-45コネクタ付きのクロスケーブルを使用して、KDS-SW2-EN7 のイーサネット ポートを PC のイーサネット ポートに直接接続できます。

KDS-SW2-EN7 を識別するには、このタイプの接続をお勧めします。 工場出荷時に設定されたデフォルトの IPアドレスを使用します。 KDS-SW2-EN7 をイーサネット ポートに接続した後、PC を次のように設定します:

- 1. スタート > コントロール パネル > ネットワークと共有センター をクリックします。
- 2. アダプター設定の変更 をクリックします。
- 3. デバイスへの接続に使用するネットワーク アダプターを強調表示し、この接続の設定を 変更する をクリックします。

図7 に示すように、選択したネットワーク アダプターの ローカル エリア接続のプロパ ティ ウィンドウが表示されます。

📱 Local Area Connection Properties		
Networking Sharing		
Connect using:		
Intel(R) 82579V Gigabit Network Connection		
Configure		
This connection uses the following items:		
✓ Client for Microsoft Networks ✓ Microsoft Network Monitor 3 Driver ✓ GoS Packet Scheduler ✓ File and Printer Sharing for Microsoft Networks ✓ Internet Protocol Version 6 (TCP/IPV6) ✓ Internet Protocol Version 4 (TCP/IPv6) ✓ Link-Layer Topology Discovery Mapper I/O Driver ✓ Link-Layer Topology Discovery Responder		
Install Uninstall Properties		
Description TCP/IP version 6. The latest version of the internet protocol that provides communication across diverse interconnected networks.		
OK Cancel		

図7: ローカル エリア接続のプロパティ ウィンドウ

- 4. ITシステムの要件に応じて、インターネット プロトコル バージョン 6 (TCP/IPv6) また はインターネット プロトコル バージョン 4 (TCP/IPv4) のいずれかを強調表示します。
- 5. Properties をクリックします。

図8 または図9 に示すように、ITシステムに関連する インターネット プロトコルのプロ パティ] ウィンドウが表示されます。

Internet Protocol Version 4 (TCP/IPv4) Properties			
General Alternate Configuration			
You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.			
Obtain an IP address automatica	ly.		
OUse the following IP address:			
IP address:			
Subnet mask:			
Default gateway:			
Obtain DNS server address autor	matically		
 Use the following DNS server add 	dresses:		
Preferred DNS server:			
Alternate DNS server:	• • •		
Validate settings upon exit	Advanced		
-	OK Cancel		

図8:インターネット プロトコル バージョン 4 プロパティウインドウ

Internet Protocol Version 6 (TCP/IPv6) Proper	ties 🔋 💌		
General			
You can get IPv6 settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IPv6 settings.			
Obtain an IPv6 address automatically			
O Use the following IPv6 address:			
IPv6 address:			
Subnet prefix length:			
Default gateway:			
Obtain DNS server address automatically			
Use the following DNS server addresses:			
Preferred DNS server:			
Alternate DNS server:			
Validate settings upon exit	Advanced		
	OK Cancel		

図9:インターネット プロトコル バージョン 6 プロパティウインドウ

6. 静的 IPアドレス指定に次の IPアドレスを使用する を選択し、図10 に示すように詳細を 入力します。

TCP/IPv4 の場合、IT部門から提供される 192.168.1.1~192.168.1.255 の範囲の任意の IPアドレス (192.168.1.39 を除く) を使用できます。

Internet Protocol Version 4 (TCP/IPv4)	Properties 2		
Ceneral			
You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.			
Obtain an IP address automatical	lly		
O Use the following IP address:			
IP address:	192.168.1.2		
Subnet mask:	255.255.255.0		
Default gateway:			
Obtain DNS server address automatically			
Use the following DNS server add	Iresses:		
Preferred DNS server:			
Alternate DNS server:	• • •		
Validate settings upon exit	Advanced		
OK Cancel			

図10:インターネット プロトコル プロパティウインドウ

- 7. OK をクリックします。
- 8. Close をクリックします。

ネットワークハブまたはスイッチを介したイーサネットポートの接続

KDS-SW2-EN7 のイーサネット ポートは、ネットワーク ハブのイーサネット ポートに接続す るか、RJ-45コネクタ付きのストレート ケーブルを使用して接続できます。

イーサネットポートの設定

内蔵Webページを介してイーサネット パラメータを設定できます。

KDS-SW2-EN7 内蔵Webページの使用

KDS-SW2-EN7 は、内蔵Webページを使用してリモートで操作できます。Webページ には、Webブラウザとイーサネット接続を使用してアクセスします。

接続を試みる前に:

- 15ページの「イーサネット経由での操作」の手順で行います。
- ブラウザが対応していることを確認してください。

次のオペレーティング システムと Webブラウザが対応しています:

Operating Systems	Browser
Windows 7	Firefox
	Chrome
	Safari
Windows 10	Edge
	Firefox
	Chrome
Мас	Safari
	Chrome
iOS	Safari
Android	N/A

一部の機能は、一部のモバイル デバイスのオペレーティング システムでは対応していない場合があります。

KDS-SW2-EN7 では、以下のことが可能です:

- AVルーティング パラメータの設定(22ページ)
- オートスイッチングの設定(23ページ)
- 信号損失タイムアウトの設定(25ページ)
- HDMI入力の設定(26ページ)
- 音声の設定(28ページ)
- EDID の管理(30ページ)
- 一般設定(31ページ)
- KDS-SW2-EN7 ネットワーク設定(35ページ)
- KDS-SW2-EN7 時刻と日付の設定(37ページ)
- KDS-SW2-EN7 セキュリティの設定(38ページ)
- KDS-SW2-EN7 ユーザー アクセスの設定(41ページ)
- KDS-SW2-EN7 ゲートウェイの設定(44ページ)
- KDS-SW2-EN7 ステータスの表示(47ページ)

- KDS-SW2-EN7 接続ステータスの表示(48ページ)
- KDS-SW2-EN7 詳細ステータスの表示(49ページ)
- About ページの表示(50ページ)

KDS-SW2-EN7 Webページを参照するには:

- 1. インターネットブラウザを開きます。
- 2. ブラウザのアドレス バーにデバイスの IP番号を入力します。たとえば、デフォルトの IP 番号は次のようになります:ログインウィンドウが表示されます。

e nap.////////////////////////////////////	
	Login
	Username
	Password
	Sign In

図11:ログイン ウインドウ

3. ユーザー名とパスワードを入力します (デフォルトでは、 Admin/Admin)。KDS-SW2-EN7 ページが表示されます。

KF	RAMER KDS-	-SW2-EN7 ច៍	KHAMBR
ń	Main > AV Routing		
AV	O AV Routing		
響	Input Selection	HDMI IN1	
	Channel ID	15 APPLY	
0	Channel Name	KDS-SW2-EN7-001D560E	
	Volume	0 100 80	
	Mute	On Off	
	Play/Stop	Play Stop	
	HDCP Encryption	Off	
	Resolution	No Signal	
	Aspect Ratio	N/A	
	Audio Channels	N/A	
	Audio Rate	N/A	
	Audio Format	N/A	

図12: 左側にナビゲーション リストが表示されたコントローラー アプリケーション ページ

4. 画面左側のタブをクリックして、関連する Webページにアクセスします。

AVルーティング パラメータの設定

KDS-SW2-EN7 AV ルーティング パラメータを設定します。

AV ルーティング パラメータを設定するには:

- 1. ナビゲーション ペインで、 Main > AV Routing を選択します。AVルーティングページ が表示されます (図12を参照)。
- 2. ドロップダウン ボックスから入力を選択します (HDMI IN1、USB IN2)。
- 3. 次の設定を行います:
 - Channel ID: チャネルID を設定し、APPLY をクリックします。チャネルID はデバイス入力ID (1~999) を設定します。
 - Channel Name:ストリーム名を入力し、APPLY をクリックします。 チャネル名はホスト名と同じであり (31ページの一般的なデバイス設定を参照)、最大 24文字を含めることができます。名前内には「-」と「_」を使用できます。 デフォルトでは、モデル名とMACアドレスを「-」でつないだ名前になっています。
 - Volume:スライダーを使用して、アナログ音声出力の音量を調整します (0 ~100%)。 デフォルトは 80 (0dB)、100% (12dB) で、0 はミュートです。

- Mute: すべての音声出力 (HDMI出力、アナログ音声出力、MEDIAポート) をミュート/ミュート解除します。
- Play/Stop:映像、音声、IR、RS-232、USB 信号のストリーミングを開始または停止します。
- 4. 次のストリーミング パラメータを表示します: HDCP暗号化、解像度、アスペクト比、 音声チャネル、音声ビットレート、音声フォーマット。

ルーティングパラメータが設定されました。

オートスイッチングの設定

KDS-SW2-EN7 のオートスイッチングを次の3種のいずれかに設定します:

- Last Connected (default):映像ソース入力が検出されると、デバイスは最後に接続された映像ソースに出力を切り替えます。選択した映像ソースが切断されると、自動的に他の映像ソースに切り替わります。
- Priority: HDMI IN 1、USB IN 2 の複数が映像ソースに接続されている場合、デバイスの電源がオンになった後、優先順位の高い入力ポートが選択されます。選択した映像ソースが切断されると、デバイスは他の (優先度の低い) ビデオ ソースに自動的に切り替わります。
- Manual:入力は手動で選択されます。

入力のオートスイッチング設定をするには:

1. ナビゲーション ペインで、AV を選択します。AV Routing ページの Auto Switchタブ が表示されます。

KF	KDS-SW2-EN7		đ 🔝
A	AV Settings > Auto Switch		
AV	Auto Switch Video	Audio	EDID
	Culture Made	Last Connected	_
≠ ₩	High Low HDMI IN1 USB IN2		<u> </u>
6	Signal Loss Switching Delay (sec)	10	$\hat{}$
	Signal Detection Delay (sec)	0	\diamond
	Cable Plug Delay (sec)	0	\diamond
	Cable Unplug Delay (sec)	0	
	Signal Loss Switching Power Off Delay (sec)	900	\sim
	Signal Loss Switching Manual Override Delay (sec)	10	∧ ⊻
	SAVE		

図13: AV Settings ページ – Auto Switch タブ

- 2. Switching mode の横にあるドロップダウン モードを開いて、スイッチング モードを選択します:
 - Last Connected (default): オートスイッチングは最終接続に設定されます。
 - Priority:入力を押したまま高または低にドラッグして入力優先度を設定します。優先度の高い入力が最初に切り替わります。次の例では、USB IN2 が高優先度の場所に移動する HDMI IN1 と置き換わります。



図14:オートスイッチングのプライオリティ設定

- Manual: フロント パネルのメニュー ボタン (13ページの「映像入力の選択」を参照) または内蔵Webページ (22ページの「AVルーティング パラメータの設定」を参照) を使用して入力を手動で選択します。
- スイッチングモード変更後、装置の再起動が必要な場合は、30秒以上待ってから
 行ってください。変更後30秒以内にデバイスを再起動すると、スイッチング モードの設定は失われます。

オートスイッチングモードが設定されます。

信号損失 タイムアウトの設定

KDS-SW2-EN7 では、信号が失われた場合やケーブルが切断された場合にタイムアウトを設定できます。

信号損失タイムアウトを設定するには:

- 1. ナビゲーション ペインで、AV を選択します。AV Settings ページの Auto Switchタ ブが表示されます(図13を参照)。
- 2. 次のタイムアウトを設定します(秒単位):
 - Signal Loss Switching Delay KDS-SW2-EN7 が信号損失を検出してから、別の入力 (デフォルト 10) に切り替わるまで
 - Signal Detection Delay KDS-SW2-EN7 が信号を検出してから、その入力 (デフォルト 0) に切り替わるまで
 - Cable Plug Delay KDS-SW2-EN7 が接続されたケーブルを検出してから、 その入力 (デフォルト 0) に切り替わるまで
 - Cable Unplug Delay KDS-SW2-EN7 がケーブルの切断を検出してから、別の入力 (デフォルト 0) に切り替わるまで
 - Signal Loss Switching Power Off Delay KDS-SW2-EN7 が信号損失を検出 してから 5V電源出力がオフになるまで (デフォルト 900)
 - Signal Loss Switching Manual Override Delay KDS-SW2-EN7 が手 動オーバーライドで信号損失を検出してから、別の入力に切り替わるまで(デ フォルト 10)

3. SAVE をクリックします。

信号損失タイムアウトが設定されます。

HDMI入力の設定

KDS-SW2-EN7 の映像設定を行います。

HDMI入力設定をするには:

1. ナビゲーション ペインで、**AV** を選択します。AV Routing ページの Auto Switchタブ が表示されます(図13を参照)。

KR	AMER KDS-SW2-EN7	
A	AV Settings > Video	
AV	Auto Switch Video	J Audio 💷 EDID
	Input HDCP Appearance	
₹	Input 1	On Off
	Input 2	On Off
0	ALL	ON OFF
	Image Preview	
	Maximum Bit Rate	Best Effort 🔹
	Maximum Video Frame Rate (%)	0 100
	SAVE	

図15: AV Settings ページ – Video タブ

- 2. 次の設定を行います:
 - Input HDCP Appearance: 各入力(Input 1/2)に対して、または両方を一緒 にHDCP対応を有効 (ON)/無効 (OFF) にします。

入力で HDCP をオフにすると、その非 HDCP 入力ソースを出力にルーティン グできます (たとえば、Apple デバイスの場合)。

■ Image Preview : ストリーミングされている出力映像をプレビューします。

 Maximum Bit Rate: 最大伝送帯域幅を選択します。帯域幅 (10Mbps、50Mbps、100Mbps、150Mbps、および 200Mbps) またはベストエフォート (デフォルト) を 選択すると、最高の映像品質出力の帯域幅が設定され、ピーク帯域幅は 850Mbps に 達します。

最大ビットレートを設定した後、デバイスを再起動する必要があります。

- Maximum Video Frame Rate (%): : スライダーを使用して、最大フレーム レートを比例的に設定します。100% (デフォルト) は、フレーム レートの圧縮 がゼロであることを意味します。
- 3. **SAVE** をクリックします。

HDMI入力設定がされました。

音声の設定

KDS-SW2-EN7 の音声設定をします。

音声設定をするには:

- 1. ナビゲーション ペインで、AV を選択します。 AV Settings > Auto Switch タブが 表示されます(図13を参照)。
- 2. Audio タブを選択します。 Audio タブが表示されます。

KF	RAMER KDS-SW2-EN7						
A	AV Settings > Audio						
AV	Auto Switch 🔛 Video	📕 Audio	EDID				
# #	Analog Audio Direction IN/OUT	INO OUT					
4	Audio Source Mode	Manual	•				
0	HIGH LOW HDMI Analog						
	Audio Source Selection	HDMI	•				
	Audio Connection Guard Time (sec)	10	\sim				
	Audio Destination						
	HDMI						
	LAN						
	SAVE						

図16: AV Settings ページ – Audio タブ

3. IN または OUT を選択して音声の方向を選択します。

IN を選択すると、アナログ音声ポートが入力として設定され、KDS-SW2-EN7 には 2つのオプションの音声ソースが含まれます。

OUT を選択すると、アナログ音声ポートが出力として設定され、KDS-SW2-EN7 には HDMI 音声ソースのみが含まれます。

4. 音声ソース (アナログ ポートが IN に設定されている場合は HDMI またはアナ ログ音声) 選択モードを設定します。

Last Connected : デバイスは 最後に接続された音声ソースを出 力します。	Audio Source Mode High Low HDMI Analog	Last Connected 🔻
Priority:入力をクリックして ドラッグし、優先順位を設定す ることで接続の優先順位を設定 します。デバイスは、最も優先 度の高い音声入力を出力します。	Audio Source Mode High Low HDMI Analog	Priority •
Manual:手動で音声ソース を選択します。デバイスは、 手動で選択された場合にのみ 音声ソースを切り替えます。	Audio Source Mode High Low HDMI Analog	Manual
	Audio Source Selection	HDMI 🔺
	Audio Connection Guard Time (sec)	HDMI Analog None

5. 音声信号の損失時間間隔である Audio Connection Guard Time (デフォルトは 10秒) を 設定します。

たとえば、Last ConnectedモードまたはPriorityモードで、現在選択されているアナログ 音声信号が失われると (無音になるか、プラグが抜かれたとき)、HDMI音声ソースが自動 的に選択されます。

6. SAVE をクリックします。

音声設定が設定されます。

EDID の管理

必要に応じて、EDID を選択し、ロックすることができます。

EDIDを管理するには:

- 1. ナビゲーション ペインで、 **AV** を選択します。AV Routingページの Auto Switchタブ が表示されます (図13を参照)。
- 2. EDID タブを選択します。EDID Management タブが表示されます。

KF	RAMER	KDS-SW2-EN7			
A	AV Settings > EDI	D Management			
AV	Auto Switch	Video	🦨 Audio	EDID	
¢:					
₹	EDID Lock		on Off		
4	EDID Mode		Default EDID	•	
Ð					

図17: AV Settings ページ - EDID Management タブ

- 3. EDIDロックを設定します:
 - ON 最後に取得したEDIDをロックします。
 - OFF ロックを解除して新しい EDID を取得します。

4. ドロップダウン ボックスから EDID モードを選択します:

() EDIDモードを選択する前に、EDIDロックを**OFF**に設定してください。

Default Mode : デフォルトの組み込み EDIDに設定されます。	EDID Lock	On Off
	EDID Mode	Default EDID 🔹
Passthrough:特定のデコーダーから EDIDを取得します: ・ デコーダーのIPアドレスを入力します。 ・ READをクリックします。 EDIDはデコーダーからエンコーダーにコ ピーされます。	EDID Lock EDID Mode Read EDID from Specific Decoder EDID Lock EDID Mode Read EDID from Specific Decoder	On Off Passthrough • 0.0.d\0 READ On Off Passthrough • 192.168.1.40 READ
 Custom:外部ソースから EDIDファイ ルをダウンロードします。 リストから EDIDを削除するには: リストから EDIDファイルを選択します。 REMOVEをクリックします。 EDIDファイルをアップロードするには: UPLOADをクリックします。 開いたウィンドウから EDIDファイル を選択します。 UPLOADをクリックします。 EDIDファイルがりストに追加されます。 ファイルを選択し、UPLOADをク リックします。 	EDID Mode User EDID 最大8個の EDIDフ ファイルがロードさ ファイルを削除する default.bin は削除 工場出荷時設定にリ ルトのリストに戻り	Custom ・ default.bin UPLOAD 4K30_2.0CH_SDR.bin REMOVE 1080P50_Dolby_DTS7.1_SDR.bin REMOVE 720P50_2.0CH_SDR.bin APPLY 720P50_Dolby_DTS7.1_SDR.bin APPLY 720P50_Dolby_DTS7.1_SDR.bin Comparison 720P50_Dolby_DTS7.1_SDR.bin APPLY 720P50_Dolby_DTS7.1_SDR.bin Comparison 720P50_Dolby_DTS7.1_SDR.bin Comparison

EDIDは管理されます。

-般設定

チャネルID名と同じホスト名を変更し (22ページの「AVルーティング パラメータの設定」を参照)、デバイス機種、H/Wリリース バージョン、シリアル番号、MACアドレスを表示します。

Windows OS の DNS名の長さは 10文字以内である必要があり、数字のみを含めることはできません。

デバイスには MACアドレスが 1つしかありませんが、1つの MACアドレスを使用して、
 2つのサブネット内の 2つのイーサネットポートに対して最大2つの個別の IPアドレス
 を設定できます。(35ページの「KDS-SW2-EN7 ネットワーク設定」を参照)。

KDS-SW2-EN7 では、General Settings タブから次の操作ができます:

- フロントパネルのロック/ロック解除(33ページ)
- デバイス設定のインポート/エクスポート (34ページ)
- デバイスの検索(34ページ)
- ファームウェア バージョンの管理(34ページ)
- デバイスの再起動またはリセット(34ページ)

フロントパネルのロック/ロック解除

フロントパネルをロック/ロック解除するには:

1. ナビゲーションペインで、 **Device Settings**を選択します。Device Settings ページ の General タブが表示されます。

KR	AMER	KDS-SW2-E	N7 🗗 🚺
A	Device Settings >	General	
AV	General	🕲 Network	📸 Time and Date 😯 Security 🍰 Users
* #	General Prefe	rences	
¥	Host Name		KDS-SW2-EN7-001D5608 APPLY
4	Device Model		KDS-SW2-EN7
	Device H/W Re	elease	v0.2
v	MAC Address		00-1D-56-08-09-F2
	Serial Number	r.	11210005900003
	Front Panel Lo	ock	On Off
	Import/Export	t Device Settings	All including IP IMPORT EXPORT
	Locate Device		APPLY
	Version		
	Firmware Vers	sion	V0.8.6 UPGRADE
	Last Upgrade	Date/Time	01-01-1970,06:09:39
	Firmware Star	ndby Version	v0.8.5 ROLLBACK
	Device Reset		RESTART

図18: Device Settings - General タブ

- 2. デバイスのフロントパネルをロック/ロック解除します:
 - On をクリックすると、フロントパネルのボタンがロックされ、ナビゲーションボ タンによるデバイス制御が無効になります。
 - フロントパネルボタンのロックを解除し、LCD画面とナビゲーションボタンを 介してフロントパネルからデバイス制御を有効にするには、Off をクリックしま す (12ページの「メニューナビゲーションボタンの使用」を参照)。

フロントパネルのボタンがロック/ロック解除されます。

デバイス設定のインポート/エクスポート

デバイスとの間でエクスポート/インポートするデバイス設定のタイプを選択できます。

デバイス設定をインポートまたはエクスポートするには:

- 1. ナビゲーションペインで、 **Device Settings**を選択します。Device Settings ページ の General タブが表示されます (図18を参照)。
- 2. General Device Settings ページで、インポートまたはエクスポートする設定の種類を選択します。
 - All without IP IPアドレスを除くすべての設定を選択します
 - Streams 映像、音声、IR、CEC、RS-232 設定を選択します
 - AV Settings Only EDID、映像、音声設定のオートスイッチングのみを選択します。
 - All including IP IPアドレスを含むすべての設定を選択します。
- インポートする場合は、次の手順を実行します (エクスポートする場合は、次の手順に進みます):
 - IMPORT をクリックします。開いているファイルが表示されます。
 - ■インポートするファイル (settings.tar.gz) を選択します。
 - Open をクリックしてファイルをインポートします。
- 設定をエクスポートするには、EXPORT をクリックします。
 設定ファイル(settings.tar.gz)が作成されます。

設定ファイルをインポート/エクスポートします。

デバイスの検索

システム内の特定のデバイスを見つけます。

デバイスを見つけるには:

- 1. ナビゲーションペインで、 **Device Settings**を選択します。Device Settings ページの General タブが表示されます (図18を参照)。
- 2. General Device Settingsページで、Locate Deviceの横にある **APPLY** をクリックします。 特定されたデバイスのフロントパネル上のNET および ON LED が 60秒間点滅します。

デバイスはシステム内にあります。

ファームウェアのバージョン管理

ファームウェアをアップグレードするには、最後のアップグレードの日付を確認するか、問題が発生した場合には以前のファームウェア リビジョンにロールバックします。「ファームウェアのアップグレード (56ページ)」を参照してください。



ROLLBACKをクリックすると、以前の FW バージョンに更新します。

デバイスの再起動またはリセット

RESTART をクリックしてデバイスを再起動し、**RESET**をクリックしてデバイスの 工場出荷時のデフォルト設定を復元します。 KDS-SW2-EN7 ネットワーク設定

このデバイスでは、次の設定ができます:

- インターフェイスの設定(35ページ)
- IPキャスティング モード設定と TTL の設定(36ページ)
- TCP/UDP ポートの管理(36ページ)

インターフェイスの設定

各イーサネット ポートのインターフェイス設定を設定します。

インターフェース設定を設定するには:

- 1. ナビゲーションペインで、**Device Settings** を選択します。Device Settings ページ の General タブが表示されます (図18を参照)。
- 2. Network タブを選択します。Network タブが表示されます。

KF	RAMER KDS-S	W2-EN7					
A	Device Settings > Network						
AV	🛞 General	Network	🐻 Time ar	nd Date	Security	🎝 Us	ers
*	Interface Settings						
+	Service Name Port	802.1Q	VLAN Tag DH	ICP	IP Address	Mask Address	Gateway Address
	Stream Media	N/A	N/A	On Off	192.168.1.55	255.255.0.0	0.0.0.0
0	P3K & Gateway Media	▼ On Off	2	On Off	192.168.1.55	255.255.0.0	0.0.0.0
	IP Casting Mode	O UnicastMulticast					
	TTL	64	$\stackrel{\wedge}{\searrow}$				
	TCP/UDP Management						
	TCP Port	5000	$\hat{}$				
	UDP Port	50000	\bigcirc				
	SAVE						

図19: Device Settings ページ – Network タブ

- 3. Mediaポート ストリーム サービス パラメータを設定します:
 - DHCP mode DHCP を On(デフォルト) または Offに設定します。
 - IP Address DHCPモードがオフに設定されている場合、デバイスは静的IPアドレスを 使用します。これには、マスクとゲートウェイのアドレスを入力する必要があります。
 - Mask Address サブネットマスクを入力します。

• Gateway address - ゲートウェイアドレスを入力します。

(👔) ストリーム サービスは Mediaポートにのみ割り当てられることに注意してください。

- 4. P3K およびゲートウェイ サービスのパラメータを設定します:
 - Port P3K およびゲートウェイ ポートを Media (デフォルト) または Serviceに設定 します。

P3K およびゲートウェイは Mediaポートまたは Serviceポートに割り当てることができますが、DHCP が有効で 802.1Q が無効な状態で Mediaポートに割り当てられた場合、ストリーム サービスと同じ IPアドレスを共有します。

それ以外の場合は、ストリーム サービスとは異なるサブネットを持つ別の IPアドレス を割り当てる必要があります。

- 802.1Q P3K およびゲートウェイ サービスの 802.1Q 標準を有効にするには On を クリックし、無効にするには Off (デフォルト) をクリックします。
 Mediaポートが選択され、P3K およびゲートウェイに対して 802.1Q が無効になっている 場合、P3K およびゲートウェイの VLANタグと IP設定は両方とも使用できません。
- VLAN Tag 整数を入力して、P3K およびゲートウェイ サービスに対する VLAN ID (2~4093)を指定します。こうすることで、P3K ゲートウェイ サービスの VLAN パ ケットにネットワークのタグが付けられます。
- DHCP mode DHCP を On(デフォルト) または Offオフに設定します。
- IP Address DHCPモードがオフに設定されている場合、デバイスは静的IPアドレスを使用します。これには、マスクとゲートウェイのアドレスを入力する必要があります。
- Mask Address サブネットマスクを入力します。
- Gateway address ゲートウェイアドレスを入力します。

IPインターフェースのパラメーターが設定されます。

IPキャスティング モード設定と TTL の設定

以下を設定します:

- Unicast または Multicast (デフォルト) モードをチェックします。
- TTL を設定して、コンピュータ/ネットワーク内のデータの有効期間を設定し、IPパケットがネットワーク上で際限なく伝播するのを防ぎます (デフォルトは 64)。

IPキャスティングと TTL が設定されます。

TCP/UDPポートの管理

TCP/UDP ポートを管理するには:

- 1. ナビゲーションペインで、**Device Settings**を選択します。Device Settings ページの Generalタブが表示されます (図18を参照)。
- 2. Network タブを選択します。Network タブが開きます。
- 3. TCP (デフォルト、5000) および UDP (デフォルト、50000) ポートを設定します。

TCP/UDP ポートが設定されます。
KDS-SW2-EN7 時刻と日付の設定

デバイスの時刻と日付を世界中のサーバーと同期できます。

デバイスの時刻と日付をサーバーに同期するには:

- 1. ナビゲーションペインで、**Device Settings** をクリックします。Device Settings ページの General タブが表示されます (図18を参照)。
- 2. Time and Date タブを選択します。Time and Date タブが表示されます。

KR	AMER	KDS-SW2-	EN7		
A	Device Settings > 7	Time and Date	8		
AV	8 General	🕲 Network	🐻 Time and Date	Security	🎝 Users
₹	Date		i 10-01-1970		
	Time		O 01:24:26		
	Time Zone		+03:00 Baghdad/Kuwa 🔻		
•	NTP Time Serve	er Usage	Yes No		
	NTP Time Serve	er Address	163.152.23.170		
	NTP Daily Sync	Hour	11 🔻		
	SAVE				

図20: Device Settings ページ – Time and Date タブ

3. NTP Time Server Usage の横にある YES をクリックして、タイム サーバー

(NTP) を使用します。ネットワークフィールドが有効になります。

- 4. サーバー情報を入力します:
 - サーバーアドレスを入力します
 - 毎日の同期時刻を設定します
- 5. SAVE をクリックします。
- デバイスの日付と時刻は、入力されたサーバー アドレスと同期されます。

KDS-SW2-EN7 セキュリティの設定

Security タブでは、不正アクセスを制限するためのデバイス 802.1X 認証と、ネット ワーク上で認証されたピアへの暗号化された接続を確立するための HTTPS/TLS を設定 します。

このセクションでは、次の機能について説明します:

- HTTPS の設定(38ページ)
- 802.1X 認証の設定(39ページ)

(†) ネットワーク アクセス認証については、IT管理者にお問い合わせください。

HTTPS の設定

HTTPS を設定するには:

- ナビゲーションペインで、Device Settings をクリックします。Device Settings ページの Generalタブが表示されます (図18を参照)。
- 2. Security タブを選択します。Security タブが表示されます。

KF	KRAMER KDS-SW2-EN7						
A	Device Settings > Security						
AV	응 General 🛞 Network 👼 Time and Date 😯 Security 🔒	រ Users					
2	HTTDS						
₹	Server On Off						
	Internal Certificate						
6	Server Certificate APPLY & REBOOT						
	802.1x IEEE 802.1x Authentication On Off						
	Authentication Method						
	O PEAP-MSCHAP V2						
	EAP-TLS						
	Username user@example.org						
	Client Certificate						
	Private Key client.key						
	Private Key Password						
	Server Certificate On Off						
	APPLY						

図21: Device Settings ページ - Security タブ

- 3. HTTPSサーバーの場合、On をクリックして HTTPS認証サービスを有効にするか (デフォルト)、Off をクリックして HTTPS認証を無効にします。
- 4. Onに設定した場合は、次のいずれかの設定をチェックします:
 - Internal Certificate 認証には工場出荷時のデフォルトの証明書を使用します。
 - Server Certificate 認証のためにサーバーから証明書を送信します。これを行うには、
 をクリックして証明書をアップロードします。秘密キーのパスワード (IT管理者によって割り当てられたもの)を入力し、APPLY & REBOOT をクリックします。

0	nternal Certificate		
S	erver Certificate		
L	Jpload Certificate	kramer_tls.pem	¢
P	Private Key Password		
	APPLY & REBOOT		

図22 : Security タブ - サーバー証明書

5. APPLY をクリックします。

HTTPSが設定されました。

802.1X 認証の設定

セキュリティを設定するには:

- 1. ナビゲーションペインで、**Device Settings** をクリックします。Device Settings ページ の General タブが表示されます (図18を参照)。
- 2. Security タブを選択します。Security タブが表示されます (図21を参照)。
- 3. 802.1X 認証の場合、ON をクリックして 802.1X 認証サービスを有効にします。 802.1X は、ポートと MACアドレスに基づく認証に対応します。
- 4. ON に設定した場合は、次のいずれかの設定をチェックしてください:
 - PEAP-MSCHAP V2 この認証方法を使用するには、ユーザー名 (ユーザー名内の 「_」と「-」文字を含む最大24文字の英数字) とパスワード (最大24文字の ASCII文 字) を入力します:

802.1>	9			
IEEE 8	02.1x Authentication	On	Off	
Au	thentication Method			
۲	PEAP-MSCHAP V2			
	Username			
	Password			

図23: Security タブ - EAP-MSCHAP V2 認証

EAP-TLS - 認証のためにサーバーから証明書を送信します。これを行うには、ユーザー名を入力し、 か をクリックして証明書とキーをアップロードし、秘密キーのパスワード (IT管理者によって割り当てられた)を入力します。
 サーバー証明書を On に設定します。

802.1x	0		
IEEE 8	02.1x Authentication	On Off	
Aut	thentication Method		
0	PEAP-MSCHAP V2		
۲	EAP-TLS		
	Username	<u>1</u> 0	_
	Client Certificate		4
	Private Key	1 <mark>-3</mark>	Ŷ
	Private Key Password		
Ser	ver Certificate	On Off	

図24: EAP-TLS - 証明書とパスワード

5. APPLY をクリックします。

セキュリティが設定されました。

KDS-SW2-EN7 ユーザー アクセスの設定

Users タブでは、デバイスのセキュリティを有効化し、ログオン認証の詳細を設定できま す。デバイスのセキュリティがオンになっている場合、Webページにアクセスするには、 最初に操作ページにアクセスするときに認証が必要です。デフォルトのパスワードは admin です。デフォルトでは、セキュリティは無効になっています。

ユーザーアクセスの有効化

セキュリティを有効にするには:

- 1. ナビゲーションペインで、**Device Settings** をクリックします。Device Settings ページの Generalタブが表示されます (図18を参照)。
- 2. Users タブを選択します。

KF	RAMER	KDS-SW2-EN7			
A	M Device Settings >	Users			
AV	88 General	🕲 Network	📷 Time and Date	Security	20 Users
¢ "	Browned				
#	Password				
	Security Statu	IS	On Off		
	Old Password	ſ		CHANGE	
6	New Passwor	d			
	Confirm Pass	word			
	Inactivity auto	p-logout time (min)	10	APPLY	

図25 : Device Settings ページ – Users タブ

3. Security Status の横にある **On** をクリックして、ユーザー認証を有効にします (デ フォルトではオフ)。次のメッセージが表示されます。



図26: Security タブ - Security Status

4. **PROCEED** をクリックします。Webページが更新され、パスワード フィールドが表示されます。

セキュリティが有効になり、アクセスには認証が必要です。

ユーザーアクセスの無効化

セキュリティを無効にするには:

- 1. ナビゲーションペインで、**Device Settings** をクリックします。Device Settings ページの General タブが表示されます (図18を参照)。
- 2. Usersタブを選択します (図25を参照)。

KF	RAMER KDS-EN7			
A	Device Settings > Users			
AV	😸 General 🛞 Network	🐻 Time and Date 🛛 😯	Security	🎝 Users
*	Password			
₹	Security Status	On Off		
	New Password		CHANGE	
i	Confirm Password			
	Inactivity auto-logout time (min)	10	APPLY	

図27: Device Settings – Users タブ

3. Webページ認証を無効にするには、Security Status の横にある Off をクリックします。 次のメッセージが表示されます。

Security Status	
Would you like to disable security?	
This action will disable the authentication.	
Do you want to proceed?	
Current password	
PROCEED	CANCEL

図28 : Security タブ - Security Status

4. 現在のパスワードを入力します。

5. PROCEED をクリックします。

セキュリティが無効になりました。

ログアウト

非アクティブ自動ログアウト時間 (分単位) を設定することで、ページが自動的にログ アウトするまでの非アクティブ時間を設定できます。

パスワードの変更

パスワードを変更するには:

- 1. ナビゲーションペインで、**Device Settings** をクリックします。Device Settings ページの General タブが表示されます (図18を参照)。
- 2. Users タブを選択します (下の画像を参照)。
- 3. セキュリティステータスを**On**に設定します。

KR	RAMER KDS-SW2-EN7		
A	Device Settings > Users		
AV	🛞 General 🏐 Network 🗖	Time and Date 🛛 Security	20 Users
	Password		
₹	Security Status	On Off	
	Old Password		CHANGE
•	New Password		
	Confirm Password		
	Inactivity auto-logout time (min)	10	APPLY

図29: Device Settings – Users タブ

- 4. Old Password の横に古いパスワードを入力します。
- 5. New Password の横に新しいパスワードを入力します。

新しいパスワードには、少なくとも1つの数字、1つの特殊文字(スペースまたはカンマを除く)、大文字と小文字を1つずつ含める必要があり、長さは8~24文字にする必要があります。

- 6. Confirm Password の横に、新しいパスワードを再度入力します。
- 7. CHANGE をクリックします。

パスワードが変更されました。

__________KDS-SW2-EN7 ゲートウェイの設定

KDS-SW2-EN7 では、CEC、RS-232、IR のゲートウェイ制御の設定が可能です。 次の機能を実行できます:

- CECの設定(44ページ)
- RS-232の設定(45ページ)
- IRの設定(46ページ)

CECの設定

KDS-SW2-EN7 は、LAN で接続された制御システムから KDS-SW2-EN7 内蔵制御ゲートウェイを介して CEC コマンドを送信し、KDS-SW2-EN7 HDMI出力または入力に接続されている CEC対応デバイスを制御します。

CECゲートウェイを設定するには:

1. ナビゲーション ペインで、Control をクリックします。Control>Settingsページが表示 されます。

KF	RAMER KDS-S	W2-EN7			
A	Control > Settings				
AV	Settings				
	CEC Settings				
₹	Gateway	Enable Disable	2		
	Gateway HDMI Port	HDMI Input	•		
6	Command			SEND	
	Responses	Command			

図30 : Control > Settings ページ – CEC Settings

- 2. Enable をクリックして CECゲートウェイを有効にするか、Disable をクリックします。
- 3. CECコマンドの送信先となる HDMIポートをドロップダウン リストから選択します:
 - HDMI Input (HDMI IN)
 - HDMI Loop Through (HDMI OUT)
- CECコマンドを入力します。
 CECコマンドは 16進形式 (最大32桁の16進数)を使用します。
- 5. SEND をクリックします。

6. CEC対応デバイスの応答を表示します。

CECゲートウェイが設定されました。

RS-232の設定

KDS-SW2-EN7は、LAN で接続された制御システムから、KDS-SW2-EN7 内蔵制御ゲートウェイを介して、KDS-SW2-EN7 RS-232 ポートに接続されているデバイスに RS-232 コマンドを送信します。

RS-232 ゲートウェイを設定するには:

1. ナビゲーション ペインで、 **Control** をクリックします。Control>Settings ページが表示されます (図30を参照)。

RS-232 Setting	s	
Gateway	Enable D	isable
Gateway Port	5002	$\hat{}$
Baud Rate	115200	•
Data Bits	8	•
Parity	None	•
Stop Bits	1	•
SAVE		

図44:Control > Settings ページ – RS-232 Settings

- 2. Enable をクリックして RS-232 ゲートウェイを有効にするか、Disable をクリック します。
- 3. RS-232 ゲートウェイ ポート (デフォルトでは 5001) を設定します。
- 4. ボーレートを入力します:9600、19200、38400、57600、115200 (デフォルト)
- 5. データ ビットを入力します:5、6、7、8 (デフォルト)
- 6. パリティを入力します: None (デフォルト)、 OddまたはEven
- 7. ストップ ビットを入力します:1(デフォルト)または2
- 8. SAVE をクリックします。

RS-232 ゲートウェイが設定されました。

KDS-SW2-EN7 は、LAN で接続された制御システムから、KDS-SW2-EN7 内蔵制御ゲート ウェイを介して、IR接続デバイスに IRコマンドを送信します。

RS-232 ゲートウェイを設定するには:

1. ナビゲーション ペインで、 **Control** をクリックします。Control>Settings ページが表示されます。

IR Settings		
IR Direction IN/OUT	0	IN
	۲	OUT

図32 : Control > Settings ページ – IR Settings

- 2. IR 方向を設定します:
 - IN IR ポートを、IR受信器ケーブルに接続される入力ポートとして構成します。
 - OUT IR ポートを、IRエミッタ ケーブルに接続される出力ポートとして設定します。

IRゲートウェイが設定されました。

KDS-SW2-EN7 ステータスの表示

デバイスのステータスを表示します。

デバイスのステータスを表示するには:

1.ナビゲーションペインで、Diagnostics をクリックします。Status タブが表示されます。

KF		DS-SW2-EN7	
A	Diagnostics > Status		
AV	₩ Status	Connections	Advanced
¢	Device Status		
₹	Heat level	 37 °C Normal 	
	Input status HDMI IN1	Off	
•	USB IN2	Off	
	Output status		
	HDMI OUT	Off	
	LAN	Off	

図33: Diagnostics – Status タブ

- 2. デバイスのステータスを表示します:
 - Active: 通常動作(緑色の表示)の場合
 - Standby: デバイスの電源がオフ、起動中、またはスタンバイモード(黄色の表示)のとき。
- 3. デバイスの内部温度ステータスを表示します:
 - Normal: 温度が 45°C未満の場合(緑色の表示)
 - High: 温度が 45℃~60℃の場合(オレンジ色の表示)
 - **Overheat**:温度が 60°C を超える場合(赤色の表示)
- 4. 各入力のステータスを表示します:
 - On:入力に有効な信号があり、信号を送信している場合に点灯(緑色の表示)
 - Off:入力が接続されていない場合、または有効な信号がない場合(灰色の表示)
- 5. HDMI OUT と LAN出力のステータスを表示します:
 - On: 出力が信号を送信しているとき(緑色の表示)
 - Off: 出力に信号出力がない場合(灰色表示)
 - デバイスのステータスが表示されます。

KDS-SW2-EN7 接続ステータスの表示

接続情報のステータスを表示します。

接続ステータスを表示するには:

- 1. ナビゲーションペインで、**Diagnostics** をクリックします。Status タブが表示されます (図33を参照)。
- 2. Connections タブを選択します。

KF	RAMER KDS	-SW2-EN7		
A	Diagnostics > Connection	ns		
AV	N Status	Connections	Advanced	
•	Connection Protocol	Client ID Address	Client Bort	Davise Port
0.00	Connection Protocol	Client IP Address	Client Port	Device Port
ŧ	ТСР	192.168.1.10	63352	80
	ТСР	192.168.1.45	38310	5000
	TCP	192.168.1.45	53752	5001
U	ТСР	192.168.1.10	52229	80

図34: Diagnostics – Status タブ

3. プロトコル タイプ、クライアント IPアドレスとポート、デバイス ポートなどの接続ス テータスを表示します。

接続のステータスが表示されます。

KDS-SW2-EN7 詳細ステータスの表示

システム ログとゲートウェイ メッセージ カウンタを表示します。

ログとメッセージカウンターを表示するには:

- 1. ナビゲーションペインで、**Diagnostics** をクリックします。Status タブが表示されます (図33を参照)。
- 2. Advancedタブを選択します。

KF	AMER	KDS-SW2-EN7	
A	Diagnostics > Adv	anced	
AV	🔊 Status	Connections	Advanced
¢ ii	Active Syslog	On	Off
₹	Log	VIEW	EXPORT
	Gateway Mess	ages Counter	
0		Send	Receive
	RS-232	0	0
	CEC	0	0
	IR	0	0

図35: Diagnostics - Advanced タブ

- 3. Syslog アクティビティ(Active Syslog)を設定します:
 - On: デバイスのシステム ログをローカルで有効にします。
 - Off (default): デバイスのシステム ログをローカルで無効にします。
- 4. 必要に応じて、VIEW をクリックしてシステム ログを表示します。
- 5. EXPORT をクリックして、システム ログ (.txt) をローカル PC にエクスポートします。
- 6. 送受信されたゲートウェイ メッセージを表示します。

システムログとカウンタが表示されます。

About ページの表示

About ページで、Webページのハードウェア リリース、ファームウェア バージョン、および Kramer Electronics Ltd の詳細を表示します。

KF	RAMER KDS-SW2-EN7
A	About
AV	🚯 General Info
•	
	Device Model
*	KDS-SW2-EN7
	Device HW Release
	v0.2
0	Firmware Version
	v0.8.6
	Kramer Electronics Ltd. 3 Am VeOlamo St.
	Jerusalem, Israel, 9546303
	Tel: +972-73-2650200
	Fax: +972-2-6535369
	Email: info@kramerav.com
	Web: KramerAV.com
	© 2022 - Kramer Electronics Ltd. all rights reserved.

図36 : About ページ



このセクションでは、OSDメニューと高速スイッチング設定を使用した KVMローミングについて説明します。

デバイスを適切に設定するには:

- 1. システムデバイス (KDS-SW2-EN7 および KDS-DEC7) と PC がすべて同じ ネットワークに接続されていることを確認してください。
- 2. システム内のすべてのデバイスに電源を供給します。
- 3. ネットワーク スイッチを次のように設定します:
 - Jumbo Frames On (最低 8000 bytes)
 - IGMP Snooping On
 - IGMP Querier On
 - IGMP Immediate/Fast Leave On
 - Unregistered Multicast Filtering On
- 4. PC のサブネットワークがシステムデバイスと同じであることを確認 してください。デバイスが設定されています。

次のアクションを実行します:

- KVMローミングの設定(52ページ)
- 高速スイッチング設定(55ページ)

KVMローミングの設定

KVMローミング モードでは、キーボードとマウスに接続された 1台のマスター KDS-DEC7デコーダーから USB経由で複数のホストと対話できます。たとえば、次のレイア ウトを参照してください。



KVMローミングを設定するには:

- 1. エンコーダおよびデコーダーの Webページにアクセスします。
- 2. 各エンコーダーについて、AV Routing ページで入力を選択し、一意のチャネルIDと名 称を設定します。

KF	RAMER KD	S-SW2-EN7		
A	Main > AV Routing			
AV	AV Routing			
* "				
±	Input Selection	HDMI IN1	•	
Ŧ	Channel ID	15	$\hat{\mathbf{x}}$	APPLY
A	Channel Name	KDS-SW2-EN7-00	1D5608	APPLY

図38: KDS-SW2-EN7 チャネルIDと名称設定

3. 各デコーダーについて、AV Routing ページで、エンコーダーとデコーダーをペアに します。たとえば、ENC1 を DEC1 と、ENC2 を DEC2 と、ENC3 を DEC3 と、 ENC4 を DEC4 とペアにします。

KF	RAMER KDS-DEC7			
A	Main > AV Routing			
AV	🗘 AV Routing 🖵 OSD Config	guration 🚓 KVM Combiner	III Video Wall	overlay
혦				
±	Input Selection	STREAM 👻		
+	Preview	Channel ID	Channel Name	
	the second	#2 🔻	ch_002	•
0				

図39: KDS-DEC7 チャネルIDと名称設定

4. キーボードとマウスが接続されている Decoder の場合は、Main>KVM Combiner ページ を開きます。

KRA	MER KDS-DE	C7
ft 🗈	lain > KVM Combiner	
AV \$	AV Routing 🖓 OSD	Configuration 🚓 KVM Combiner III Video Wall 🖧 Overlay
	USB over IP	Optimized for KVM USB Emulation
	Request Time Out (sec)	10
0	Roaming Master/Slave	 Master Slave
	SAVE	

図40: KVMローミング用のマスター デコーダーの設定

5. デコーダーをマスターとして設定します。デコーダー設定のセットアップが表示されます。

行番号と列番号を物理的に設定されているとおりに設定します。
 たとえば、デコーダー設定が 2x2ビデオ ウォールの場合は、行を2に、列を2に設定します。



図41:デコーダー設定の設定

7. マスター デコーダーの物理的な位置 (この例では左下のサイズ) をチェックします。 MACアドレスは自動で入力されます。



図42:マスターMACアドレスの設定

- 8. 物理設定に従って、他の(スレーブ)デコーダーの MACアドレスを手動で入力しま す。
- 9. 「スレーブ」をクリックします。

KVMローミングが設定されました。

高速スイッチング設定

このセクションでは、高速スイッチングを設定する方法について説明します。

高速スイッチングをするには:

- 1. エンコーダーおよびデコーダーの Webページにアクセスします。
- 2. 各エンコーダーの AV Routing ページで、一意のチャネルID と名称を設定します。

KF	RAMER	KDS-SW2-EN7		
A	Main > AV Routing	T D		
AV	🏩 AV Routing			
* "				
Ŧ	Input Selection	HDMI IN1	•	
4	Channel ID	15	$\hat{}$	APPLY
-	Channel Name	KDS-SW2-E	N7-001D5608	APPLY

図43: KDS-SW2-EN7 デバイスでのチャネルID と名称の設定

- システム内のすべてのエンコーダーが同じ設定を共有していることを確認してください。
 たとえば、エンコーダー1とエンコーダー2の間で高速切り替えを構成するには、入力
 ソースで次の設定が同一である必要があります:
 - HDCP 設定
 - 解像度とリフレッシュレート
- 4. デコーダーで、AV Settings>Video ページの最大解像度を同じに設定します。 高速スイッチングが設定されました。

ファームウェアのアップグレード

ファームウェアをアップグレードし、最後のアップグレードの日付を表示したり、問題が発生 した場合には以前のファームウェア リビジョンにロールバックしたりできます。

() ROLLBACK をクリックすると、以前の FWバージョンに更新します。



 デバイスのファームウェアのバージョンが 0.6.3 より低い場合は、Kramer テクニカル
 サポート チーム (<u>support@kramerav.com</u>)に問い合わせるか、Webサイト (<u>k.kramerav.com/support/downloads.asp</u>.)にアクセスしてください。

ファームウェアをアップグレードするには:

- 1. ナビゲーションペインで、**Device Settings**を選択します。Device Settings ページの General タブが表示されます。
- 2. Firmware Version の横にある **UPGRADE** をクリックします。Open ウィンドウが表示されます。

v0.8.6	UPGRADE
01-01-1970,06:09:39	
v0.8.5	ROLLBACK
	v0.8.6 01-01-1970,06:09:39 v0.8.5

図44:General タブ -ファームウェアのアップグレード

- 3. FWファイルを選択し、**Open** をクリックします。FWアップグレードポップアップ ウィンドウが表示されます。アップグレードが完了するまで待ちます。
- 4. 完了したら、Webページを更新してログインします。

ファームウェアのアップグレードが完了しました。

仕様

KDS-SW2-EN7 仕様

入力	1 HDMI	HDMIコネクタ
	1 USB	USB-Cコネクタ
出力	1 HDMI	HDMIコネクタ
ポート	2 Ethernet	RJ-45コネクタ
	1バランス音声	5ピン ターミナルブロック コネクタ
	1 RS-232	3ピン ターミナルブロック コネクタ
	1 IR	Φ3.5mm TRSコネクタ
	1 USB Host	USB-Bコネクタ
	2 USB ポート	USB-Aコネクタ
映像	圧縮標準	JPEGベース、独自ストリーム
	最大解像度	4K@60Hz (4:2:0) および 4K@30 (4:4:4)
音声	対応フォーマット	LPCM:LPCM 最大7.1/24bit/192kHz、
		Dolby Atmos [™] , Dolby TrueHD, Dolby Digital
		Plus [™] , Dolby Digital EX, Dolby Digital 5.1,
		Dolby Digital 2/0 Surround, Dolby Digital 2/0,
		DIS-HD Master Audio ^{IM} , DIS-HD,
		DTS Distrete 0.1, DTS-ES Matrix 0.1,
		12000000000000000000000000000000000000
電源	PoE (Power over Ethernet)	動作電圧範囲 37V~57V、最大パワー19W(USBが
	· · · ·	フル負荷時)
	オプションの電源アダプター	24V DC、5A、USB-Cによる充電時の最大電力
		68W
環境条件		0~+45°C
	保存温度	-20~+70°C
	湿度	10~90%、RHL、結露なき事
		10% to 90%, RHL non-condensing
法規制準拠	安全	CE V EC
	環境	RoHs、WEEE
筐体	サイズ	Mega Tool Deep
	_ 素材	アルミニウム
	Cooling	Convection Ventilation
寸法	製品寸法	18.90 x 14.50 x 2.76cm(幅、奥行き、高さ)
		31.20 x 17.90 x 7.60cm(幅、奥行き、高さ)
重量	製品重量	約 0.7kg
	梱包重量	約 0.9kg
仕様は予告なく変更	きする場合があります。 最新の仕様は v	www.kramerav.com にて確認してください。

デフォルト通信パラメータ

プロトコル3000

例(stop encoder decoder activity: エンコーダー デコーダー 動作を停止) #KDS-ACTION 0<CR>

Ethernet

IP設定を工場出荷時の値にリセットするには: Menu->Setup -> Factory Reset-> Enterを押して確認します

DHCP	Default
IP Address:	192.168.1.39
Subnet mask:	255.255.255.0
Default gateway:	192.168.1.254
TCP Port #:	5000
UDP Port #:	50000
Default username:	admin
Default password:	admin
完全な工場出荷時設定への	リセット
内蔵Webページ	Device Settings > General > RESET
フロントパネルボタン	リアパネルの RESETボタンを 10秒間押します

デフォルト EDID

Block 0

	0	1	2	3	4	5	6	7	8	9	A	в	с	D	E	F
00	00	FF	FF	FF	FF	FF	FF	00	2D	B2	00	00	01	00	00	00
10	25	1F	01	03	80	59	32	78	0A	EE	91	A3	54	4C	99	26
20	0F	50	54	21	08	00	81	00	A9	C0	01	01	01	01	01	01
30	01	01	01	01	01	01	02	3A	80	D0	72	38	2D	40	10	2C
40	45	80	20	C2	31	00	00	1E	E7	31	80	A0	70	B0	1D	40
50	30	20	36	00	59	32	00	00	00	1A	00	00	00	F7	00	0A
60	00	4A	A2	24	02	00	00	00	00	00	00	00	00	00	00	FC
70	00	4B	44	53	37	20	45	6E	63	6F	64	65	72	0A	01	36

Block Type: Base EDID Checksum verified

Version 1 header verified

Manufacturer: KMR Product Code: 0 (0000h) Serial #: 1 (00000001h) Date of Manufacture: Week 37 of 2021 EDID Version 1, Revision 3 Number of additional blocks: 1

Basic Display Parameters and Features • Video Input Definition: Digital VESA DFP 1.x non compatible

Horizontal Screen Size: 89 cm Vertical Screen Size: 50 cm Display Transfer Characteristics (Gamma) 2.20 Active off: No Suspend: No Standby: No RGB color display sRGB is not used as default Preferred Timing is native Display is non-continuous frequency (multi-mode)

Chromaticity Red: (0.640, 0.330)

Green: (0.300, 0.600) Blue: (0.150, 0.060) White: (0.313, 0.329)

Established Timings I 640 x 480 @ 60Hz 800 x 600 @ 60Hz

Established Timings II 1024 x 768 @ 60Hz

Manufacturer's Timings: None

Standard Timings Timing 1: 1280 x 800 @ 60 Hz (16:10) Timing 2: 1600 x 900 @ 60 Hz (16:9) Timing 3: Not Used Timing 4: Not Used Timing 5: Not Used Timing 6: Not Used Timing 7: Not Used Timing 8: NotUsed

Descriptor Block: Detailed Timing (DTD)

Pixel clock: 148.500 MHz Refresh Rate: 50.000 Hz (approx.) Scan type: Progressive Horz Active: 1920 Vert Active: 1920 Vert Blank: 720 Vert Blank: 45 HSync Delay: 528 HSync Delay: 528 HSync Width: 5 Image size: 800 mm x 450 mm Border: 0 pixels x 0 lines Stereo mode: Normal display, no stereo Sync: Digital Separate, VSYNC+, HSYNC+

Descriptor Block: Detailed Timing (DTD)

Pixel clock: 127.750 MHz Refresh Rate: 49.974 Hz (approx.) Scan type: Progressive Horz Active: 1920 Vert Active: 1200 Horz Blank: 160 Vert Blank: 160 Vert Blank: 29 HSync Delay: 48 HSync Delay: 48 HSync Width: 32 VSync Width: 6 Image size: 89 mm x 50 mm Border: 0 pixels x 0 lines Stereo mode: Normal display, no stereo Sync: Digital Separate, VSYNC-, HSYNC+

Descriptor Block: Established Timings III

Version: 10 Supported Timings 1280 x 768 @ 60 Hz 1280 x 960 @ 60 Hz 1280 x 1024 @ 60 Hz 1360 x 768 @ 60 Hz 1440 x 900 @ 60 Hz 1400 x 1050 @ 60 Hz 1600 x 1200 @ 60 Hz 1920 x 1200 @ 60 Hz (RB)

Descriptor Block: Display Product Name Value: KDS7 Encoder

Riock 1																
Piece .	0	1	2	3	4	5	6	7	8	9	A	в	с	D	E	F
00	02	03	40	F3	4F	9F	10	21	20	14	05	5F	5E	5D	64	63
10	62	04	02	11	23	09	07	01	83	01	00	00	6E	03	0C	00
20	10	00	38	3C	20	00	80	01	02	03	04	67	D8	5D	C4	01
30	3C	80	00	E5	0E	60	61	65	66	E2	00	F9	E3	05	E0	00
40	66	21	56	AA	51	00	1E	30	46	8F	33	00	59	32	00	00
50	00	9E	00	00	00	00	00	00	00	00	00	00	00	00	00	00
60	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
70	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	1D

Block Type: CTA 861 Checksum verified E-EDID CTA Extension Version 3

Reserved data block offset 64

•Native DTDs in EDID:3 •Y: Supports underscan •Y: Supports basic audio •Y: Supports YCbCr 4:4:4 •Y: Supports YCbCr 4:2:2

CTA Data Block: Tag 2, bytes 15: Video Data Number of Descriptors: 15

SVD #001: (31) 1920x1080p @ 50 Hz 16:9 Native SVD #002: (16) 1920x1080p @ 60 Hz 16:9 SVD #003: (33) 1920x1080p @ 25 Hz 16:9 SVD #004: (32) 1920x1080p @ 24 Hz 16:9 SVD #006: (5) 1920x1080i @ 50 Hz 16:9 SVD #006: (5) 1920x1080i @ 60 Hz 16:9 SVD #007: (95) 3840x2160p @ 30 Hz 16:9 SVD #007: (95) 3840x2160p @ 25 Hz 16:9 SVD #009: (93) 3840x2160p @ 24 Hz 16:9 SVD #009: (93) 3840x2160p @ 20 Hz 256:135 SVD #011: (99) 4096x2160p @ 25 Hz 256:135 SVD #012: (98) 4096x2160p @ 24 Hz 256:135 SVD #013: (4) 1280x720p @ 60 Hz 16:9 SVD #014: (2) 720x480p @ 60 Hz 4:3 SVD #015: (17) 720x576p @ 50 Hz 4:3

CTA Data Block: Tag 1, bytes 3: Audio Data Number of Descriptors: 1

Audio Format Code: LPCM (IEC 60958 PCM [30, 31]) Channels: 2 Sampling Freq: 32 kHz, 44.1 kHz, 48 kHz Sampling Size (bit): 16

CTA Data Block: Tag 4, bytes 3: Speaker Allocation - Front Left/Front Right (FL/FR)

CTA Data Block: Tag 3, bytes 14: Vendor Specific 24-bit IEEE Registration ID: 0x000C03 HDMI 1.4b Vendor Specific Data Block

•CEC Physical Address: 1.0.0.0

ISRC/ACP: Not supported
 Deep Color
 36 bits per color
 30 bits per color
 YCbCr 4:4:4 supported
 •DVI dual-link: Not supported

•Max TMDS clock: 300 MHz

Content types: None
 Latency: NotPresent
 Interlaced Latency: Not Present

Basic 3D: Not supported
 Image Size: No addditional information.

•4K x 2K Support: 3840x2160 30Hz 3840x2160 25Hz 3840x2160 24Hz 4096x2160 24Hz

CTA Data Block: Tag 3, bytes 7: Vendor Specific 24-bit IEEE Registration ID: 0xC45DD8 HDMI Forum Vendor Specific Data Block

•Version: 1 •Max_TMDS_Character_Rate: 300 MHz •Max FRL Rate: Not Supported

Y: SCDC_Present N: RR_Capable N: CABLE_STATUS N: CCBPCI N: LTE_340MHz_scramble N: Dual_View N: 3D_OSD_Disparity N: UHD_VIC N: DC_48bit_420 N: DC_36bit_420 N: DC_30bit_420

CTA Data Block: Extended Tag 14, bytes 5: Y420 Video Data Number of Descriptors: 4

SVD #016: (96) 3840x2160p @ 50 Hz 16:9 SVD #017: (97) 3840x2160p @ 60 Hz 16:9 SVD #018: (101) 4096x2160p @ 50 Hz 256:135 SVD #019: (102) 4096x2160p @ 60 Hz 256:135

CTA Data Block: Extended Tag 0, bytes 2: Video Capability

CE: Always overscanned IT: Always underscanned PT: Supports over and underscan RGB Quantization: Selectable (via AVI Q) YCC Quantization: Selectable (via AVI YQ)

CTA Data Block: Extended Tag 5, bytes 3: Colorimetry

BT.2020-cYCC BT.2020-YCC BT.2020-RGB

Descriptor Block: Detailed Timing (DTD)

Pixel clock: 85.500 MHz Refresh Rate: 59.790 Hz (approx.) Scan type: Interlace Horz Active: 1366 Vert Active: 768 Horz Blank: 426 Vert Blank: 30 HSync Delay: 70 HSync Width: 31 VSync Width: 3 Image size: 89 mm x 50 mm Border: 0 pixels x 0 lines Stereo mode: Normal display, no stereo Sync: Digital Separate, VSYNC+, HSYNC+

デフォルトパラメータ

KDS-SW2-EN7 デフォルトパラメータ

Page Name	Tab Name	Fields	Editabl e Field	Exportable Field	Default Values
Main	AV Routing	Channel ID	Yes	Yes	1
		Channel Name	Yes	Yes	KDS-SW2-EN7-xxxxxxxxxxxxxx "xxxxxxxxxxx" is the device's MAC address.
		Volume	Yes	Yes	80
		Mute	Yes	Yes	Off
		Play/Stop	Yes	Yes	Play
AV Settings	Video	Input 1	Yes	Yes	On
		Maximum Bit Rate	Yes	Yes	Best Effort
		Maximum Video Frame Rate (%)	Yes	Yes	100%
	Audio	Analog Audio Direction IN/OUT	Yes	Yes	IN
		Audio Source Mode	Yes	Yes	Last Connected
		Audio Connection Guard Time (sec)	Yes	Yes	10
	EDID	EDID Lock	Yes	Yes	On
Device Settings	General	Host Name	Yes	Yes	KDS-SW2-EN7-xxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxx
		Import/Export Device Settings	Yes	Yes	All including IP
		Front Panel Lock	Yes	Yes	Off
	Network	Stream Port	No	Yes	Media
		Stream 802.1Q	No	Yes	N/A
		Stream VLAN Tag	No	Yes	N/A
		Stream DHCP	Yes	Yes	On
		P3K & Gateway Port	Yes	Yes	Media
		P3K & Gateway 802.1Q	Yes	Yes	Off
		P3K & Gateway VLAN Tag	Yes	Yes	N/A
		P3K & Gateway DHCP	Yes	Yes	N/A
		IP Casting Mode	Yes	Yes	Multicast
		TTL	Yes	Yes	64
		TCP Port	Yes	Yes	5,000
		UDP Port	Yes	Yes	50,000
	Time and Date	Date	Yes	Yes	01-01-1970
		Time	Yes	Yes	N/A
		Time Zone	Yes	Yes	00:00 Greenwich
		NTP Time Server Usage	Yes	Yes	No
		NTP Time Server Address	Yes	Yes	N/A
		NTP Daily Sync Hour	Yes	Yes	N/A
	Security	HTTPS Server	Yes	Yes	On; Internal Certificate
		IEE 802.1x Authentication	Yes	Yes	Off
	Users	Security Status	Yes	Yes	Off
		Inactivity auto-logout time	Yes	Yes	10
Control	Settings	CEC Gateway	Yes	Yes	Enable
		CEC Gateway HDMI Port	Yes	Yes	HDMI Input
		RS232 Gateway	Yes	Yes	Enable
		RS232 Port	Yes	Yes	5001
		RS232 Baud rate	Yes	Yes	115200
		RS232 Data Bits	Yes	Yes	8
		Parity	Yes	Yes	None
		Stop Bits	Yes	Yes	1
		IR Gateway	Yes	Yes	Enable
		IR Direction IN/OUT	Yes	Yes	In
Diagnostics	Advanced	Active Syslog	Yes	Yes	Off

プロトコル 3000

クレイマー機器は、イーサネットポート経由で送信される Kramer プロトコル3000 コマンド を使用して操作できます。

プロトコル3000 について

プロトコル3000 コマンドは、次のように構成された一連のASCII 文字です。

• コマンドフォーマット:

Prefix	Command Name	Constant (Space)	Parameter(s)	Suffix
#	Command		Parameter	<cr></cr>
	•	•		

• フィードバックフォーマット:

Prefix	Device ID	Constant	Command Name	Parameter(s)	Suffix
~	nn	@	Command	Parameter	<cr><lf></lf></cr>

- コマンドパラメータ: 複数のパラメーターはコンマ(,)で区切る必要があります。さらに、 カッコ([と])を使用して、複数のパラメーターを1つのパラメーターとしてグループ化で きます。
- パラメーター属性:パラメータには複数の属性が含まれる場合があります。属性は、カッコ(<…>)で示され、ピリオド(.)で区切る必要があります。

コマンドフレーミングは、 **KDS-SW2-EN7**とのインターフェース方法によって異なります。次の図は、ターミナル通信ソフトウェア(Hercules等)を使用して#コマンドがどのように構成されているかを示します。

S Hercules SETUP utility by HW-group.com		_		×
UDP Setup Serial TCP Client TCP Server UDP Test Mode About				
Received/Sent data	TCD			
Connecting to 192.168.110.54	Module IP		Port	
#~010 OK	192.168.1	10.54	5000	
	Ping		🗶 Disco	nnect
	TEA autho	rization		
	TEA key			
	1: 0102	0304 :	3: 090A0B0)C
	2: 0506	0708	4: OD OE OF	10
	Authorizatio	on code		
				9
	PortStore	test		
	🖂 NVT di	sable		
	R	eceived	țest data	
	Redirect	to UDP		
Send				
##Kor>	Send	HI	Jgro	up
HEX	Send	000	.HW-group	com
☐ HEX	Send	Hercu	Version 3	.2.8

プロトコル3000 コマンド

Function	Description	Syntax	Response	Parameters/Attributes	Example
#	Protocol handshaking. NOTE: Validates the Protocol 3000 connection and gets the machine number. Step-in master products use this command to identify the availability of a device.	# <cr></cr>	~nn@ok <cr><lf></lf></cr>		# <cr></cr>
BEACON-EN	Set beacon rate.	#BEACON-EN port_id,status,rate <cr></cr>	~nn@BEACON-EN port_id,status,rate <cr><lf></lf></cr>	port_id – ID of the Ethernet port 0 – Media Port 1 – Service Port status – Enable/Disable beacon 0 – Disable (default) 1 – Enable rate – Repetition rate in seconds 1 – 1 second (minimum) 10 – 10 seconds (default) 1800 – 30 minutes (maximum)	#BEACON-EN_0,0,10 <cr></cr>
BEACON- INFO?	Get beacon information, including IP address, UDP control port, TCP control port, MAC address, model, name. NOTE: There is no Set command. Get command initiates a notification.	#BEACON-INFO?port_id <cr></cr>	~nn@BEACON-INFO port_id,ip_string,udp_port,tcp_ port,mac_address,model,name <cr><lf></lf></cr>	port_id- ID of the Ethernet port 0 - Media Port 1 - Service Port ip_string - Dot-separated representation of the IP address udp_port - UDP control port tcp_port - TCP control port mac_address - Dash-separated mac address model - Device model name - Device name	Get beacon information: #BEACON-INFO? 0<cr></cr>
BUILD- DATE?	Get device build date.	#BUILD-DATE? <mark><cr></cr></mark>	~nn@BUILD-DATE date,time <cr><lf></lf></cr>	date – Format: YYYY/MM/DD where YYYY = Year MM = Month DD = Day time – Format: hh:mm:ss where hh = hours mm = minutes ss = seconds	Get the device build date: #BUILD-DATE? <cr></cr>
CEC-GW- PORT- ACTIVE	Set CEC Gateway mode - Whether CEC commands coming from HDMI stream (passthrough) or from LAN.	#CEC-GW-PORT-ACTIVE gateway <cr></cr>	~nn@CEC-GW-PORT-ACTIVE gateway <cr><lf></lf></cr>	CEC mode 0 – CEC Passthrough mode 1 – CEC Gateway mode – command to be to be sent to HDMI Input. 2 – CEC Gateway mode – command to be to be sent to HDMI Output. 3 – CEC Gateway mode – command to be sent to HDMI Loop Through	Set CEC Gateway mode: #CEC-GW-PORT-ACTIVE 1 <cr></cr>
CEC-NTFY	Notify about CEC command retrieved from bus. NOTE: Notification is sent to all com ports upon CEC message retrieval from CEC bus.	#CEC-NTFY <cr></cr>	~nn@CEC-NTFY port_index,len, <cec_command ><cr><lf></lf></cr></cec_command 	port_index – CEC port notifying the command len – 1–16 cec_command – CEC format command (in HEX format, no leading zeros, no '0x' prefix)	Notify about CEC command retrieved from bus.: #CEC- NTFY_DF36 <cr></cr>
CEC-SND	Send CEC command to port.	#CEC-SND port_index,sn_id,cmd_name,cec_le n,cec_command <cr></cr>	~nn@CEC-SND port_index,sn_id,cmd_name,ce c_mode <cr><lf></lf></cr>	port_index - CEC port transmitting the command (1 - number of ports) sn_id - serial number of command for flow control and response commands from device cmd_name - command name cec_len - 1-16 cec_command - CEC format command (in HEX format, no leading zeros, no '0x' prefix) cec_mode - CEC mode 1 - Sent 2 - Gateway disabled 3 - Inactive CEC-Master 3 - Busy 4 - Illegal Message Parameter 5 - Illegal CEC Address Parameter 6 - Illegal CEC Command 7 - Tirmeout 8 - Error	Send CEC command to port: #CEC-SND 1,1,1,2,E004 <cr></cr>
COM- ROUTE-ADD	Add a communication route tunnel connection.	#COM-ROUTE-ADD com_id,port_type,port_id,eth_rep_e n,timeout <cr></cr>	~nn@COM-ROUTE-ADD com_id,port_type,port_id,eth_r ep_en,timeout <cr><lf></lf></cr>	com_id – Machine dependent port_type – TCP/UDP 1 – TCP 2 – UDP port_id – TCP/UDP port number (5000 – 5999) eth_rep_en – Ethernet Reply 1 – COM port does not send replies to new clients 2 – COM port sends replies to new clients. timeout – Keep alive timeout in seconds (1 to 3600)	Add a communication route tunnel connection: #COM-ROUTE-ADD 1,1,1,1,1 <cr></cr>
COM- ROUTE- REMOVE	Remove a communication route tunnel connection.	#COM-ROUTE-REMOVE com_id <cr></cr>	~nn@COM-ROUTE-REMOVE com_id <cr><lf></lf></cr>	com_id – Machine dependent	Remove a communication route tunnel connection: #COM-ROUTE-REMOVE

Function	Description	Syntax	Response	Parameters/Attributes	Example
COM-	Get communication	#COM-ROUTE?_com id <cr></cr>	~nn@COM-ROUTE	com_id – Machine dependent	Get tunneling port routing for
ROUTE?	route tunnel		com_id,port_type,port_id,eth_r	port_type – TCP/UDP	all route tunnels:
	connection state.		ep_en,timeout <cr><lf></lf></cr>	1 – TCP 2 – UDP	#COM-ROUTE?_ <cr></cr>
				port_id - TCP/UDP port number	
				eth_rep_en – Ethernet Reply	
				to new clients	
				1– COM port sends replies to new clients	
				timeout – Keep alive timeout in	
DEV-	Get device status.	#DEV-STATUS? <cr></cr>	~nn@DEV-STATUS	status - device status for	Get device status
STATUS?			status <cr><lf></lf></cr>	encoder/decoder	#DEV-STATUS? <cr></cr>
				2 – standby	
				3- FW Background Download	
EDID-ACTIVE	Activate specific	#EDID-ACTIVE Input_id,	~nn@EDID-ACTIVE Input_id,	Input_id – 1	Set custom EDID #1 active
	EDID Note: only valid in	Index <cr></cr>	Index <cr><lf></lf></cr>	Index - Index in EDID List	on input 1; If not in CUSTOM mode_return FRROR
	custom mode. in		~nn@EDID-ACTIVE		#EDID-ACTIVE 1,1 <cr></cr>
	other modes will return error.		err <cr><lf></lf></cr>		
EDID-	Get current active	#EDID-ACTIVE? Input_id <cr></cr>	~nn@EDID-ACTIVE Input_id,	Input_id – 1	Get active custom EDID
ACTIVE?	Note: only valid in		Index <cr><lf></lf></cr>	Index - Index In EDID List	CUSTOM mode, return
	custom mode. in				
	return error.				#EDID-ACTIVE ! ICON
EDID-LIST?	Get a list of currently	#EDID-LIST? <cr></cr>	~nn@#EDID-LIST	port_idx – HDMI port index, only 1 is	Get EDID list
	only)			name – EDID file name	
					Return: ~nn@EDID-LIST
					[0,"DEFAULT"],[2,"SONY"],[5,
EDID-MODE	Set EDID work	#EDID-MODE Input id. Mode.	~nn@#EDID-MODE Input_id.	Input id -1	"PANASONIC"] <cr><lf> Set EDID to custom mode.</lf></cr>
	mode.	Index <cr></cr>	Mode, Index <cr><lf></lf></cr>	Mode:	idx is 1
				– PASSTHRU (get from decoder) – CUSTOM	#EDID-MODE 1.CUSTOM.1 <cr></cr>
				- DEFAULT	,,
				EDID-LIST?' command	
EDID-MODE?	Get EDID work	#EDID-MODE? Input_id <cr></cr>	~nn@#EDID-MODE Input_id,	Input_id – 1	Get EDID Mode
	mode.		Mode, Index <cr><lf></lf></cr>	– PASSTHRU (get from decoder)	
				Index: for CUSTOM get 'index' from	
EDID-NET-	Set MAC on net	#EDID-NET-SBC input_id	~nn@EDID-NET-SRC input_id	'EDID-LIST?' command	Set MAC on net device for
SRC	device to be EDID	src_ip <cr></cr>	src_ip <cr><lf></lf></cr>	src_mac – DEC IP address	Input 1
	source Valid only when				#EDID-NET-SRC 1 192 168 1 40 <cr></cr>
	EDID-MODE				1,102.100.1.10 010
	PASSTHRU				
EDID-NET-	Get MAC on net	#EDID-NET-SRC? input_id <cr></cr>	~nn@EDID-NET-SRC input_id,	input_id – 1	Get MAC on net device for
SRC?	source.		src_ip <cr><lf></lf></cr>	sic_ip – DEC IP address	#EDID-NET-SRC? 1 <cr></cr>
	Remove custom		-nn@#EDID-RM	Index: 1 N - EDID index to	remove EDID from slot 3 and
	EDID from EDID list		Index <cr><lf></lf></cr>	remove. Index 0 (default) is not	delete the file
	Note: should return ERR if this EDID is in		or ~nn@EDID-RMerr <cr><lf></lf></cr>	removable	#EDID-RM 3 <cr></cr>
	USE.				
ETH-PORT	Set Ethernetport	#ETH-PORT_port_type,port_id <cr></cr>	~nn@ETH-PORT port_type.port_id <cr><lf></lf></cr>	port_type - TCP/UDP	Set the Ethernet port protocol for TCP to port 12457:
	NOTE: If the port			when port_type = TCP:	#ETH-PORT-TCP,5000 <cr></cr>
	number you enter is already in use, an			5000~5099 when port_type = UDP:	
	error is returned.			50000~50999	
	must be within the				
	following range: 0-				
ETH-PORT?	Get Ethernetport	#ETH-PORT? port_type <cr></cr>	~nn@ETH-PORT	port_type - TCP/UDP	
	protocol.		port_type,port_id <cr><lf></lf></cr>	port_id -	
				5000~5099	
				when port_type = UDP: 50000~50999	
FACTORY	Reset device to	#FACTORY <cr></cr>	~nn@FACTORY®tk <cr><lf></lf></cr>		Reset the device to factory
	configuration				#FACTORY <cr></cr>
	NOTE: This				
	user data from the				
	device. The deletion				
	Your device may				
	require powering off and powering on for				
	the changes to take				
	effect.				

Function	Description	Syntax	Response	Parameters/Attributes	Example
GTW-MSG- NUM?	Get Control Gateway Messages Counter from certain period. Add Recv_Count and Send_Count NOTE: <date> is a legacy parameter, for KDS7 and should be ignored</date>	#GTW-MSG-NUM? message_type,data <cr></cr>	~nn@GTW-MSG-NUM message_type,date, recv_counter,send_count <cr> <lf></lf></cr>	message_type - where: 1 =CEC 2 = IR 3 = RS232 date - Format: DD-MM-YYYY. Recv_counter - counter of receive messages Send_counter - counter of send messages	Get Control Gateway Messages Counterfrom certain period #GTW-MSG-NUM? 1,05-12- 2018 <cr></cr>
HDCP-MOD	Set HDCP mode. NOTE: Set HDCP working mode on the device input: HDCP supported - HDCP_ON[default]. HDCP_ON[default]. HDCP oFF.	#HDCP-MOD_in_index,mode <cr></cr>	~nn@HDCP-MOD in_index,mode <cr><lf></lf></cr>	in_index – Number that indicates the specific input: 1-N (N= the total number of inputs) mode – HDCP mode: 1 – HDCPOff 2 – HDCPOn	Set the input HDCP-MODE of IN 1 to Off: #HDCP-MOD_1,0 <cr></cr>
HDCP-MOD?	Get HDCP mode. NOTE: Set HDCP working mode on the device input: HDCP supported - HDCP_ON [default]. HDCP not support - HDCP OFF. HDCP Support changes following detected sink - MIRROR OUTPUT.	#HDCP-MOD?jn_index <cr></cr>	~nn@HDCP-MOD in_index,mode <cr><lf></lf></cr>	in_index – Number that indicates the specific input: 1-N (N= the total number of inputs) mode – HDCP mode: 1 – HDCP Off 2 – HDCP On 3 – HDCP Mirror Mode - used by KDS-7 decoder to allow an HDCP 2.2 source connected to the encoder to play on an HDCP 1.4 TV/display connected to the decoder.	Get the input HDCP-MODE of IN 1 HDMI: #HDCP-MOD? _ 1 <cr></cr>
HDCP-STAT?	Get HDCP signal status.NOTE: io_mode =1 - get the HDCP signal status of the sink device connected to the specified output. io_mode =0 - get the HDCP signal status of the source device connected to the specified input.	#HDCP-STAT? io_mode,in_index <cr></cr>	~nn@HDCP-STAT io_mode,in_index,status <cr> <lf></lf></cr>	io_mode - Input/Output 0 - Input 1 - Output io_index - Number that indicates the specific number of inputs or outputs (based on io_mode): 1-N (N=total number of inputs or outputs) status - Signal encryption status - valid values On/Off 1 - HDCPOff 2 - HDCPOn	Get the outputHDCP- STATUS of IN 1: #HDCP-STAT?-0,1 <cr></cr>
HELP	Get command listor help for specific command	#HELP-CR> #HELP_cmd_name <cr></cr>	1. Multi-line: ~nn@Device_cmd_name,	cmd_name – Name of a specific command	Get the command list: #HELP <cr></cr>
HW-TEMP?	Get device heat	#HW-TEMP? region_id,mode <cr></cr>	-nn@HW-TEMP region_id, temperature <cr><lf></lf></cr>	region_id - ID of the region for which to get the temperature 0 - First CPU Mode - Celsius or Fahrenheit 0 - Celsius 1 - Fahrenheit Temperature - Temperature of the HW region, rounded down to the closest integer	Get temperature in Celsius of first cpu #HW-TEMP? 0,0 <cr></cr>
HW- VERSION?	Get hardware version	#HW-VERSION? <cr></cr>	~nn@HW-VERSION hardware_version <cr><lf></lf></cr>	hardware_version – XX.XX.XXXX where the digit groups are:	Get hardware version #HW-VERSION? <cr></cr>
IDV	Set visual indication from device. NOTE: Using this command, some devices can light a sequence of buttons or LEDs to allow identification of a specific device from similar devices.	#IDV <cr></cr>	~nn@IDV_ok <cr><lf></lf></cr>		#IDV <cr></cr>
IR-SND	Send IR command to port.	<pre>#IR-SND ir_index,sn_id,cmd_name,repeat_a mount,total_packages,package_id,< pronto command><cr></cr></pre>	~nn@IR-SND ir_index.sn_id,cmd_name,ir_st atus <cr><lf></lf></cr>	ir_index – Number that indicates the specific ir port: 1-2 (N= the total number of inputs) * - broadcasts to all ports sn_id – Serial number of command for flow control and response commands from device cmd_name – Command name (length limit 15 chars) repeat_amount – Of times the IR command is transmitted (limited to 50; repeats > 50 are truncated to 50); default = 1 total_packages – Number of messages the original command was divided into, default = 1 package_id – Chunk serial number (only valid when Total_packages >1) pronto_command – Pronto format command (in HEX format, no leading zeros, no '0x' prefix) ir_status – IR Status 0 – Sent (no error) 1 – Stop 2 – Done 3 – Busy 4– Wrong Parameter 5 – Nothing to Stop 6 – Start 7 – Timeout 8 – Error	Send IR command to port 1: #IR-SND-1,1,1,1,1,1,1,1 <cr></cr>
KDS-ACTION	Set action to perform by encoder/decoder.	#KDS-ACTION k ds_mode< <mark>CR></mark>	~nn@KDS-ACTION kds_mode <cr><lf></lf></cr>	kds_mode – Action (state) for encoder/decoder 1 – Stop 2 – Play 3 – Save config	Stop the encoder/decoder: #KDS-ACTION•0 <cr></cr>

Function	Description	Syntax	Response	Parameters/Attributes	Example
KDS- ACTION?	Get last action (state) performedby encoder/decoder.	#KDS-ACTION? <cr></cr>	~nn@KDS-ACTION kds_mode <cr><lf></lf></cr>	kds_mode – Action (state) for encoder/decoder 1 – Stop 2 – Play 3 – Save config	Get the last action performed by the encoder/decoder: #KDS-ACTION? <cr></cr>
KDS-AUD	Set audio source/destination.	#KDS-AUD_mode <cr></cr>	-nn@KDS-AUD mode <cr><lf></lf></cr>	mode Encoder/decoder audio mode Streamer Audio Encoder 0 HDMI input 1 Analog input 2 None Streamer Audio Decoder 0 0 HDMI output 1 Analog output 2 Both 3 None	Set audio source/destination: #KDS-AUD_1 <cr></cr>
KDS-AUD?	Get audio source/destination.	#KDS-AUD? <cr></cr>	~nn@KDS-AUD mode <cr><lf></lf></cr>	mode Encoder/decoder audio mode Streamer Audio Encoder 1 – HDMI input 1 2 – None Streamer Audio Decoder 0 – HDMI output 1 1 – Analog output 2 2 – Both 3	Get audio source/destination: #KDS-AUD? <cr></cr>
KDS-DEFINE- CHANNEL	Set Encoder AV channel.	#KDS-DEFINE-CHANNEL ch_id <cr></cr>	~nn@KDS-DEFINE-CHANNEL ch_id <cr><lf></lf></cr>	ch_id – Number that indicates the specific input 1-999.	Tune the encoder: #KDS-DEFINE-CHANNEL 1 <cr></cr>
KDS-DEFINE- CHANNEL?	Get Encoder AV channel.	#KDS-DEFINE-CHANNEL? <cr></cr>	~nn@KDS-DEFINE? ch_id <cr><lf></lf></cr>	ch_id – Number that indicates the specific input 1-999.	Get channel ID: #KDS-DEFINE- CHANNEL? <cr></cr>
KDS-GW-ETH	Set gateway network port	#KDS-GW-ETH gw_type,netw_id <cr></cr>	~nn@KDS-GW-ETH gw_type,netw_id <cr><lf></lf></cr>	gw_type 0 - Control netw_id - Network ID-the device network interface: 1 - Media Port 2 - Service	Set network port gateway to Service #KDS-GW-ETH 0,1 <cr></cr>
KDS-GW- ETH?	Get gateway network port.	#KDS-GW-ETH? gw_type <cr></cr>	~nn@KDS-GW-ETH gw_type,netw_id <mark><cr><lf></lf></cr></mark>	gw_type 0 - Control netw_id - Network ID-the device network interface: 1 - Media Port 2 - Service	Get network port gateway port #KDS-GW-ETH? 0 <cr></cr>
KDS- METHOD	Set unicast/ multicast.	#KDS-METHOD 1 <cr></cr>	~nn@KDS-METHOD method <cr><lf></lf></cr>	method – Streaming method: 1 – Unicast 2 – Multicast	Set current streaming method of encoder/decoder: #KDS-METHOD 1 <cr></cr>
KDS- METHOD?	Get unicast/ multicast.	#KDS-METHOD? <cr></cr>	~nn@KDS-METHOD method <cr><lf></lf></cr>	method – Streaming method 1 – Unicast 2 – Multicast	Get current streaming method of encoder/decoder: #KDS-METHOD? <cr></cr>
KDS- MULTICAST	Set multicast group address and TTL value.	#KDS-MULTICAST group_ip,ttl <cr></cr>	<pre>~nn@KDS-MULTICAST group_ip,ttl<cr><lf></lf></cr></pre>	group-ip - Multicast group IP used for streaming packets in Multicast Streaming Method. ttl - Time to Live of the streamed packets.	Set multicast group address and TTL value #KDS-MULTICAST 0.0.0.0,64 <cr></cr>
KDS- MULTICAST?	Get multicast group address and TTL value.	#KDS-MULTICAST? <cr></cr>	-nn@KDS-MULTICAST group_ip,ttl <cr><lf></lf></cr>	group-ip - Multicast group IP used for streaming packets in Multicast Streaming Method. ttl - Time to Live of the streamed packets.	Set multicast group address and TTL value #KDS-MULTICAST? <cr></cr>
KDS-RATIO?	Get aspect ratio.	#KDS-RATIO? <cr></cr>	~nn@KDS-RATIO value <cr><lf></lf></cr>	value – Streamer Decoder Aspect Ratio width:height, for example "16:9"	Get Aspect Ratio #KDS-RATIO? <cr></cr>

Function	Description	Syntax	Response	Parameters/Attributes	Example
KDS-RESUL?	stream resolution.	io mode.io index.is native <cr></cr>	io mode.io index.is native.res	0 – Input	
			olution <cr><lf></lf></cr>	1 – Output	
				IO_INDEX - NUMBER that INDICATES the	
				1-N (N= the total number of input or	
				output ports)	
				0 – Off	
				1 – On	
				resolution – Resolution index	
				EDID (for output)	
				1=640x480p@59.94Hz/60Hz	
				2=720x480p@59.94Hz/60Hz 3=720x480p@59.94Hz/60Hz	
				4=1280x720p@59.94Hz/60Hz	
				5=1920x1080i@59.94Hz/60Hz	
				6=720(1440)x480i@59.94Hz/60Hz 7=720(1440)x480i@59.94Hz/60Hz	
				8=720(1440)x240p@59.94Hz/60Hz	
				9=720(1440)x240p@59.94Hz/60Hz	
				11=2880x480i@59.94Hz/60Hz	
				12=2880x240p@59.94Hz/60Hz	
				13=2880x240p@59.94Hz/60Hz	
				15=1440x480p@59.94Hz/60Hz	
				16=1920x1080p@59.94Hz/60Hz	
				17=720x576p@50Hz	
				19=1280x720p@50Hz	
				20=1920x1080i@50Hz	
				21=720(1440)x576i@50Hz 22=720(1440)x576i@50Hz	
				23=720(1440)x288p@50Hz	
				24=720(1440)x288p@50Hz	
				25=2880x576i@50Hz 26=2880x576i@50Hz	
				27=2880x288p@50Hz	
				28=2880x288p@50Hz	
				30=1440x576p@50Hz	
				31=1920x1080p@50Hz	
				32=1920x1080p@23.97Hz/24Hz	
				34=1920x1080p@29.97Hz/30Hz	
				35=2880x480p@59.94Hz/60Hz	
				36=2880x480p@59.94Hz/60Hz	
				38=2880x576p@50Hz	
				39=1920x1080i@50Hz	
				40=1920x1080i@100Hz 41=1280x720p@100Hz	
				42=720x576p@100Hz	
				43=720x576p@100Hz	
				44=720(1440)x576i@100Hz	
				46=1920x1080i@119.88/120Hz	
				47=1280x720p@119.88/120Hz	
				48=720x480p@119.88/120Hz	
				50=720(1440)x480i@119.88/120Hz	
				51=720(1440)x480i@119.88/120Hz	
				5∠=1∠0x516p@200Hz 53=720x576p@200Hz	
				54=720(1440)x576i@200Hz	
				55=720(1440)x576i@200Hz	
				57=720x480p@239.76/240Hz	
				58=720(1440)x480i@239.76/240Hz	
				59=720(1440)x480i@239.76/240Hz	
				61=1280x720p@25Hz	
				62=1280x720p@29.97Hz/30Hz	
				64=1920x1080p@119.88/120Hz	
				65=800x600p@60Hz	
				66=1024x768@60Hz	
				07=1280x7689@60Hz 68=1280x1024p@60Hz	
				69=1600x1200p@60Hz	
				70=1680x1050p@60Hz	
				71=1920x1200@0002 72=3840x2160p@24Hz	
				73=3840x2160p@25Hz	
				/4=3840x2160p@30Hz 75=3840x2160p@50Hz	
				76=3840x2160p@60Hz	
				77-100=(Reserved)	
				100=Custom resolution 1 101=Custom resolution 2	
				102=Custom resolution 3	
				103=Custom resolution 4	
				104=Custom resolution 5 104-254=(Reserved)	
KDS-VLAN-	Set vlan tag of	#KDS-VLAN-TAG	~nn@KDS-VLAN-TAG	gw_type:	Set Control vlan tag to 33:
TAG	gateway port.	gw_type,tag_id <cr></cr>	gw_type,tag_id <cr><lf></lf></cr>	0 - Control	#KDS-VLAN-TAG 0,33 <cr></cr>
				1 = No VLAN tag	
KDS-VLAN-	Get vlan tag of	#KDS-VLAN-TAG? gw_type <cr></cr>	~nn@KDS-VLAN-TAG	gw_type:	Get control vlan tag:
TAG?	gateway port.		gw_type,tag_id <cr><lf></lf></cr>	0 – Control	#KDS-VLAN-TAG? 0 <cr></cr>
				1 = No VLAN tag	

Function	Description	Syntax	Response	Parameters/Attributes	Example
Function LDFW	Description Load new firmware file. NOTE: In most devices firmware data is saved toflash memory, but the memory does not update until receiving the "UPGRADE" command and is restarted.	Syntax Step 1: #LDFW_size <cr> Step 2: If ready was received, send FIRMWARE_DATA</cr>	Response Response 1: -nn@LDFW_size ready <cr><lf> or ~nn@LDFW_errm<cr><lf> Response 2: ~nn@LDFW_size_ok<cr><lf></lf></cr></lf></cr></lf></cr>	Parameters/Attributes size – Size of firmware data that is sent firmware_data – HEX or KFW file in protocol packets Using the Packet Protocol Send a command: LDRV, LOAD, IROUT, LDEDID Receive Ready or ERR### If Ready: a. Send a packet, b. Receive OK on the last packet, c. Receive OK for the command Packet structure: Packet structure: Packet ID (1, 2, 3) (2 bytes in length) Length (data length + 2 for CRC) – (2 bytes in length) Data (data length - 2 bytes) CRC – 2 bytes 01 02 03 Packet ID Length Data Response: –nnnn ok<	Example
LOCK-EDID	Lock last read EDID.	#LOCK-EDID in_index,lock_mode <cr></cr>	~nn@LOCK-EDID in_index,lock_mode <cr><lf></lf></cr>	packet ID in ASCII hex digits.) in_index – 1 lock_mode – On/Off 0 – Off unlocks EDID 1 – On locks EDID	Lock the last read EDID from the HDMI In 1 input #LOCK-EDID 1,1 <cr></cr>
LOCK-EDID?	Get EDID lock state.	#LOCK-EDID? in_index <cr></cr>	~nn@LOCK-EDID in_index,lock_mode <cr><lf></lf></cr>	in_index – 1 lock_mode – On/Off 0 – Off unlocks EDID	Get EDID lock state for Input 1 #LOCK-EDID? 1 <cr></cr>
LOCK-FP	Lock the front panel.	#LOCK-FPJock/unlock <cr></cr>	~nn@LOCK-FP lock/unlock <cr><lf></lf></cr>	Lock/Unlock – On/Off 0 – (Off) Unlocks EDID	Unlock front panel: #LOCK-FP_0 <cr></cr>
LOCK-FP?	Get the frontpanel lock state.	#LOCK-FP? <u><cr></cr></u>	~nn@LOCK-FP lock/unlock <cr><lf></lf></cr>	Lock/Unlock – On/Off Off – Unlocks EDID	Get the front panel lock state: #LOCK-FP? <cr></cr>
LOG-ACTION	Reset events log.	#LOG-ACTION_action,period <cr></cr>	~nn@LOG-ACTION action,period <cr><lf></lf></cr>	On - Locks EDID action - one of 1 - start (start logging) 2 - pause (pause logging, but keep log content) 3 - resume (resume logging) 4 - reset (clear all current logs, keep logging) period - relevant for "start" 1 - keep current 2 - daily 3 - weekly (default)	Reset events log daily: #LOG-ACTION 4,2 <cr></cr>
LOG-TAIL?	Get the last "n" lines of message logs. NOTE: Used for advanced troubleshooting. Helps find error root causes and gets details not displayed in the error code number.	#LOG-TAIL? line_num <cr></cr>	Get: ~nn@LOG-TAILnn <cr><lf> Line content #1<cr><lf> Line content #2<cr><lf> Etc</lf></cr></lf></cr></lf></cr>	line_num is 10	Get the last "2" lines of message logs: #LOG-TAIL? 2 <cr></cr>
LOGIN	Set protocol permission. NOTE: The permission system works only if security is enabled with the "SECUR" command. LOGIN allows the user to run commands with an End User or Administrator permission level. When the permission system is enabled, LOGIN enables running commands with the User or Administrator permission level When set, login must be performed upon each connection It is not mandatory to enable the permission system in order to use the device In each device, some connections allow logging in to different levels. Some do not work with security at all. Connection may logout after timeout.	#LOGIN_login_level,password <cr></cr>	~nn@LOGIN login_level,password ok <cr<lf> or ~nn@LOGIN.err 004<cr<lf> (if bad password entered)</cr<lf></cr<lf>	login_level - Level of permissions required (User or Admin) password - Predefined password (by PASS command). Default password is an empty string	Set the protocol permission level to Admin (when the password defined in the PASS command is 33333): #LOGIN_admin,33333 <cr></cr>

Function	Description	Sumtor	Despense	Devery store (Attributes	Evenue
LOGIN?	Get current protocol permission level.NOTE: The permission system works only if security is enabled with the "SECUR" command. For devices that support security, LOGIN allows the user to run commands with an End User or Administrator permission level. In each device, some connections allow logging in to different levels. Some do not work with security at all. Connection may logout after timeout.	#LOGIN? <u><cr></cr></u>	-nn@LOGIN login_level <cr><lf></lf></cr>	login_level – Level of permissions required (User or Admin)	Get current protocol permission level: #LOGIN? <cr></cr>
LOGOUT	Cancel current permission level.NOTE: Logs out from End User or Administrator permission levels to Not Secure.	#LOGOUT <cr></cr>	-nn@LOGOUT_ok <cr><lf></lf></cr>		#LOGOUT <cr></cr>
LOGOUT- TIMEOUT	Set inactivity auto- logout time.	# LOGOUT-TIMEOUT time <cr></cr>	~nn@ LOGOUT-TIMEOUT time <cr><lf></lf></cr>	time – minutes of logout time	Set Inactivity auto-logout time to 10 #LOGOUT-TIMEOUT 10 <cr></cr>
LOGOUT- TIMEOUT?	Get inactivityauto- logout time.	#LOGOUT-TIMEOUT? <cr></cr>	~nn@LOGOUT-TIMEOUT time <cr><lf></lf></cr>	time – minutes of logout time	Get Inactivity auto-logout time #LOGOLIT-TIMEOLIT2 <cb></cb>
MODEL?	Get device model. NOTE: This command identifies equipment connected to KDS-SW2-EN7 and notifies of identity changes to the connected equipment. The Matrix saves this data in memory to answer REMOTE- INFO requests.	#MODEL? <u><cr></cr></u>	-nn@MODEL model_name <cr><lf></lf></cr>	model_name – String of up to 19 printable ASCII chars	Get the device model: #MODEL? <u><cr></cr></u>
NAME	Set machine (DNS) name. NOTE: The machine name is not the same as the model name. The machine name is used to identify a specific machine or a network in use (with DNS feature on).	#NAME_interface_id, host_name <cr></cr>	~nn@NAME_interface_id, host_name <cr><lf></lf></cr>	interface_id 0 – machine name host_name – String of up to 15 alpha-numeric chars (can include hyphen, not at the beginning or end)	Set the machine DNS name of the device to room-442: #NAME_0_room-442 <cr></cr>
NAME?	Get machine (DNS) name. NOTE: The machine name is not the same as the model name. The machine name is used to identify a specific machine or a network in use (with DNS feature on).	#NAME? <u>interface_id</u> <cr></cr>	~nn@NAME interface_id.host_name <cr>< LF></cr>	interface_id 0 – machine name host_name – String of up to 15 alpha-numeric chars (can include hyphen, not at the beginning or end)	Get the DNS name of the device: #NAME? <u>0</u> <cr></cr>
NAME-RST	Reset machine (DNS) name to factory default. NOTE: Factory default of machine (DNS) name is "KRAMER_" + 4 last digits of device serial number.	#NAME-RST <cr></cr>	~nn@NAME-RST ok <cr><lf></lf></cr>		Reset the machine name (S/N last digits are 0102): #NAME-RST kramer_0102 <cr></cr>

Function	Description	Svntax	Response	Parameters/Attributes	Example
NET-CONFIG	Set a network configuration.NOTE: Parameters [DNS1] and [DNS2]are optional. NOTE: For Backward compatibility, the id parameter can be omitted. In this case, the Network ID, by default, is 0, which is the Ethernet control port. NOTE: If the gateway address is not compliant to the subnet mask used for the host IP, the command will return an error. Subnet and gateway compliancy specified by REC950.	#NET-CONFIG netw_id,net_ip,net_mask,gateway,[d ns1],[dns2] <cr></cr>	-nn@NET-CONFIG netw_id,net_ip,net_mask,gate way <cr><lf></lf></cr>	netw_id – Network ID-the device network interface (if there are more than one). Counting is 0 based, meaning the control port is '0', additional ports are 1,2,3 net_ip – Network IP net_mask – Network mask gateway – Network gateway	Set the device network parameters to IP address 192.168.113.10, net mask 255.255.00, and gateway 192.168.0.1: #NET-CONFIG 0,192.168.113.10,255.255.0. 0,192.168.0.1 <cr></cr>
NET- CONFIG?	Get a network configuration.	#NEI-CONFIG?petw_id <cr></cr>	~nn@NE1-CONFIG netw_id,net_ip.net_mask,gate way <cr><lf></lf></cr>	netw_id – Network ID-the device network interface (if there are more than one). Counting is 0 based, meaning the control port is '0', additional ports are 1,2,3 net_ip – Network IP net_mask – Network mask gateway – Network gateway	Get network configuration: #NET-CONFIG?jd <cr></cr>
NET-DHCP	Set DHCP mode.NOTE: Only 1 is relevant for the mode value. To disable DHCP, the user must configure a static IP address for the device. Connecting Ethernet to devices with DHCP may take more time in some networks. To connect with a randomly assigned IP by DHCP, specify the device DNS name (if available) using the NAME command. You can also get an assigned IP by DHCP, specify the device DNS name (if available) using the NAME command. You can also get an assigned IP by direct connection to USB or RS-232 protocol port, if available. For proper settings consult your network administrator. NOTE: For Backward compatibility, the id parameter can be omitted. In this case, the Network ID, by default, is 0, which is the Ethernet control port.	#NET-DHCP netw_id,dhcp_state <cr></cr>	~nn@NET-DHCP netw_id,dhcp_state <cr><lf></lf></cr>	netw_id – Network ID-the device network interface (if there are more than one). Counting is 0 based, meaning the control port is '0', additional ports are 1,2,3 dhcp_state – 1 – Try to use DHCP. (If unavailable, use the IP address set by the factory or the net-ip command).	Enable DHCP mode for port 1, if available: #NET-DHCP_1,1 <cr></cr>
NET-DHCP?	Get DHCP mode NOTE: For Backward compatibility, the id parameter can be omitted. In this case, the Network ID, by default, is 0, which is the Ethernet control port.	#NET-DHCP?_netw_id <cr></cr>	~nn@NET-DHCP netw_id,dhcp_state <cr><lf></lf></cr>	netw_id – Network ID-the device network interface (if there are more than one). Counting is 0 based, meaning the control port is '0', additional ports are 1,2,3 dhcp_state – 1 – Try to use DHCP. (If unavailable, use the IP address set by the factory or the net-ip command).	Get DHCP mode for port 1, if available: #NET-DHCP?_1 <cr></cr>
NET-MAC?	Get MAC address. NOTE: For backward compatibility, the id parameter can be omitted. In this case, the Network ID, by default, is 0, which is the Ethernet control port.	#NET-MAC?jd <cr></cr>	~nn@NET-MAC id,mac_address <cr><lf></lf></cr>	id – Network ID-the device network interface (if there are more than one). Counting is 0 based, meaning the control port is '0', additional ports are 1,2,3 mac_address – Unique MAC address. Format: XX-XX-XX-XX-XX- XX where X is hex digit	#NET-MAC?jd <cr></cr>
NET-STAT?	Get net connection list of this machine. NOTE: The response is returned in one line and terminated with-CR> <lf>. The response format lists signal IDs separated by commas. This is an Extended Protocol 3000 command.</lf>	#NET-STAT? <u><cr></cr></u>	<pre>~nn@NET-STAT [(<port_type>: <port_index>, <client_ip>:<client_port>),state],,<cr><lf></lf></cr></client_port></client_ip></port_index></port_type></pre>	port_type - TCP/UDP 0 - TCP 1 - UDP port_index - Device port client_ip - Dot-separated representation of the IP address client_port - Client port state - listen or established	Get net connection list of this machine: #NET-STATE? <u><cr></cr></u> ~01@NETSTAT [(TCP:80.0.0.0.0:0),LISTEN],[(TCP:5000,0.0.0.0:0), LISTEN], [(TCP:80.192.168.114.3:5240 0),ESTABLISHED],[(TCP:500 0,192.168.1.100.51647) ,ESTABLISHED] <cr><lf></lf></cr>

Function	Description	Syntax	Response	Parameters/Attributes	Example
NET-IP?	Get a network IP address. This is an UDP protocol only.	#NET-IP? <cr></cr>	~nn@NET-IP_net_ip <cr><lf></lf></cr>	net_ip – Network IP	Get network IP address: #NET-IP? <cr></cr>
PASS	Set password for login level. Default password = admin.	#PASS login_level password <cr></cr>	~nn@PASS login_level,password <cr><lf ></lf </cr>	login_level – Level of login to set (supports admin only). password – Password for the login_level. Password should be 8 to 24 characters (including letters, numbers, and symbols without spaces or commas), at leastone number, one symbol without spaces or commas, one uppercase letter and one luwercase letter	Set the password for the admin protocol permission level to Livi4559*: #PASS admin, Livi4559* <cr></cr>
PASS?	Get password for	#PASS? login_level <cr></cr>	~nn@PASS	login_level – Level of login to set	Get the password for the
	login level. Default password = admin.		login_level,password <cr><lf< td=""><td>(supports admin only). password – Password for the login_level. Up to 15 printable ASCII chars</td><td>admin protocol permission level: #PASS? admin<cr></cr></td></lf<></cr>	(supports admin only). password – Password for the login_level. Up to 15 printable ASCII chars	admin protocol permission level: #PASS? admin <cr></cr>
PORT- DIRECTION	Set port direction as input or output.	#PORT-DIRECTION <direction_types.<pre>cport_format>.<po rt_index>.<signal_type>, direction<cr></cr></signal_type></po </direction_types.<pre>	-nn@PORT-DIRECTION <direction_type>.<port_format >.<port_index>.<signal_type>, direction<cr><lf></lf></cr></signal_type></port_index></port_format </direction_type>	The following attributes comprise the signal ID: <direction_type> – Direction of the port: IN – Input OUT – Output BOTH – Bi-directional } <port_formats of="" signal<br="" type="" –="">on the port: HDMI ANALOG-AUDIO IR <port_index> – The port number as printed on the front or rear panel <signal_type> – Signal ID attribute: AUDIO IR <directions direction:<br="" port="" –="">IN – Input OUT – Output</directions></signal_type></port_index></port_formats></direction_type>	Set audio analog port direction as input #PORT-DIRECTION both.analog.1.audio, IN <cr></cr>
PORT- DIRECTION?	Get port direction.	#PORT-DIRECTION? <direction_type>.<port_format>.<po rt_index>.<signal_type><cr></cr></signal_type></po </port_format></direction_type>	~nn@PORT-DIRECTION <direction_type>.cport_format >.cport_index>.csignal_type>, direction<cr><lf></lf></cr></direction_type>	The following attributes comprise the signal ID: <direction_type> – Direction of the port: IN – Input OUT – Output BOTH – Bi-directional } <port_format> – Type of signal on the port: HDMI ANALOG-AUDIO IR <port_index> – The port number as printed on the front or rear panel <signal_type> – Signal ID attribute: AUDIO IR <direction> – Port direction: IN – Input O II – Output</direction></signal_type></port_index></port_format></direction_type>	Get audio analog port direction #PORT-DIRECTION? both.analog.1.audio <cr></cr>
PORTS-LIST?	Get the port listof this machine. NOTE: The response is returned in one line and terminated with-CR-sLF>. The response format lists port IDs separated by commas. This is an Extended Protocol 3000 command.	#PORTS-LIST? <u><cr></cr></u>	~nn@PORTS-LIST [<direction_type>.<port_format >.<port_index>,]<cr><lf></lf></cr></port_index></port_format </direction_type>	The following attributes comprise the port ID: <direction_type> – Direction of the port: IN OUT BOTH <port_format> – Type of signal on the port: HDMI STREAM USB_C ANALOG_AUDIO RS-232 IR USB_A USB_B <port_index> – The port number as printed on the front or rear panel 1 – HDMI IN 2 – USB_C IN 1 – HDMI OUT</port_index></port_format></direction_type>	Get the ports list: #PORTS-LIST? <u><cr></cr></u>
RESET	Reset device NOTE: To avoid locking the port due to a USB bug in Windows, disconnect USB connections immediately after	#RESET <cr></cr>	~nn@RESETok <cr><lf></lf></cr>		Reset the device: #RESET <cr></cr>
	running this command. If the port was locked, disconnect and reconnect the cable to reopen the port.				
ROLLBACK	Rollback firmware to standby version.	#ROLLBACK <cr></cr>	~nn@ROLLBACK ok <cr><lf></lf></cr>		Perform firmware rollback: # ROLLBACK <cr></cr>

Function	Description	Svntax	Response	Parameters/Attributes	Example
SECUR	Start/stop security.	#SECUR security state <cr></cr>	~nn@SECUR	security state - Security state	Enable the permission
	NOTE: The		security_state <cr><lf></lf></cr>	0 - OFF (disables security)	system:
	permission system			1 – ON (enables security)	#SECUR_0 <cr></cr>
	is enabled with the				
	"SECUR" command.				
SIGNALS-	Get signal ID list of	#SIGNALS-LIST? <u><cr></cr></u> <lf></lf>	~nn@SIGNALS-LIST	The following attributes comprise	Get signal ID list:
LIST	Inis machine.		<pre>[<direction_type>.<port_format< td=""><td>the signal ID:</td><td>#SIGNALS-LIST ?<u><cr></cr></u></td></port_format<></direction_type></pre>	the signal ID:	#SIGNALS-LIST ? <u><cr></cr></u>
	response is returned		index>,] <cr><lf></lf></cr>	port:	
	in one line and			IN – Input	
				BOTH – Bi-directional (e.g. for RS-	
	The response format			232)	
	lists signal IDs			<pre><port_format> - Type of signal on</port_format></pre>	
	commas.			HDMI	
	This is an Extended			USB_C	
	Protocol 3000			STREAM	
	oommand.			RS-232	
				IR	
				USB_A	
				<pre>cool <pre>c</pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre>	
				printed on the front or rear panel	
				1 – HDMI OUT	
				<signal_type> – Signal ID attribute:</signal_type>	
				RS232	
				IR	
				<pre>vindex> - Indicates a specific</pre>	
				channel number when there are	
SN?	Get device serial	#SN2 <cb></cb>	~nn@SN	serial num – 14 decimal digits	Get the device serial number:
	number.		serial_num <cr><lf></lf></cr>	factory assigned	#SN? <u><cr></cr></u>
STANDBY	Set standby mode.	#STANDBY-value <cr></cr>		value – On/Off	Set standby mode:
				1 – On	
STANDBY-	Set inactivity auto-	#STANDBY-TIMEOUT time <cr></cr>	~nn@STANDBY-TIMEOUT	time – minutes of standby time	Set Inactivity auto-standby
	standby time.				#STANDBY-TIMEOUT
	Catingativity auto			time minutes of standby time	10 <cr></cr>
TIMEOUT?	standby time.	#OTANDDI-TIMEOUT	time <cr><lf></lf></cr>	time – minutes of standby time	time
					#STANDBY-
STANDBY-	Get standby	#STANDBY-VERSION? <cr></cr>	~nn@STANDBY-VERSION?	standby version – XX.XX.XXXX	Get standby version
VERSION?	firmware version.		standby_version <cr><lf></lf></cr>	where the digit groups are:	#STANDBY-
TIME	Set device time and	#TIME-day of week date data <cb></cb>	~nn@TIME	major.minor.build version	VERSION? <cr> Set device time and date to</cr>
	date		day_of_week,date,data <cr><</cr>	{SUN,MON,TUE,WED,THU,FRI,SA	December 5, 2018 at
	NOTE: The year		LF>	T}	2:30pm:
	The device does not			date – Format: DD-MM-YYYY. data – Format: hh:mm:ss where	#TIME=mon=05-12- 2018.14:30:00 <cr></cr>
	validate the day of			hh = hours	
	week from the date.			mm = minutes	
	hours.			35 - 560105	
	Date format - Day,				
TIME?	Month, Year.	#TIME? <cr></cr>	~nn@TIME	day of week - One of	Get device time and date:
	date		day_of_week,date,data <cr><</cr>	{SUN,MON,TUE,WED,THU,FRI,SA	#TIME? <cr></cr>
	NOTE: The year		LF>	T}	
	The device does not			YYYY = Year	
	validate the day of			MM = Month	
	week from the date.			DD = Day data – Format: bb:mm:ss where	
	hours.			hh = hours	
	Date format - Day,			mm = minutes ss = seconds	
TIME-LOC	Set local time offset	#TIME-LOC [•] utc off,dst state <cr></cr>	~nn@TIME-LOC	utc_off - Offset of device time from	Set local time offset to 3 with
	from UTC/GMT.		utc_off,dst_state <cr><lf></lf></cr>	UTC/GMT (without daylight time	no daylight-saving time:
	NOTE: If the time			correction)	#TIME-LOC ³ ,0 <cr></cr>
	device time			state	
	calculates by adding			0 - no daylight saving time	
	(that it got from the			1 – daylight saving time	
	time server) + 1 hour				
	If daylight savings				
	TIME command sets				
	the device time				
	these settings.				
Function	Description	Syntax	Pasponsa	Parameters/Attributes	Example
-----------	---	---	--	--	---
TIME-LOC?	Get local time offset from UTC/GMT. NOTE: If the time server is configured, device time calculates by adding UTC_off to UTC time (that it got from the time server) + 1 hour if daylight savings time is in effect. TIME command sets the device time without considering these settings.	#TIME-LOC? <u><cr></cr></u>	~nn@TIME-LOC utc_off,dst_state <cr><lf></lf></cr>	utc_off - Offset of device time from UTC/GMT (without daylight time correction) dst_state - Daylight saving time state 0 - no daylight saving time 1 - daylight saving time	Get local time offsetfrom UTC/GMT: #TIME-LOC? <cr></cr>
TIME-SRV	Set time server. NOTE: This command is needed for setting UDP timeout for the current client list.	#TIME-SRV mode,time_server_ip,sync_hour <c R></c 	~nn@TIME-SRV mode,time_server_ip,sync_hou r,server_status <cr><lf></lf></cr>	mode – On/Off 0 – Off 1 – On time_server_ip – Time server IP address sync_hour – Hour in day for time server_sync server_status – On/Off	Set time server with IP address of 128.138.140.44 to ON: #TIME-SRV 1,128.138.140.44,0,1 <cr></cr>
TIME-SRV?	Get time server. NOTE: This command is needed for setting UDP timeout for the current client list.	#TIME-SRV? <u><cr></cr></u>	~nn@ IIME-SRV mode,time_server_ip,sync_hou r,server_status <cr><lf></lf></cr>	mode – On/Off 0 – Off 1 – On time_server_ip – Time server IP address sync_hour – Hour in day for time server sync server_status – On/Off	Get time server: #TIME-SRV? <cr></cr>
UART	Set com port configuration. If Serial is configured when RS-485 is selected, the RS-485 UART port automatically changes. The command is backward compatible, meaning that if the extra parameters do not exist, FW goesto. RS-232. Stop_bits 1.5 is only relevant for 5 data bits.	#UART com_id,baud_rate,data_bits,parity,st op_bits_mode,serial_type,485_term <cr></cr>	~nn@UART com_id,baud_rate,data_bits,pa rity,stop_bits_mode,serial_type ,485_term <cr><lf></lf></cr>	$\begin{array}{l} \mbox{com_id} - 1 \mbox{ to } (machine \\ \mbox{dependent}) \\ \mbox{baud_rate} - 9600 - 115200 \\ \mbox{data_bits} - 5-8 \\ \mbox{parity} - ParityType \\ \mbox{0} - No \\ \mbox{0} - No \\ \mbox{1} - Odd \\ \mbox{2} - Even \mbox{stop_bits_mode} \\ \mbox{-1} - 17.5/2 \mbox{ serial_type} - \\ \mbox{2}32/485 \\ \mbox{0} - 232 \\ \mbox{1} - 485 \\ \mbox{4}85_{\mbox{term}} - 485 \mbox{termination state} \\ \mbox{0} - disable \\ \mbox{0} - nable \\ \mbox{(optional - this exists only when serial_type is 485)} \end{array}$	Set baud rate to 9600, 8 data bits, parity to none and stop bit to 1: #UART.9600,8,node,1 <cr></cr>
UART?	Get com port configuration. The command is backward compatible, meaning that if the extra parameters do not exist, FW goesto. RS-232. Stop_bits 1.5 is only relevant for 5 data_bits.	#UART? -c om_id <cr></cr>	~nn@UART com_id,baud_rate,data_bits,pa rity,stop_bits_mode,serial_type ,485_term <cr><lf></lf></cr>	com_id - 1 to n (machine dependent) baud_rate - 9600 - 115200 data_bits - 5-8 parity - Parity Type 0 - No 1 - Odd 2 - Even stop_bits_mode - 1/1.5/2 serial_type - 232/485 0 - 232 1 - 485 485_term - 485 termination state 0 - disable 1 - enable (optional - this exists only when serial type is 485)	Set baud rate to 9600, 8 data bits, parity to none and stop bit to 1: #UART 1,9600,8,node,1 <cr></cr>
UPG-TIME?	Get firmware version last upgrade date/time Add New	#UPG-TIME? <cr></cr>	~nn@UPG-TIME date,data <cr><lf></lf></cr>	date – Format: DD-MM-YYYY. data – Format: hh:mm:ss where	Get last upgrade date/time #UPG-TIME? <cr></cr>
UPGRADE	Perform firmware upgrade.NOTE: Not necessary for some devices. Firmware usually uploads to a device via a command like LDFW. Reset the device to complete the process.	#UPGRADE <cr></cr>	~nn@UPGRADE tk<cr><lf></lf></cr>		Perform firmware upgrade: #UPGRADE <cr></cr>
VERSION?	Get firmware version number.	#VERSION? <u><cr></cr></u>	~nn@VERSION firmware_version <cr><lf></lf></cr>	tirmware_version - XX.XX.XXXX where the digit groups are: major.minor.build version	Get the device firmware version number: #VERSION? <cr></cr>

Function	Description	Syntax	Response	Parameters/Attributes	Example
X-AUD- DESC?	Get audio signal info NOTE: This is an Extended Protocol 3000 command.	#X-AUD-DESC? <direction_type>.<port_format>.<po rt_index><cr></cr></po </port_format></direction_type>	~nn@X-AUD-DESC? <direction_type>.<port_format >.<port_label>.<signal_type>. <index>.<httostamp_rate,aud _format<cr><lf></lf></cr></httostamp_rate,aud </index></signal_type></port_label></port_format </direction_type>	The following attributes comprise the signal ID: <direction_type> – Direction of the port: IN – Input OUT – Output BOTH – Bi-directional (e.g. for RS- 232) <port_format> – Type of signal on the port: HDMI USB_C STREAM ANALOG_AUDIO RS-232 IR USB_A USB_A USB_A USB_A USB_A USB_A USB_A USB_A USB_C IN 1 – HDMI IN 2 – USB_C IN 1 – HDMI OUT ch_tot – Total number of channels samp_rate – Sample rate aud_format –</port_format></direction_type>	Get the audio signal info: #X-AUD-DESC? out.hdmi.1 <cr></cr>
X-AUD-LVL	Set audio level of a specific signal. NOTE : This is an Extended Protocol 3000 command.	#X-AUD-LVL <direction_type>.<port_format>.<po rt_index>.<signal_type>.<index>,au dio_level<cr></cr></index></signal_type></po </port_format></direction_type>	<pre>~nn@X-AUD-LVL <direction_type>.<port_format>, <port_index>.<signal_type>.<i ndex="">,audio_level<cr><lf></lf></cr></i></signal_type></port_index></port_format></direction_type></pre>	The following attributes comprise the signal ID: <direction_type> – Direction of the port: IN – Input OUT – Output BOTH – Bi-directional (e.g. for RS- 232) <port_format> – Type of signal on the port: HDMI USB_C STREAM ANALOG_AUDIO RS-232 IR USB_B <port_index> – The port number as printed on the front or rear panel 1 – HDMI IN 2 – USB_C IN 1 – HDMI OUT <signal_type> – Signal ID attribute: VIDEO AUDIO RS232 IR USB <index> – Indicates a specific channel number when there are multiple channels of the same type audio_level – Audio level in dB (range between -60 to +30) depending of the ability of the</index></signal_type></port_index></port_format></direction_type>	Set the audio level of a specific signal to 10: #X-AUD-LVL in.analog_audio.5.audio.1,10 <cr></cr>
X-AUD-LVL?	Get audio level of a specific signal. NOTE : This is an Extended Protocol 3000 command.	#X-AUD-LVL? <direction_type>.<port_format>.<po rt_index>.<signal_type>.<index>.<c R></c </index></signal_type></po </port_format></direction_type>	-nn@X-AUD-LVL <direction_type>.<port_format >.<port_index>.<signal_type>. <index>,audio_level<cr><lf></lf></cr></index></signal_type></port_index></port_format </direction_type>	Improduct The following attributes comprise the signal ID: <direction_type> – Direction of the port: IN – Input OUT – Output BOTH – Bi-directional (e.g. for RS-232) ort_format> – Type of signal on the port: HDMI USB_C STREAM ANALOG_AUDIO RS-232 IR USB_A USB_B <port_index> – The port number as printed on the front or rear panel 1 – HDMI IN 2 – USB_C IN 1 – HDMI OUT <signal_type> – Signal ID attribute: VIDEO AUDIO RS232 IR USB_c IN 1 – HDMI OUT <sindex> – Indicates a specific channel number when there are multiple channels of the same type audio_level – Audio level in dB (range between -60 to +30) depending of the ability of the product</sindex></signal_type></port_index></direction_type>	Get the audio level of a specific signal: #X-AUD-LVL? out.analog_audio.1.audio.1< CR>

Function	Description	Syntax	Response	Parameters/Attributes	Example
X-AV-SW- MODE	Set auto-switch mode per output. NOTE: This is an Extended Protocol 3000 command.	#X-AV-SW-MODE <direction_type>.<port_format>.<po rt_index>.<signal_type>.<index>,co nnection_mode<cr></cr></index></signal_type></po </port_format></direction_type>	~nn@X-AV-SW-MODE <direction_type>.<port_format >.<port_index>.<signal_type>. <index>.connection_mode<cr ><lf></lf></cr </index></signal_type></port_index></port_format </direction_type>	The following attributes comprise the signal ID: <direction_type> – Direction of the port: IN – Input OUT – Output BOTH – Bi-directional (e.g. for RS- 232) <port_format> – Type of signal on the port: HDMI USB_C STREAM ANALOG_AUDIO RS-232 IR USB_B <port_index> – The port number as printed on the front or rear panel 1 – HDMI IN 2 – USB_C IN 1 – HDMI OUT <signal_type> – Signal ID attribute: VIDEO AUDIO RS232 IR USB <index> – Indicates a specific channel number when there are multiple channels of the same type connection_mode – Connecton mode 1 – manual 2 – priority 3 – last connected</index></signal_type></port_index></port_format></direction_type>	Set auto switch mode for HDMI OUT 1 (last connected): #X-AV-SW-MODE out.hdmi.1.video.1,2 <cr></cr>
X-AV-SW- MODE?	Get auto-switch mode. NOTE: This is an Extended Protocol 3000 command.	#X-AV-SW-MODE? <direction_type> .<port_format>.<port_index>.<signal _type>.<index><cr></cr></index></signal </port_index></port_format></direction_type>	-nn@X-AV-SW-MODE <direction_type>.<port_format >.<port_index>.<signal_type>. <index>,connection_mode<cr ><lf></lf></cr </index></signal_type></port_index></port_format </direction_type>	3 - last connected The following attributes comprise the signal ID: <direction_type> - Direction of the port: IN - Input OUT - Output BOTH - Bi-directional (e.g. for RS-232) ort_format> - Type of signal on the port: HDMI USB_C STREAM ANALOG_AUDIO RS-232 IR USB_A USB_B <port_index> - The port number as printed on the front or rear panel 1 - HDMI IN 2 - USB_C IN 1 - HDMI OUT <signal_type> - Signal ID attribute: VIDEO AUDIO RS232 IR USB <index> - Indicates a specific channel number when there are multiple channels of the same type connection_mode - Connecton mode 1 - manual 2 - priority 3 - last connected</index></signal_type></port_index></direction_type>	Get auto switch mode for HDMI OUT 1: #X-AV-SW-MODE? out.hdmi.1.video.1 <cr></cr>
X-MUTE	Set mute ON/OFF on a specific signal.	#X-MUTE <direction_type>.<port_format>.<po rt_index>.<signal_type>.<index>.sta te<cr></cr></index></signal_type></po </port_format></direction_type>	~nn@ X-MUTE <direction_type><port_format >.<port_index>.<signal_type>. <index>,state<cr><lf></lf></cr></index></signal_type></port_index></port_format </direction_type>	 - direction_type> - Direction of the port: IN - Input OUT - Output BOTH - Bi-directional } <port_format> - Type of signal on the port: HDMI</port_format> USB_C ANALOG_AUDIO <port_index> - The port number as printed on the front or rear panel</port_index> 1 - HDMI IN 2 - USB_C IN 1 - HDMI OUT <signal_type> - Signal ID attribute: VIDEO</signal_type> AUDIO} <port_index> - Indicates a specific channel number when there are multiple channels of the same type state - OFF/ON (not case sensitive)</port_index> 	Mute the video on HDMIOUT 1: #X-MUTE_out.hdmi.1.video.1 ,on <cr></cr>

Function	Description	Summer	Deenenee	Devementary (Attributes	Evenue
X-MUTE?	Get mute ON/OFF on a specific signal.	#X-MUTE? <direction_type>.<port_format>.<po rt_index>.<signal_type>.<index><c R></c </index></signal_type></po </port_format></direction_type>	-nn@ X-MUTE <direction_type>.<port_format >.<port_index>.<signal_type>. <index>,state<cr><lf></lf></cr></index></signal_type></port_index></port_format </direction_type>	 diameter systemport diameter systemeter systemeter com diameter systemeter com diameter setup.com diameter setup.com <a href="</td"><td>Get the mute the video on HDMI OUT 1: #X-MUTE?_out.hdmi.1.video. 1<cr></cr></td>	Get the mute the video on HDMI OUT 1: #X-MUTE?_out.hdmi.1.video. 1 <cr></cr>
X-PRIORITY	Set priority order.	#X-PRIORITY <direction_type>.<port_format>.<po rt_index>.<signal_type>,[<direction_ type>.<port_format>.<port_index>.< signal_type>,]<cr></cr></port_index></port_format></direction_ </signal_type></po </port_format></direction_type>	~nn@X-PRIORITY <direction_type>.<port_format >.<port_index>.<signal_type>,[<direction_type>.<port_format >.<port_index>.<signal_type> ,]<cr><lf></lf></cr></signal_type></port_index></port_format </direction_type></signal_type></port_index></port_format </direction_type>	<pre><direction_type> - Direction of the port: IN - Input OUT - Output BOTH - Bi-directional } <pre><pre><pre>cyot_format> - Type of signal on the port: HDMI USB_C ANALOG_AUDIO <pre><pre>cyot_index> - The port number as printed on the front or rear panel 1 - HDMI IN 2 - USB_C IN 1 - HDMI OUT <signal_type> - Signal ID attribute: VIDEO AUDIO</signal_type></pre></pre></pre></pre></pre></direction_type></pre>	Set video priority is 3,2,1 #X-PRIORITY out.hdmi.1.video,[in.usb_c.3. video,in.hdmi.2.video, in.hdmi.1.video] <cr></cr>
X-PRIORITY?	Get priority order.	#X-PRIORITY? <direction_type>.<port_format>.<po rt_index>.<signal_type><cr></cr></signal_type></po </port_format></direction_type>	<pre>~nn@X-PRIORITY <direction_type>.cport_format >.cport_index>.csignal_type>.[</direction_type></pre>	<pre><direction_type> – Direction of the port: IN – Input OUT – Output BOTH – Bi-directional } <pre>cypot_format> – Type of signal on the port: HDMI USB_C ANALOG_AUDIO <port_index> – The port number as printed on the front or rear panel 1 – HDMI IN 2 – USB_C IN 1 – HDMI OUT <signal_type> – Signal ID attribute: VIDEO AUDIO</signal_type></port_index></pre></direction_type></pre>	Get video priority #X-PRIORITY? out.hdmi.1.video <cr></cr>
X-ROUTE	Send routing command. NOTE: It is recommended to use the command #SIGNALS-LIST to get the list of all signal IDs available in the system and which can be used in this command. Video 1 is the default port in this command and is implied even if not written: #X-ROUTE out.sdi.5,in.sdi.1 <cr > is interpreted as: #X-ROUTE out.sdi.5,in.sdi.1<cr> This is an Extended Protocol 3000 command. Brackets [' and]' are reserved Protocol 3000 characters that define a list of parameters as in [a,b,c,d].</cr></cr 	#X-ROUTE <pre>k-direction_type1>.<pre>crt_index1>.<signal_type1>.<index1 >],<direction_type2>.<port_type2 >.<port_index2>.<signal_type2>.<in dex2><cr></cr></in </signal_type2></port_index2></port_type2 </direction_type2></index1 </signal_type1></pre></pre>	-nn@X-ROUTE <pre>[vdirection_type1>.<port_type1 >.<port_index1>],vdirection_type 2>.<port_type2>.<port_index2 >.<signal_type2>.<index2><c R><lf></lf></c </index2></signal_type2></port_index2 </port_type2></port_index1></port_type1 </pre>	The following attributes comprise the signal ID: <direction_type> – Direction of the port: IN – Input OUT – Output BOTH – Bi-directional (e.g. for RS- 232) <port_format> – Type of signal on the port: HDMI HDBT ANALOG_AUDIO RS-232 IR USB_A USB_B STREAM <port_index> – The port number as printed on the front or rear panel <signal_type> – Signal ID attribute: VIDEO AUDIO RS232 IR USB <index> – Indicates a specific channel number when there are multiple channels of the same type</index></signal_type></port_index></port_format></direction_type>	Route HDMI IN 2 to HDMI OUT 1: #X-ROUTE out.hdmi.1.video.1,in.hdmi.2. video.1 <cr></cr>

Function	Description	Syntax	Response	Parameters/Attributes	Example
X-ROUTE?	Get routing status. NOTE: It is recommended to use the command #SIGNALS-LIST to get the list of all signal IDs available in the system and which can be used in this command. VIDEO.1 are the default <signal_type> and <index> in this command and are implied even if not written: #X-ROUTE out.sdi.5,in.sdi.1<cr > is interpreted as: #X-ROUTE out.sdi.5.video.1,in.s di.1.video.1<cr> This is an Extended Protocol 3000 command.</cr></cr </index></signal_type>	#X-ROUTE? <direction_type1>.<port_type1>.<po rt_index1>.<signal_type1>.<index1> <cr></cr></index1></signal_type1></po </port_type1></direction_type1>	~nn@X-ROUTE <direction_type1>.<port_type1 >.<port_index1>.<signal_type1 >.<index1>,<direction_type2>. <port_type2>.<port_index2>.<s ignal_type2>.<index2><cr><l F></l </cr></index2></s </port_index2></port_type2></direction_type2></index1></signal_type1 </port_index1></port_type1 </direction_type1>	The following attributes comprise the signal ID: <direction_type> – Direction of the port: IN – Input OUT – Output BOTH – BI-directional (e.g. for RS- 232) <port_format> – Type of signal on the port: HDMI HDBT ANALOG_AUDIO RS-232 IR USB_A USB_B STREAM <port_index> – The port number as printed on the front or rear panel <signal_type> – Signal ID attribute: VIDEO AUDIO RS232 IR USB <index> – Indicates a specific channel number when there are multiple channels of the same type</index></signal_type></port_index></port_format></direction_type>	Get the routing status for HDMI out: #X-ROUTE? out.hdmi.1.video.1 <cr></cr>

結果とエラーコード

シンタックス

エラーが発生した場合、デバイスはエラーメッセージで応答します。

エラーメッセージの構文:

- ~NN@ERR XXX<CR><LF>:一般的なエラーの場合、特定コマンドはありません
- ~NN@CMD ERR XXX<CR><LF>: 特定のコマンドの場合
- NN: デバイスのマシン番号、デフォルト= 01
- **XXX**:エラーコード

エラーコード

Error Name	Error	Description
	Code	
P3K_NO_ERROR	0	No error
ERR_PROTOCOL_SYNTAX	1	Protocol syntax
ERR_COMMAND_NOT_AVAILABLE	2	Command not available
ERR_PARAMETER_OUT_OF_RANGE	3	Parameter out of range
ERR_UNAUTHORIZED_ACCESS	4	Unauthorized access
ERR_INTERNAL_FW_ERROR	5	Internal FW error
ERR_BUSY	6	Protocol busy
ERR_WRONG_CRC	7	Wrong CRC
ERR_TIMEDOUT	8	Timeout
ERR_RESERVED	9	(Reserved)
ERR_FW_NOT_ENOUGH_SPACE	10	Not enough space for data (firmware, FPGA)
ERR_FS_NOT_ENOUGH_SPACE	11	Not enough space – file system
ERR_FS_FILE_NOT_EXISTS	12	File does not exist
ERR_FS_FILE_CANT_CREATED	13	File can't be created
ERR_FS_FILE_CANT_OPEN	14	File can't open
ERR_FEATURE_NOT_SUPPORTED	15	Feature is not supported
ERR_RESERVED_2	16	(Reserved)
ERR_RESERVED_3	17	(Reserved)
ERR_RESERVED_4	18	(Reserved)
ERR_RESERVED_5	19	(Reserved)
ERR_RESERVED_6	20	(Reserved)
ERR_PACKET_CRC	21	Packet CRC error
ERR_PACKET_MISSED	22	Packet number isn't expected (missing packet)
ERR_PACKET_SIZE	23	Packet size is wrong
ERR_RESERVED_7	24	(Reserved)
ERR_RESERVED_8	25	(Reserved)
ERR_RESERVED_9	26	(Reserved)
ERR_RESERVED_10	27	(Reserved)
ERR_RESERVED_11	28	(Reserved)
ERR_RESERVED_12	29	(Reserved)
ERR_EDID_CORRUPTED	30	EDID corrupted
ERR_NON_LISTED	31	Device specific errors
ERR_SAME_CRC	32	File has the same CRC – not changed
ERR_WRONG_MODE	33	Wrong operation mode
ERR_NOT_CONFIGURED	34	Device/chip was not initialized





SAFETY WARNING Disconnect the unit from the power supply before opening andservicing

For the latest information on our products and a list of Kramer distributors, visit our website where updates to this user manual may be found.

We welcome your questions, comments, and feedback.

The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. All brand names, product names, and trademarks are the property of their respective owners.