



# ユーザー マニュアル



VS-62H

6x2 HDMI マトリックス スイッチャー



はじめに	1
ご使用前に	1
概要	3
IRトランスミッタの使用	3
VS-62H 各部の名称および機能	4
VS-62Hを設置する	6
VS-62Hの接続	7
シリアルコントローラをRS-232経由でVS-62Hに接続する	7
イーサネット経由でのVS-62Hへの接続	7
接点リモートスイッチの接続	9
RJ-45コネクタの配線	10
主な操作	11
自動信号検出	11
入力スイッチングモード	11
EDID操作	11
ステップイン機能	11
VS-62H 6x2 HDMIマトリックススイッチャーの操作	12
入出力のスイッチング	12
出力からのEDID取得	12
	13
フロントハネルのホタンのロックとロック解除	13
	13
VS-62Hの設定とメンテナン人	14
テイツノスイツナの設定	14
VS-62Hの上場出何時設正へのリセット	14
ノアームリエアのアッノクレート	14
	15
VS-OZEDVWEDハーンにノブワリでアクセスする	15
	10
デバイス設定ページ	20
ファームウェアアップグレードページ	20
クレイマーについて(About Usページ)	20
什様	21
デフォルト通信パラメーター	21
デフォルトFDID	
プロトコル 3000	24
プロトコル 3000 を理解する	2 <b>-</b> 74
プロトコル 3000 コマンド	24
ま 二、二、ここで <b>二</b> 、ここ、 結果とエラーコード	39

# はじめに

クレイマーエレクトロニクスにようこそ! 1981年以来クレイマーエレクトロニクスは、映像・音声 プレゼンテーション及び放送のプロフェッショナルが日常的に直面する様々な問題に対して、ユニーク で創造的、且つ手ごろな価格のソリューションを提供してきました。 近年、私たちはほとんどのラインを再設計、およびアップグレードし最高の物をさらに良くしました!

この度は、VS-62H HDMI マトリックススイッチャーをお買い上げ頂き有難うございます。 VS-62Hは、次のような各種アプリケーションに最適です。

- 会議室
- 教育関連
- サービス関連

## ご使用前に

下記を行う事をお勧めします:

- 機器を慎重に開梱し、箱と梱包資材は以後の運搬用に保管してください。
- ユーザーマニュアルをご熟読ください。

www.kramerav.com/downloads/VS-62H に接続して最新のユーザーマニュアル、アプリ ケーションプログラムを確認し、ファームウェアのアップグレードが利用可能か確認して下さい。

### 最適な動作を得るために

- 信号干渉を避けるため、良質なケーブル(クレイマー社の高性能・高分解能ケーブルを 推奨します)のみを使用し、(低品質ケーブルに関連することが多い)信号品質の低下、 ノイズレベルの上昇に気を付けて下さい。
- ケーブルをきつく束ねたり、たるみを巻きつけないでください。
- 信号品質に悪影響を与える可能性のある隣接する電気器具からの干渉を避けてください。
- 湿度の高い場所、直射日光の当たる場所、埃の多い場所には設置しないでください。

## 安全上の注意



注意:

警告:

- 本機は、建物内でのみ使用してください。建物内に設置されている他の機器にのみ 接続できます。
- リレー端子とGPI/Oポートを備えた製品については、端子の横またはユーザーマニュアル にある外部接続の許容定格を参照にしてください。
- •本体内には、お客様自身が修理できる部品はありません。



- 製品に付属の電源コードのみを使用してください。
- 継続的なリスク保護を確実にするために、ユニットの下部にある製品ラベルに指定されている定格に従ってのみヒューズを交換してください。

## **Recycling Kramer Products**

The Waste Electrical and Electronic Equipment (WEEE) Directive 2002/96/EC aims to reduce the amount of WEEE sent for disposal to landfill or incineration by requiring it to be collected and recycled. To comply with the WEEE Directive, Kramer Electronics has made arrangements with the European Advanced Recycling Network (EARN) and will cover any costs of treatment, recycling and recovery of waste Kramer Electronics branded equipment on arrival at the EARN facility. For details of Kramer's recycling arrangements in your particular country go to our recycling pages at <a href="https://www.kramerav.com/support/recycling">www.kramerav.com/support/recycling</a>.

VS-62HはHDMI信号用の高品質6x2マトリックススイッチャです。 入力信号をリクロックおよびイコライジングして、どの入力の信号をどの出力にも、 あるいは全ての出力に対しても同時に出力することが出来ます。 HDMI、HDMI High-Definition Multimedia Interface、まよび HDMI ロゴは、HDMI Licensing Administrator, Inc. の商標または登録商標です

VS-62Hの特徴は以下の通りです

- ・8.91Gbpsのデータ転送速度(グラフィックスチャンネルあたり2.97Gbps) UXGA/2K/4Kまでの解像度に対応します
- ・HDCP対応
- ・True video clock detection:ビデオクロック検出機能
- ・自動スイッチングモード:ラストコネクティッド/プライオリティの2種類 (ラストコネクティッド:最後に接続された入力を選択、プライオリティ:優先入力を選択)
- ・HDMIサポート: 3D、Deep Color、x.v.Color™、Lip Sync、Dolby® TrueHD、 Dolby Digital Plus、DTS-HD®、7.1 multi-channel audio
- ・I-EDIDPro<sup>™</sup> Kramer Intelligent EDID Processing<sup>™</sup>: クレイマーの知的EDID対応と処理により、 HDMIシステムにおけるプラグ&プレイ動作を保証
- SID-X3NやDIP-31(HECをサポートするHDMIケーブルで、HDMIイーサネットチャネルを使用) などの互換性のあるステップインデバイスと組み合わせて使用することで、 プログラマブルステップイン機能を実現
- ・不揮発性EDIDメモリ
- ・Kramer reKlocking<sup>™</sup> & Equalization Technology:より長く伝送するためデジタル信号を補償
- ・IPネットワーク接続:スタティック又は、DHCP IPアドレスに対応
- ・リモート設定と操作が可能な内蔵Webページ
- ・ロックボタン:フロントパネル上のボタンによる望まれない変更を防止
- ・クレイマープロトコル3000対応

VS-62Hは、フロントパネルボタンあるいは下記のリモート機能を通じて制御可能です:

- ・PC、タッチスクリーンシステム、および他のシリアルコントローラーによるRS-232制御
- ・クレイマー RC-IR3 赤外線リモートコントローラー
- ・PC接続LAN経由のEthernetポート制御
- ・外部のリモートIRレシーバー(オプション P3 参照)

## IRトランスミッタの使用

RC-IR3 IRトランスミッタを使用して、フロントパネルの内蔵IRレシーバー、または

オプションの外部IRレシーバー(P/N C-A35M/IRR-50など)を介して本機を制御できます。 外付けIRレシーバーは、本機から最大15m離れた場所に設置できます。

この距離は、3本の延長ケーブル(例: P/N C-A35M / A35F-50)を使用すると最大60mまで 延長できます。

外付けIRレシーバーを使用する際は、Kramer代理店に、内部IR接続ケーブル

(例: P/N: 505-70434010-S)と後面パネルに3.5mmコネクタの取り付けを御依頼下さい。 外部IRレシーバーはREMOTE IR 3.5mmコネクタに接続します。

# VS-62H 各部の名称および機能

図1でVS-62Hのフロントパネルを説明します。



No.		名称	機能
1	IRインジ	ケーターI FD	赤外線リモートコントローラーから信号を受信すると
-			黄色に点灯します。
2	IRレシーバー		赤外線受光部
			6入力の1つを押して、出力2の選択をします(P12 参照)。
3		出力2(入力1-6)	現在選択されている入力ボタンをもう一度押すと
	入力選択		出力をミュートします。
	ボタン		6入力の1つを押して、出力1の選択をします。
4		出力1 (入力1-6)	現在選択されている入力ボタンをもう一度押すと
			出力をミュートします。
5	MUTE 😂	ュートボタン	両方の出力信号のミュートを切替える時に押します(P13 参照)
6	EDID ボタ	シ	EDIDを取得する時に押します(P12 参照)
7	電源LED		通電中に点灯します
8	LOCKボタ	シー	フロントパネルボタンのロック/解除を切替える時に押し続けます。
			テストパターンジェネレータを使用する時に押します。
9	FUNCTIO	Nボタン	ジェネレータが動作中は、入力ボタンを押して
			テストパターンを選択します。

#### 図2でVS-62Hのリアパネルを説明します。



図2 VS-62Hリアパネル

No.	名称		機能		
			外部IRレシーバー取り付け用開口部。キャップで塞がれています。		
1	リモートコ	Rオーブニング	内部IR接続ケーブルの端にある3.5mmミニジャックは、		
			この開口部に取り付けます。		
2	接占	出力1への入力選択	出力1用の最大6個の接点リモート、		
-			入力選択スイッチに接続します (P9 参照)		
ر د	一 一 一 一 一 一 一 一 一 一 一 一 一 一 一 一 一 一 一	出力2への入力選択	出力2用の最大6個の接点リモート、		
5	L DIK	山/)2/ (0)/(/)進)/	入力選択スイッチに接続します (P9 参照)		
4	RS-232 3ピンターミナルブロック		PC/シリアルコントローラーに接続します。		
5	セットアップ8ピンディップスイッチ		デバイスの構成を設定します(P14 参照)		
6	PROG VIA USBコネクタ		ファームウェアを更新するのに、PCに接続します(P14 参照)		
7	RS-232ファームウエア更新		RS-232ポートでファームウェアを更新する時に押します。		
<u> </u>	スイッチ		スイッチ		リリースすると通常操作。
8	ETHERNE	T RJ-45コネクタ	LAN経由又は、直接PCに接続します		
0	ロセットフィッチ		電源を入れる時に押すと、工場出荷時のデフォルト状態に		
,	96919	(19)	リセットします(P14 参照)		
10	5V DC電源	ショネクタ	付属のACアダプタに接続します。 センターピン プラス。		
11	HDMI入力	ロネクタ	最大6入力までのHDMIソースに接続します(P7 参照)		
12	HDMI出力コネクタ		HDMI機器に接続します		

# VS-62Hを設置する

このセクションでは、VS-62Hの取り付け手順について説明します。 設置する前に環境が推奨範囲内にあることを確認して下さい:

- 動作温度: 0℃~40℃
  - ●保管温度: -40℃~70℃
  - 湿度: 10%~90%、結露無きこと
  - VS-62Hは、正しい水平位置に直立させる必要があります。

注意:

• ケーブルや電源を接続する前に、VS-62Hを設置してください

警告:

Ĭ

- ●環境(最大周囲温度や空気の流れ等)がデバイスに適合していることを確認して下さい
- 装置に不均一な負荷をかけないでください
- •回路の過負荷を回避するために、装置の記載されている定格を適切に順守してください
- ラックに設置する際は、確実な接地を維持してください

VS-62H をテーブルや棚に取り付けるには

- 付属のゴム脚を取り付け、ユニットを平らな面に設置します
- 付属のブラケットでユニットの両側を固定し設置してください



詳細は、 www.kramerav.com/downloads/VS-62H を参照ください



図3 VS-62H 6x2 HDMIマトリックススイッチャーの接続

VS-62H 6x2 HDMIマトリックススイッチャーを、図3の例の様に接続します。

- 1) 最大6HDMIソース(例: Blu-ray Discプレーヤー)をHDMI入力コネクタに接続します。
- 2) 2つのHDMI出力コネクタを、最大2つのHDMI機器入力(例えば、内蔵スピーカ付きLCDディスプレイ)に接続します。
- 3)必要に応じて、PC /コントローラをRS-232ポート(P7 参照)及び/又はイーサネットポート (P8 参照)に接続します。
- 4) ACアダプタを本機に接続し、ACアダプタを主電源に接続します(図3には示されていません)。
- 5) 必要に応じて、EDIDを取得します (P11 参照)。

### シリアルコントローラをRS-232経由でVS-62Hに接続する

シリアルコントローラをVS-62Hに下記のように接続する:

シリアルコントローラのRS-232 9ピンD-Subシリアルポートから:

- ・VS-62H RS-232ターミナルブロックのTXピンに2番ピン
- ・VS-62H RS-232ターミナルブロックのRXピンに3ピン
- ・VS-62H RS-232ターミナルブロックのGNDピンに5番ピン

### イーサネット経由でのVS-62Hへの接続

次のいずれかの方法でイーサネット経由でVS-62Hに接続できます。

・クロスケーブルを使用してPCに直接接続する(P8参照)

・ストレートケーブル (P9 参照)を使用して、ネットワークハブ、スイッチ、又は ルーター経由で、接続する。

注:ルータ経由で接続する場合で、ITシステムがIPv6ベースの場合は、 各固有のインストール手順についてIT部門にご相談ください。

### PCとEthernetポートを直接接続する(クロスオーバーケーブル)

本機のEthernetポートとPCのEthernetポートを、RJ-45コネクタのクロスオーバーケーブル (通称クロスケーブル)で接続することができます。 注記:この状態の接続では、VS-62Hの工場出荷デフォルトのIPアドレスでの接続を推奨します。 (デフォルトのIPアドレスは、192.168.1.39) Ethernetポートに接続後、PCを以下のように設定してください

- 1) [スタート]> [コントロールパネル]> [ネットワークと共有センター]をクリックします。
- 2) [アダプタ設定の変更]をクリックします。
- 3) 本機への接続に使用するネットワークアダプタをハイライト表示し、この接続の設定の 変更をクリックします。 図3に示すように、選択したネットワークアダプタの[ローカル エリア接続のプロパティ]ウィンドウが表示されます。

			【   样	梼成(C)
の接続は次の	D項目を使用しま	ます(0):	2	
🗹 📙 QoS .	パケット スケジュ	-2		a a
🗹 🔡 Micro	osoft ネットワーク	フ用ファイルとプリング	2一共有	
ロエインタ	シーネット ブロトコ	ル バージョン 6 (TC	CP/IPv6)	
⊻ <u>→</u> 1ンタ ☑ <u>→</u> Links	·ーネット フロトコ	ル ハーション 4 (10	SP/IPV4) Trong I/O, Decision	-
💌 🚢 Link-	-Layer Topolog -Layer Topolog	y Discovery Mapp v Discovery Rest	oonder	
CHIN	Layer Topolog	y Discovery ries	onder	
-				
•		, III		
< [ インストーノ	V(N) ] [		) [ 70/	ペティ(R)

図4 ローカルエリア接続プロパティウインドウ

- 4) ITシステムの条件に応じて、インターネットプロトコルバージョン6(TCP / IPv6)
   又は、インターネットプロトコルバージョン4(TCP / IPv4)のいずれかをハイライト
   表示します。
   ローカルエリア接続プロパティが現れます。
- 5) プロパティボタン(図4、5)をクリックします

「人名の権政					
ネットワークでこの機能がサポートされてい きます。サポートされていない場合は、ネッ てください。	る場合は、IP 小ワーク管理者	設定	を自動 動切な	的に取i IP 設定	得することが を問い合わ
④ IP アドレスを自動的に取得する(0)	)				
一〇) 次の IP アドレスを使う(S):					
IP アドレス(I):					
サブネット マスク(U)					
デフォルト ゲートウェイ(D):					
ONS サーバーのアドレスを自動的(	こ取得する(B)				
③ 次の DNS サーバーのアドレスを使	Ⴢ(E):				
優先 DNS サーバー(P):	1			- 38	
代替 DNS サーバー(A):		<b>.</b> :	.8	38	
終了時に設定を検証する(L)				詳約	■設定(\/)

図5 インターネットプロトコルバージョン4プロパティウインドウ

6) "次の IP アドレスを使う"を選択し、図6に示すように入力します。

TCP / IPv4の場合、IT部門が提供する192.168.1.1~192.168.1.255(192.168.1.39を除く)の範囲の任意のIPアドレスを使用できます。

ットワークでこの機能がサポートされている ます。 サポートされていない場合は、ネット! ( ださい)。	場合は、IP フーク管理者	設定 者(こ)	Eを自 適切	動的 な IP	5(2月 1253	収得する。 定を問い
● IP アドレスを自動的に取得する(O)						
<ul> <li>シングの IP アドレスを使う(S):</li> </ul>						
IP アドレス(I):	192	. 1	68.	1	33	2
サブネット マスク(U):	255	. 2	55.	255	-85	0
デフォルト ゲートウェイ(D):	Ē	8	- 8		187	
● DNS サーバーのアドレスを自動的に取	V得する(B)					
● 次の DNS サーバーのアドレスを使う(E	E):					
優先 DNS サーバー(P):		83	53		-83	
代替 DNS サーバー(A):		23	83		83	
◎ 約フ時(=設守た検証する(!)				ſ	5¥	-2 <b>0</b> ≣∿⇔

図6 インターネットプロトコルバージョン4プロパティウインドウ

7) OK、続いて閉じるをクリックします

#### ネットワークハブ経由でEthernetポートを接続する(ストレートケーブル)

VS-62HのEthernetポートはネットワークハブ、又はネットワークルーターのEthernet ポートとRJ45コネクタのストレートケーブルで接続することができます。

## 接点リモートスイッチの接続

VS-62Hをリモート制御する為に、出力ごとに最大6個の接点リモートスイッチを 接続できます。 これらのスイッチは、VS-62Hのフロントパネルにある入力選択 ボタンと同じ働きをします。

図7は、接点リモート スイッチのターミナルブロックへの接続を示します。



## RJ-45コネクタの配線

RJ-45コネクタのストレート ピン-ピンケーブルを使用してピン配列を示します。

🁔 ケーブルの接地シールドをコネクターに接続/はんだ付けすることをお勧めします。

E	EIA /TIA 568B			
ピン	配線色			
1	オレンジ / 白			
2	オレンジ			
3	緑/白			
4	青			
5	青/白			
6	緑			
7	茶/白			
8	茶			
6 7 8	校 茶/白 茶			



## 主な操作

ここでは、VS-62Hの操作方法について説明します。

- ・自動信号検出(P11参照)
- ・入力スイッチングモード (P11 参照)
- ・EDID操作(P11 参照)

#### 自動信号検出

VS-62Hは、ビデオ同期またはクロック信号の有無を見て、入力ビデオ信号を自動的に検出します。

#### 入力スイッチングモード

#### マニュアルモード

マニュアルスイッチングモードでは、フロントパネルのボタン選択、又はリモートコマンド選択に 従ってスイッチングが実行されます。

#### オートモード

オートスイッチングは、次のいずれかの方法で実行されます。

- ・入力プライオリティ(優先入力): アクティブな入力が検出されると、最も優先度の高い入力が 自動的に選択されます。入力優先度は、入力番号(1)が最優先で、以下(2~6)の順です。
- ・ラストコネクティッド(最後に接続した入力を選択):デバイスは自動的に一番最後に接続された入力を選択します。このソースが非アクティブになると、デバイスは自動的に最後に接続されたアクティブな入力に切り替えます。デバイスをオンにして複数の入力がアクティブな場合最も優先度の高い入力が選択されます。デバイスがオートモードになっているときにマニュアルで選択すると、デバイスはマニュアルオーバーライドモードになります。マニュアルで選択された入力は、アクティブである限り選択されたままです。
- マニュアルで選択した入力が非アクティブになると、デバイスは自動モードに戻ります。

#### EDID操作

VS-62Hには、全ての入力に保存されているデフォルトのEDID(P22 参照)があります。 このEDIDは、次のいずれかの方法で選択する事が出来ます:

- ・Protocol 3000コマンド(P25 参照)を使用して1つ以上の入力にアップロードされるカスタムEDID 又は
- ・フロントパネルのボタン(P12 参照)、プロトコル3000コマンド、又はWebページのいずれかを 使用して、出力に接続されたディスプレイデバイスのEDIDを選択できます。

EDIDは不揮発性メモリに記憶され、デバイスの電源投入時に最後の有効なEDIDが使用されます。

#### ステップイン機能

VS-62Hは、適切なHDMIトランスミッタ(例:SID-X3N又はDIP-31)に、HEC対応の HDMIケーブルを使用して接続すると、ステップインスイッチャーとして機能します。 リモートデバイスのボタンアクションを割り当てるには、Webページ(P15参照)を使用します。 デフォルトのボタンアクションを次の表に示します。

最大3つのボタンを同時にアクティブにする事が出来ます。

コマンド	動作
Echo	ユーザーボタンによってトリガーされるルームコントロール(ライト、スクリーン等)等の
エコー	様々なタスクを実行するように、接続されたコントローラーをプログラムする事が出来ます。
OUT1	現在のステップイン入力を出力1にスイッチング
OUT2	現在のステップイン入力を出力2にスイッチング

## VS-62H 6x2 HDMIマトリックススイッチャーの操作

ここでは、VS-62Hの操作方法について説明します。

- ・入出力のスイッチング (P12 参照)
- ・出力からEDIDを取得する (P12 参照)
- ・出力のミュートとミュート解除(P13参照)
- ・フロントパネルのボタンのロックとロック解除(P13 参照)
- ・テストパターンの選択 (P13 参照)

#### 入出力のスイッチング

入出力を切り替えるには(たとえば、入力 5を出力 2に):下部のOutput(To OUT 2)列のInput 5ボタンを押します。 LEDが赤に点灯し、出力2に入力5がスイッチングされます。

#### 出力からのEDID取得

OUT1またはOUT2からEDIDを取得し、6入力の何れか又は全てにコピーして、 不揮発性メモリに記憶させる事が出来ます。入力の一部又は全てを、デフォルトの EDIDにリセットする事も出来ます。

出力から1つ以上の入力にEDIDをコピーするには:

- 1) EDIDボタンを押してEDID設定モードにします。 EDIDボタンが点灯します。
- 注意:10秒間ボタンの操作がないと、本機はEDID設定モードを自動的に通常動作に戻り、 EDIDボタンは消灯し、変更は実行されません。
- To OUT 1(上)列の、Output 1からEDIDをコピーしたいInputボタンを夫々押します。
   各選択されたInput LEDが点灯します。
- To OUT 2(下)行の、Output 2からEDIDをコピーしたいInputボタンを夫々押します。
   各選択されたInput LEDが点灯します。
- 4) EDIDボタンを押します。ボタンが消灯し、EDIDの変更が保存されます。

デフォルトのEDIDを1つまたは複数の入力にコピーするには:

- 1) EDIDボタンを押してEDID設定モードにします。 EDIDボタンが点灯します。
- 2) デフォルトEDIDをコピーしたい各インプットについて、To OUT 1とTo OUT 2のボタン を同時に押してください。上段と下段の両方の入力LEDが点灯します。
- 3) EDIDボタンを押します。ボタンが消灯し、EDIDの変更が保存されます。

### 出力のミュートとミュート解除

両方の出力を同時にミュート/ミュート解除するには:

- 1) ミュートボタンを押します。 ミュートボタンが点灯し、出力がミュートされます。
- 2) 点灯しているミュートボタンを押します。出力はミュート解除され、ボタンは消灯します。

1つの出力をミュートしてミュート解除するには:

- 現在選択されている(点灯している)入力ボタンを押します。
   出力がミュートされ、ボタンが点滅します。
- 現在ミュートされている(点滅している)入力ボタンを押します。
   出力のミュートが解除され、ボタンが点灯します。

#### フロントパネルのボタンのロックとロック解除

フロントパネルのボタンをロックおよびロック解除するには:

- ロックボタンを押し続けます。
   フロントパネルのボタンがロックされ、ボタンが点灯します。
   キュー、ウェックボクシンを押し続けます。
- もう一度ロックボタンを押し続けます。
   フロントパネルのボタンはロックが解除され、ボタンは消灯します。

### テストパターンの生成

トラブルシューティングの為に、VS-62Hはいくつかのテストパターンを出力する事が出来ます。 出力にテストパターンを生成するには:

- 1) Functionボタンを押します。ボタンが点灯します。
- 何れかの入力ボタンを押してテストパターンを選択します。
   選択したテストパターンが出力されます。

テストパターンジェネレータを終了するには:

・点灯しているFunctionボタンを押します。 テストパターンが終了し、ボタンが消灯します。

図8は、各テストパターンを示します。



各テストパターンは、RGB 720x480/59Hz、 8ビットカラーで出力されます。



図8 各テストパターン

## VS-62Hの設定とメンテナンス

ここでは、VS-62Hの構成とメンテナンスについて説明します。

- ・DIPスイッチの設定 (P14 参照)
- ・デバイスを出荷時のデフォルト設定にリセットする(P14参照)
- ・ファームウェアのアップグレード (P14 参照)

## ディップスイッチの設定

ディップスイッチはVS-62Hの動作を決定します。

全てのディップスイッチはデフォルトでオフになっています。

スイッチNo.	機能	内容
		オン:全ての入力に対してHDCP無効
1	入力に対するHDCPサポート	オフ:HDCPサポートプロトコル3000コマンドで
		定義されている入力に対してHDCP対応
2	出力1ビデオスイッチングモード	オン:オート
2		オフ:マニュアル
		2がオート(オン)に設定されている場合:
2	出力1ラストコネクティッド	オン:ラストコネクティッドモードを有効にする
5	/プライオリティーモード	オフ:各入力の優先順位が入力番号で定義される
		プライオリティーモードを有効にする。(1が最優先)
4	出力2ビデオフイッチングモード	オン:オート
· ·		オフ:マニュアル
		4がオート(オン)に設定されている場合:
5	出力2ラストコネクティッド	オン:ラストコネクティッドモードを有効にする
5	/プライオリティーモード	オフ:各入力の優先順位が入力番号で定義される
		プライオリティーモードを有効にする。(1が最優先)

### VS-62Hの工場出荷時設定へのリセット

本機を出荷時のデフォルト設定にリセットするには:

- 1)本機の電源を切ります。
- 2) リアパネルのリセットボタンを押し続けます。
- 3) リセットボタンを押しながら、本機の電源を入れます。
- 4)数秒待ってボタンを離します。
   本機は出荷時の設定にリセットされます。

## ファームウェアのアップグレード

VS-62Hは、次のいずれかの方法でアップグレードできます。

- ・ ミニUSB
- RS-232
- ・ イーサネット

ファームウェアのアップグレード方法については、 「K-Uploadソフトウェア」のマニュアルを参照してください。

# WebページからVS-62Hを遠隔操作する

VS-62Hは、内蔵Webページを使用してリモートで操作できます。 Webページには、Webブラウザとイーサネット接続を使用してアクセスします。 接続を試みる前に:

P6~7の手順を実行します JavaScriptが有効になっていることを確認します

## VS-62HのWebページにブラウザでアクセスする

1)インタネットブラウザを開く。

2)VS-62HのIPアドレスをIPアドレスを、ブラウザのアドレスウインドウに入力する。

```
( 192.1681.39
```

,0 + →

Loadingページが表れます。



図9 Loadingページ

Loadingページの直後に、本機とWebページのバージョンに関する情報を表示する General Infoページが表示されます。

全部で6ページあります。

- ・General Info (P15 参照)
- ・ルーティング (P16 参照)
- ・EDID (P19 参照)
- ・デバイスの設定(P20参照)
- ・ファームウェアのアップデート(P20参照)
- ・クレイマーについて(About Usページ)(P20参照)

Kramer VS-61H Controller			· · · ·
Serveral 201			
Routing			
/ EDID			
Device Setting			
Firmware Update			
About Un			
	Genera	l Info	
	Model name	VS-62H	
	Firmware version	F0.09.11650	
	Setal number	12345678901	
	Web version		

図10 General Info ページ

General Info ページには、デバイスに関する情報を表示するだけでなく、ページの右上 にフロントパネルボタンのロックとロック解除を可能にするボタン(図11参照)があります。



## ルーティングページ

VS-62Hルーティングページでは、入力/出力の切り替えやHDCPサポートの選択 などの操作を実行できます。



図12 ルーティングページ

No.	項目	内容
1	出力ボタン1と2	2出力選択ボタン、信号識別表示、及びオーディオ/ビデオミュート
2	入力タブ	6入力選択ボタン、ポートと信号の識別表示
3	パターンボタンタブ	6ビデオパターン選択ボタン



#### 図13 出力ボタン

No.	項目	内容
1	出力ボタン番号	出力番号を表示します。
2	HDCPインジケータ	出力ポートがHDCPをサポートしているかどうかを示します。
3	ビデオミュートボタン	ボタンをクリックしてビデオをミュートします
4	信号インジケータ	出力に接続されている機器があるかどうかを示します。
5	モードインジケータ	現在使用されているスイッチングモードを示します。



#### 図14 入力ボタン

No.	項目	内容
1	入力ボタン番号	入力番号を表示します。
0	入力タイプと信号インジケータ	入力のタイプ、および入力に信号の有無を示します
3	HDCP選択ボタン	ボタンをクリックして入力のHDCP対応をオン又はオフにします。
4	HDCPコンテンツインジケータ	入力信号がHDCPで保護されているかどうかを示します。
9	リモートデバイスコントロールボタン	ボタンをクリックすると、この入力に接続されたリモートデバイスの コントロールウィンドウが表示されます(P17 参照)

## 入出力のスイッチング

入出力を切り替えるには(例えば、入力2を出力2に):

- 出力ボタン2をクリックします。
   ボタンの色が紫色に変わり、出力が選択されます。
- 2) 入力ボタン2をクリックします。
   ボタンの色が紫色に変わり、出力が入力2に切り替わります。

### リモート・トランスミッタの制御

VS-62Hに接続されている互換性のあるリモートトランスミッタ(たとえば、SID-X3N又はDIP-31)は Webページを使用して制御できます。(図14参照)

SID-X3	N			
HDMI	DP	DVI	PC	
Remot	e Butto	ons		
#	Echo O	ut1 Out2		
Btn	1			
OI	<	CAN	ICEL	
モートデノ	バイスニ	コントロ	ールウィ	<b>し</b> イン

図15

VS-62Hでは、リモートモジュールの汎用ボタンをプログラムすることができます。 この表には、各ボタンに定義されている機能が示されています。 オプションは次のとおりです。

・HDMI、DP、DVI、PC:いずれかの入力を選択します

- ・エコー:接続されたコントローラを、ルームコントロール(ライト、スクリーンなど)などの
   ユーザーボタンによってトリガされたさまざまなタスクを実行するようにプログラム
   することができます。
- ・Out 1: 出力1への現在のステップイン入力にスイッチング
- ・Out 2: 出力2への現在のステップイン入力にスイッチング

注:これらの設定は入力ごとに行われ、リモートSID-X3Nが別のSID-X3Nと入替えても有効です。

Echo、Out 1、Out 2の3つまでのボタンを同時にアクティブにすることができます。

## ビデオ入力としてテストパターンを使用

6種の内蔵ビデオテストパターンの1つを、ビデオ入力として使用できます。

Routing		
Outputs	Inputs	Patterns
Output 1   No signal	Pattern 1	
Output 2 No signal	Pattern 2	8
	Pattern 3	
	Pattern 4	
	Pattern 5	
	Pattern 6	

図16 テストパターンタブ

出力へテストパターンを選択するには:

- パターンタブをクリックします。
   6種のテストパターンボタンが表示されます。
- 2)必要な出力をクリックして選択します。
   ボタンの色が変わります。
- 3)必要なテストパターンボタンをクリックします。
   ボタンの色が変わり、選択したテストパターンが出力されます。

## EDIDページ

VS-62H EDIDページでは、以下のEDIDデータを1つ以上の入力にコピーできます。

- ・出力
- ・入力
- ・EDIDデータファイル

EDID		
SOURCE	EDID SUMMARY	DESTINATION
DEFAULT	VS-62H	Inputs
Outputs	1280x720	Input 1 HDMI
Output 1 Not connected	258	Input 2
Output 2 Not connected	Input 1 TO	Input 3
Inputs	COPY	HDMI
Input 1 HDMI - No signal		Input 4 номі
Input 2 HDMI - No signal		Input 5 номі
Input 3 HDMI - No signal		Input 6 номі
Input 4 HDMI - No signal		
Input 5 HDMI - No signal		
Input 6 HDMI - No signal		
BROWSE	]	Refresh

図17 EDIDページ

注:出力が変更された為にEDIDのステータスがデバイス上で変更されると、ディスプレイは 自動的に更新されません。Refreshをクリックしてディスプレイを更新します。

#### 出力又は入力から、1又は複数の入力にEDIDデータをコピーするには:

- EDID(出力または入力)をコピーするソースボタンをクリックします。
   ボタンは色が変わり、EDID要約情報はコピー元のEDIDデータを反映します。
- 2)1又は複数の入力をクリックするか、入力チェックボックスをオンにして全ての入力を選択します。 選択されたすべての入力ボタンが色を変え、EDID要約情報が選択された入力に割当てられます。
- 3) [Copy]ボタンをクリックします。「EDID was copied: EDIDがコピーされました」という成功 メッセージが表示され、EDIDデータが選択された入力にコピーされます。
- 4)[OK]をクリックします。

#### EDIDデータファイルからEDIDデータを入力にコピーするには:

- 1) source Browseボタンをクリックします。 Windowsブラウザが開きます。
- 2)必要なファイルを参照します。
- 3) 必要なファイルを選択し、[Open]をクリックします。 EDID要約情報は選択を反映するします。
- 4)1又は複数の入力をクリックするか、入力チェックボックスをオンにして全ての入力を選択します。 選択されたすべての入力ボタンが色を変え、EDID要約情報が選択された入力に割当てられます。
- 5) [Copy]ボタンをクリックします。「EDID was copied: EDIDがコピーされました」という成功 メッセージが表示され、EDIDデータが選択された入力にコピーされます。
- 6)[OK]をクリックします。

VS-62Hのデバイス設定ページでは、いくつかの通信パラメータを変更し、他のものを表示できます。



図18 デバイス設定ページ

シリアルまたはイーサネット通信パラメータを変更するには:

1) パラメータを直接入力するか、ドロップダウンリストを使用して、必要に応じてパラメータを調整します。 2) [Set]をクリックします。 変更は保存されます。

#### ファームウェアアップグレードページ

ファームウェアアップグレードページでは、ファームウェアファイルからファームウェアを更新できます。



図19 ファームウェアアップグレードページ

ファームウェアをアップグレードするには

1) Choose Fileボタンをクリックします。 Windowsブラウザが開きます。

- 2) 必要なファイルを参照します。
- 必要なファイルを選択し、[Open]をクリックします。
   ファームウェアファイル名がファームウェアアップグレードページに表示されます。

4) [Start Upgrade]をクリックします。ファームウェアファイルがロードされ、進行状況バーが表示されます。

処理を中断しないでください。VS-62Hが破損する可能性があります。

5) プロセスが完了したら、本機を再起動します。 ファームウェアが更新されます。

#### クレイマーについて(About Usページ)

About Usページには、Webページのバージョンとクレイマーエレクトロニクス社の詳細が表示されます。



図20 クレイマーについて (About Usページ)

# 仕様

እ <b>ታ</b>	6 HDMI
出力	2 HDMI
ポート	1 イーサネット (RJ-45) 1 IR (3.5ゆミニジャック) 12 接点リモートスイッチ (13ピンターミナルブロック) 1 シリアルポート (3ピンターミナルブロック) 1 プログラムポート (ミニUSB)
帯域幅	データー転送レート 最太8.91Gbps (2.97Gbps/CH)
準拠規格	номі, носр
解像度	最大 UXGA; 4K x 2K
対応ボーレート	9600、115200bps
消費電力	5V DC 880mA
操作及び制御	前面パネルボタン、IRリモコン、 RS-232、イーサネット、接点リモート、内蔵WEBページ
動作温度	0°∼ +40°C
保存温度	-40°∼ +70°C
湿度	10% ~ 90%、相対湿度 結露のない事
サイズ	21.5cm x 16.6cm x 4.4cm
重量	約1.0kg
付属品	ACアダプタ、RC-IR3リモコン(ご要望に応じて、この製品に無料で提供されます)
別売りオプション	外部リモートIR受信ケーブル、ラックマウントアダプター RK-3TR
仕様はwww.kramerav.co	omで予告なしに変更される場合があります

# デフォルト 通信パラメーター

RS-232				
プロトコル3000				
ボーレート	115,200			
データビット	8			
ストップビット	1			
パリティ	無し			
コマンドフォーマット	ASCII			
TCP/IP パラメータ				
IPアドレス:	192.168.1.39			
サブネットマスク:	255.255.0.0	設定のリセット方法(デフォルトへの復帰)		
ゲートウェイ:	0.0.0	リアパネルのFactory Reset ボタンを押しながら、		
TCP ポートNo. :	5000	電源をオンにすると、デフォルト設定に戻ります		
UDP ポートNo. :	50000			

デフォルト EDID

Model name
EDID revision 1.3
Input signal type Digital (DVI)
Color bit depth Undefined
Display type RGB color
Screen size
Extension blocs 1 (CEA-EXT)
DDC/Cln/a
Color characteristics
Default color space Non-sRGB
Display gamma
Green chromaticity Gy 0.286 - Gy 0.610
Blue chromaticity Bx 0.146 - By 0.069
White point (default) Wx 0.284 - Wy 0.293
Additional descriptors None
Timing characteristics
Horizontal scan range 31-94kHz
Venucai scan range 50-65Hz
CVT standard
GTF standard
Additional descriptors None
Preferred timing Yes
Native/preferred timing 1280x720p at 60Hz
Modeline
Modeline
Standard timings supported
720 x 400p at 70Hz - IBM VGA
720 x 400p at 88Hz - IBM XGA2
640 x 480p at 60Hz - IBM VGA
640 x 480p at 67Hz - Apple Mac II
640 x 480p at 75Hz - VESA
800 x 600p at 56Hz - VESA
800 x 600p at 60Hz - VESA
800 x 600p at 72Hz - VESA
800 x 600p at 75Hz - VESA
832 x 624p at 75Hz - Apple Mac II
1024 x 768b at 87Hz - IBM 1024 x 768b at 60Hz V/ESA
1024 x 768p at 70Hz - VESA
1024 x 768p at 75Hz - VESA
1280 x 1024p at 75Hz - VESA
1152 x 870p at 75Hz - Apple Mac II
1280 x 720p at 60Hz - VESA STD
1280 x 800p at 60Hz - VESA STD
1440 X 900p at 60Hz - VESA STD 1280 X 960p at 60Hz - VESA STD
1280 x 1024p at 60Hz - VESA STD
1400 x 1050p at 60Hz - VESA STD
1680 x 1050p at 60Hz - VESA STD
1600 x 1200p at 60Hz - VESA STD
EIA/CEA-861 Information
Tevision number
Basic audio
YCbCr 4:4:4 Supported
YCbCr 4:2:2 Supported
Native formats 1
Detailed timing #1 720x480p at 60Hz (4:3)
Modeline
Modeline
Detailed timing #3 1920v1080i at 50Hz (16:9)

Detailed timing #4...... 1280x720p at 60Hz (16:9) Modeline...... "1280x720" 74.250 1280 1390 1430 1650 720 725 730 750 +hsync +vsync Detailed timing #5..... 1280x720p at 50Hz (16:9) Modeline...... "1280x720" 74.250 1280 1720 1760 1980 720 725 730 750 +hsync +vsync CE video identifiers (VICs) - timing/formats supported 720 x 576p at 50Hz - EDTV (4:3, 16:15) 1280 x 720p at 50Hz - HDTV (16:9, 1:1) 1920 x 1080i at 60Hz - HDTV (16:9, 1:1) 1920 x 1080i at 50Hz - HDTV (16:9, 1:1) 1280 x 720p at 60Hz - HDTV (16:9, 1:1) [Native] 1920 x 1080p at 60Hz - HDTV (16:9, 1:1) 1920 x 1080p at 50Hz - HDTV (16:9, 1:1) NB: NTSC refresh rate = (Hz\*1000)/1001 CE audio data (formats supported) LPCM 3-channel, 24-bits at 44/48 kHz CE speaker allocation data Channel configuration.... 3.0 Front left/right...... Yes Front LFE..... No Front center..... Yes Rear left/right..... No Rear center..... No Front left/right center.. No Rear left/right center... No Rear LFE..... No CE vendor specific data (VSDB) IEEE registration number. 0x000C03 CEC physical address..... 1.0.0.0 Maximum TMDS clock...... 165MHz Raw data 00,FF,FF,FF,FF,FF,FF,FF,00,2E,4D,00,02,01,00,00,00,18,14,01,03,81,46,27,78,0A,D5,7C,A3,57,49,9C,25, 55,00,7E,88,42,00,00,1A,02,3A,80,18,71,38,2D,40,58,2C,45,00,C4,8E,21,00,00,1E,00,00,00,FC,00,56, 53,2D,34,32,48,4E,0A,20,20,00,00,00,00,00,FD,00,32,55,1F,5E,11,00,0A,20,20,20,20,20,20,01,7B,

VS-62H – Default EDID

# プロトコル 3000

クレイマーデバイスは、シリアルポートまたはイーサネットポート経由で送信される Kramer Protocol 3000 コマンドを使用して操作できます。

## プロトコル 3000 を理解する

プロトコル 3000 コマンドは、次のように構成されたASCII文字のシーケンスです。

・コマンドフォーマット

Prefix	Command Name	Constant (Space)	Parameter(s)	Suffix
#	Command	-	Parameter	<cr></cr>

・フィードバックフォーマット

Prefix	Device ID	Constant	Command Name	Parameter(s)	Suffix
~	nn	@	Command	Parameter	<cr><lf></lf></cr>

・コマンドパラメーター:複数のパラメーターはコンマ (,) で区切る必要があります。 さらに、カッコ ([と])を使用して、複数のパラメーターを1つのパラメーターとして グループ化できます。

・コマンドチェーン区切り文字: 複数のコマンドを同じ文字列にチェーンできます。 各コマンドは、パイプ文字 (|)で区切られます。

・パラメーター属性:パラメーターには複数の属性が含まれる場合があります。 属性は、カッコ (<…>)で示され、ピリオド (.)で区切る必要があります。

コマンドフレーミングは、VS-62Hとのインターフェース方法によって異なります。 次の図は、ターミナル通信ソフトウェア(Hercules等)を使用して#コマンドがどのように 構成されているかを示します。

S Hercules SETUP utility by HW-group.com		_		Х
IJDP Setup Serial TCP Client TCP Server IJDP Test Mode About				
Received/Sent data				
Techevosan daa Connecting to 192.168.110.54 Connected to 192.168.110.54 ≇~01@ OK	TEA         authorization           TEA         authorization           TEA         \$000000000000000000000000000000000000			nnect DC IO
	PortStore	test isable leceived <u>t</u>	est data	
_ Send	1 Hedilec	(10.00)		
I##kcob         IF HEX           IF         IF           IF         IF           IF         IF           IF         IF	Send Send Send	HIL www. Hercul	Ugro HW-group es SETUP /ersion 3	up com itility .2.8

# プロトコル 3000 コマンド

Function	Description	Syntax	Parameters/Attributes	Example
#	Protocol handshaking.	COMMAND		# <cb></cb>
		# <cr></cr>		
	Validates the Protocol	FEEDBACK		
	the machine number.	~nn@_OK <cr><lf></lf></cr>		
	Step-in master products			
	use this command to identify the availability of			
	a device.			
AV-SW-MODE	Set input auto switch mode (per output).	COMMAND	1 – Video	#AV-SW-MODE?_1,2 <cr></cr>
			2 – Audio	
		~nn@AV-SW-MODE layer.output id.mode <cr><lf></lf></cr>	3 – Data	
			4-IR	
			5-USB	
			outputs	
			mode -	
			0 – manual 1 – priority switch	
			2 – last connected switch	
AV-SW-MODE?	Get input auto switch	COMMAND	layer – Layer Enumeration	Get the input audio switch
	mode (per output).	#AV-SW-MODE?_layer,output_id <cr></cr>	1 – Video	mode for HDBT Out:
		FEEDBACK	2 – Audio	#AV-SW-MODE?_1,1 <cr></cr>
		<pre>~nn@AV-SW-MODE_layer,output_id,mode<cr><lf></lf></cr></pre>	4–IR	
			5–USB	
			<pre>output_id - 1 to number of system</pre>	
			outputs	
			0 – manual	
			1 – priority switch	
			2-last connected switch	
BAUD	Set protocol serial port baud rate.		baud_rate - 9600 / 115200 / else -	<b>#BTN_1</b> , 0 <cr></cr>
			current_baud_rate - 9600 /	
	(i) The new defined baud	<pre>rn@BAUD baud rate<cr><lf></lf></cr></pre>	115200 / else - current protocol serial	
	EEPROM and used when	Ontion 1:	baud param – 0 - get the list of	
	powering up.	<pre>~nn@BAUD_current_baud_rate<cr><lf></lf></cr></pre>	supported baud rates	
	Default baud rate is	Option 2:	baud_rate1,baud_rate2, List	
	115200 (on factory reset).	<pre>~nn@BAUD_baud_rate1,baud_rate2,<cr><lf></lf></cr></pre>		
	Only works with devices			
	supporting this command			
	the default baud rate is			
	used).	COMMAND	0000 / 115200 / alas	
BAUD?	baud rate.	#BAUD? <cr></cr>	new baud rate to set	#BTN?_1 <cr></cr>
	(Option 1 - for current	#BAUD? baud param <cr></cr>	current_baud_rate - 9600 /	
	baud rate, . Option 2 - for list of	FEEDBACK	115200 / else - current protocol serial	
	supported baud rates).	~nn@BAUD_baud_rate <cr><lf></lf></cr>	<b>baud_param</b> $- 0$ - get the list of	
	The new defined baud	Option 1:	supported baud rates	
	rate is stored in the	<pre>~nn@BAUD_current_baud_rate<cr><lf></lf></cr></pre>	list of supported baud rates	
	EEPROM and used when	Option 2:		
	powering up.	<pre>~nn@BAUD_baud_rate1,baud_rate2,<cr><lf></lf></cr></pre>		
	Default baud rate is			
	Only works with devices			
	(if ERR 002 is returned,			
	the default baud rate is			
BTN	Set module state.	COMMAND	button_num – Button number (0n)	#BTN.1,0 <cr></cr>
	After a SET	#BTN_button_num,mode <cr></cr>	mode -	
	command. LEDs show	FEEDBACK	U-mute	
	the button status:	~nn@BTN_button_num,mode <cr><lf></lf></cr>	(request step in) (Get command only)	
	mute – button LED off.		In case of ECHO notification, the mode is replaced by the input # of the	
	pending – button LED		Step-in client and does not mean the status of the button.	
	flashing.		An ECHO-ED notification happens only when a button becomes active	
	The Step-in master uses this command to get the			
	actual status and identify			
	if the device is in pending			
	Step-in request.			
	In reply to the Step-in			
	master updates the			
	button status by sending			
	set to activate and configures the Step-in			
	action. Other Step-in			
L	שופותה מול שלו נט ווועופ.	1	1	1

Function	Description	Syntax	Parameters/Attributes	Example
BTN?	Get module state.	COMMAND	button_num – Button number (0n)	#BTN?_1 <cr></cr>
(i) After a SET command, LEDs show the button status:	() After a SET	#BTN?_button_num <cr></cr>	mode –	
	FEEDBACK	1 – active, 255 (0xFF) - pending		
	~nn@BTN_button_num,mode <cr><lf></lf></cr>	(request step in) (Get command		
	mute – button LED off.		only) In case of ECHO notification, the	
	active – button LED on.		mode is replaced by the input # of the Step-in client and does not mean the	
	pending – button LED flashing.		status of the button. An ECHO-ED notification happens only when a button becomes active	
	The Step-in master uses this command to get the actual status and identify if the device is in pending Step-in request.			
	In reply to the Step-in request, the Step-in master updates the button status by sending set to activate and configures the Step-in action. Other Step-in clients are set to mute.			
BUILD-DATE?	Get device build date.	COMMAND	date - Format: YYYY/MM/DD where	Get the device build date:
		#BUILD-DATE?_ <cr></cr>	YYYY = Year	#BUILD-DATE? <cr></cr>
		FEEDBACK	DD = Day	
		~nn@BUILD-DATE_date,time <cr><lf></lf></cr>	time – Format: hh:mm:ss where	
			hh = hours	
			mm = minutes	
			ss = seconds	
CPEDID	Copy EDID data from the output to the input	COMMAND #CPEDID_src_type,src_id,dst_type,dest_bitmap <cr></cr>	src_type - EDID source type (usually output)	Copy the EDID data from the Output 1 (EDID source) to the
		or	1 – Output	#CPEDID.,1,1,0,0x1 <cr></cr>
	(i) Destination bitmap	<pre>#CPEDID_src_type,src_id,dst_type,dest_bitmap,safe_mode<cr></cr></pre>	2 – Default EDID	Copy the EDID data from the
	size depends on device	FEEDBACK	3 – Custom EDID	default EDID source to the
	is a 64-bit word).	<pre>~nn@CPEDID_src_stg,src_id,dst_type,dest_bitmap<cr><lf></lf></cr></pre>	<pre>src_id - Number of chosen source</pre>	Input:
		<pre>~nn@CPEDID_src_stg,src_id,st_type,dest_bitmap,safe_mode<cr< pre=""></cr<></pre>	stage	#CPEDID_2,0,0,0x1 <cr></cr>
	means inputs 1.2 and 5	> <lf></lf>	1 – Output 1	
	are loaded with the new		2 – Output 2	
	EDID.		dst_type - EDID destination type	
	In certain products		0 – Input	
	parameter. See the HELP		1 – Output	
	command for its		2 – Default EDID	
	availability.		3 – Custom EDID	
			destination IDs. Format: XXXXX, where X is hex digit. The binary form of every hex digit represents corresponding destinations. 0 – indicates that EDID data is not copied to this destination. 1 – indicates that EDID data is	
			copied to this destination.	
			0- device accepts the EDID as is	
			without trying to adjust	
			(default value if no parameter is sent)	

#### Kramer Electronics Ltd.

Function	Description	Syntax	Parameters/Attributes	Example
DEF-RES	Set custom defined	COMMAND	Table id – Index in resolution table	
	scaled video output	#DEF-RES_Table_id,Width,Height,Htotal,VTotal,HSyncW,HSyncB	0=No Signal (for input) / Native –	
	resolution to ID index.	ackPorch,VSyncW,VSyncBackPorch,FrRate,Interlaced <cr></cr>	EDID (for output) 1=640x480p@59.94Hz/60Hz	
	(i) If a requested custom	FEEDBACK	2=720x480p@59.94Hz/60Hz	
	resolution is not defined,	<pre>~nm@DEF-RES_Table_id,Width,Height,Htotal,VTotal,HSyncW,HSy ncBackPorch,VSyncW,VSyncBackPorch,FrRate,Interlaced<cr><lf< pre=""></lf<></cr></pre>	3=720x480p@59.94Hz/60Hz	
	returns ERRSP003 (out	>	<b>5</b> =1920x1080i@59.94Hz/60Hz	
	of range).		6=720(1440)x480i@59.94Hz/60Hz	
	Only indexes 100-104 are		<b>7=</b> 720(1440)x480i@59.94Hz/60Hz <b>8=</b> 720(1440)x240p@59.94Hz/60Hz	
	valid for custom defined		<b>9</b> =720(1440)x240p@59.94Hz/60Hz	
	resolution.		<b>10=</b> 2880x480i@59.94Hz/60Hz	
			12=2880x480i@59.94Hz/60Hz	
			13=2880x240p@59.94Hz/60Hz	
			<b>14=</b> 1440x480p@59.94Hz/60Hz <b>15=</b> 1440x480p@59.94Hz/60Hz	
			16=1920x1080p@59.94Hz/60Hz	
			17=720x576p@50Hz 18=720x576p@50Hz	
			<b>19=</b> 1280x720p@50Hz	
			<b>20=</b> 1920x1080i@50Hz <b>21</b> =720(1440)×576:@50Hz	
			21=720(1440)x576i@50Hz 22=720(1440)x576i@50Hz	
			23=720(1440)x288p@50Hz	
			24=720(1440)x288p@50Hz 25=2880x576i@50Hz	
			26=2880x576i@50Hz	
			27=2880x288p@50Hz 28=2880x288p@50Hz	
			29=1440x576p@50Hz	
			<b>30=</b> 1440x576p@50Hz	
			<b>31=</b> 1920x1080p@50H2 <b>32=</b> 1920x1080p@23.97Hz/24Hz	
			33=1920x1080p@25Hz	
			34=1920x1080p@29.97Hz/30Hz 35=2880x480p@59.94Hz/60Hz	
			36=2880x480p@59.94Hz/60Hz	
			37=2880x576p@50Hz 38=2880x576p@50Hz	
			<b>39=</b> 1920x1080i@50Hz	
			40=1920x1080i@100Hz	
			<b>41=</b> 1280x720p@100H2 <b>42=</b> 720x576p@100Hz	
			43=720x576p@100Hz	
			<b>44=</b> 720(1440)x576i@100Hz <b>45=</b> 720(1440)x576i@100Hz	
			46=1920x1080i@119.88/120Hz	
			47=1280x720p@119.88/120Hz 48=720x480p@119.88/120Hz	
			<b>49=</b> 720x480p@119.88/120Hz	
			50=720(1440)x480i@119.88/120Hz	
			<b>51=</b> 720(1440)x480(@119.88/120H2 <b>52=</b> 720x576p@200Hz	
			53=720x576p@200Hz	
			54=720(1440)x576i@200Hz 55=720(1440)x576i@200Hz	
			56=720x480p@239.76/240Hz	
			57=720x480p@239.76/240Hz 58=720(1440)x480i@239.76/240Hz	
			59=720(1440)x480i@239.76/240Hz	
			60=1280x720p@23.97Hz/24Hz	
			62=1280x720p@29.97Hz/30Hz	
			63=1920x1080p@119.88/120Hz	
			65=800x600p@60Hz	
			66-99=(Reserved)	
			100=Custom resolution 1 101=Custom resolution 2	
			102=Custom resolution 3	
			103=Custom resolution 4	
			105-254=(Reserved)	
			*Valid indexes for SET are 100-104	
			only	
			name (self-explanatory), numeric	
			value	
			according to On/Off ("ON"- I. "OFF" -	
			P)	
			Stage – Input/Output	
			1=Output	
			Stage_id – Number of chosen stage	
			(1max number of inputs/outputs)	

Function	Description	Syntax	Parameters/Attributes	Example
DEF-RES?	Get custom defined video resolution.	COMMAND #DEF-RES2 Table id.stage.stage id <cr></cr>	Table_id – Index in resolution table 0=No Signal (for input) / Native –	
	(i) If a requested custom resolution is not defined	FEEDBACK	EDID (for output)	
	yet is in the device, it	~nn@DEF-RES_Table_id,Width,Height,Htotal,VTotal,HSyncW,HSy	<b>2=</b> 720x480p@59.94Hz/60Hz <b>2=</b> 720x480p@59.94Hz/60Hz	
	of range).	>	<b>4=</b> 1280x720p@59.94Hz/60Hz	
	Only indexes 100-104 are		5=1920x1080i@59.94Hz/60Hz 6=720(1440)x480i@59.94Hz/60Hz	
	valid for custom defined resolution.		<b>7=</b> 720(1440)x480i@59.94Hz/60Hz <b>8=</b> 720(1440)x240p@59.94Hz/60Hz	
	In Get command when		9=720(1440)x240p@59.94Hz/60Hz 10=2880x480i@59.94Hz/60Hz	
	sending:		11=2880x480i@59.94Hz/60Hz 12=2880x240p@59.94Hz/60Hz	
	with detailed info of native		13=2880x240p@59.94Hz/60Hz 14=1440x480p@59.94Hz/60Hz	
	resolution.		15=1440x480p@59.94Hz/60Hz 16=1920x1080p@59.94Hz/60Hz	
	with detailed info of		17=720x576p@50Hz 18=720x576p@50Hz	
	current resolution.		<b>19=</b> 1280x720p@50Hz <b>20-</b> 1920x1080@50Hz	
			21=720(1440)x576i@50Hz	
			22=720(1440)x576i@50Hz 23=720(1440)x288p@50Hz	
			24=720(1440)x288p@50Hz 25=2880x576i@50Hz	
			26=2880x576i@50Hz 27=2880x288p@50Hz	
			<b>28</b> =2880x288p@50Hz <b>28</b> =1440x278p@50Hz	
			<b>30=</b> 1440x576p@50Hz	
			<b>31</b> =1920x1080p@50Hz <b>32</b> =1920x1080p@23.97Hz/24Hz	
			<b>33=</b> 1920x1080p@25Hz <b>34=</b> 1920x1080p@29.97Hz/30Hz	
			<b>35=</b> 2880x480p@59.94Hz/60Hz	
			36=2880x480p@59.94Hz/60Hz 37=2880x576p@50Hz	
			38=2880x576p@50Hz 39=1920x1080i@50Hz	
			<b>40</b> =1920x1080i@100Hz <b>41</b> =1280x720p@100Hz	
			<b>42=</b> 720x576p@100Hz	
			<b>43=</b> 720x576p@100Hz <b>44=</b> 720(1440)x576i@100Hz	
			<b>45</b> =720(1440)x576i@100Hz <b>46</b> =1920x1080i@119.88/120Hz	
			<b>47</b> =1280x720p@119.88/120Hz	
			<b>49=</b> 720x480p@119.88/120Hz <b>49=</b> 720x480p@119.88/120Hz	
			<b>50=</b> 720(1440)x480i@119.88/120Hz <b>51=</b> 720(1440)x480i@119.88/120Hz	
			<b>52</b> =720x576p@200Hz <b>53</b> =720x576p@200Hz	
			54=720(1440)x576i@200Hz	
			<b>55</b> =720(1440)x576i@200Hz <b>56</b> =720x480p@239.76/240Hz	
			57=720x480p@239.76/240Hz 58=720(1440)x480i@239.76/240Hz	
			<b>59</b> =720(1440)x480i@239.76/240Hz	
			61=1280x720p@23.97Hz/24Hz 61=1280x720p@25Hz	
			62=1280x720p@29.97Hz/30Hz 63=1920x1080p@119.88/120Hz	
			64=1920x1080p@100Hz	
			66-99=(Reserved)	
			100=Custom resolution 1 101=Custom resolution 2	
			102=Custom resolution 3	
			104=Custom resolution 5	
			<b>105-254=</b> (Reserved) *Valid indexes for SET are 100-104	
			only	
			name (self-explanatory), numeric	
			value Interlaced – Interlaced/progressive	
			according to On/Off ("ON"- I, "OFF" -	
			Stage - Input/Output	
			1=Output	
			Stage_id – Number of chosen stage	
DEL	Delete file.	COMMAND	file_name - Name of file to delete	Delete the Room1Config file:
		#DEL_file_name <cr></cr>	(file names are case-sensitive)	#DEL_Room1Config <cr></cr>
		FEEDBACK ~nn@DEL_file_name <cr><lf></lf></cr>		
DIR	List files in device.	COMMAND	file_name - Name of file	#DIR <cr></cr>
		#DIR <cr></cr>	file_size – File size in bytes. A file	
		TEEDBACK Multi-line:	memory	
		~nn@DIR <cr><lf></lf></cr>	system	
		file_name TABfile_size_bytes,ID:_file_id <cr><lf> TABfree_size_bytes.<cr><lf></lf></cr></lf></cr>	<b>free_size</b> – Free space in bytes in device file system	

Function	Description	Syntax	Parameters/Attributes	Example
DISPLAY?	Get output HPD status.	COMMAND	out_id - Output number	Get the output HPD status of
		#DISPLAY?_out_id <cr></cr>	1 – Output 1	Output 1:
		FEEDBACK	2 – Output 2 HPD status according to	#DISPLAY?_1 <cr></cr>
		<pre>~nn@DISPLAY_out_id,status<cr><lf></lf></cr></pre>	signal validation	
			0 – Signal or sink is not valid	
			1 – Signal or sink is valid	
DPSW-	Get the DIP-switch state.	COMMAND	dp sw id – 1 to number of DIP	get the DIP-switch 2 status:
STATUS?		#DPSW-STATUS?_dp_sw_id <cr></cr>	switches	#DPSW-STATUS?_2 <cr></cr>
		FEEDBACK	status – Up/down	
		~nn@DPSW-STATUS_dp_sw_id,status <cr><lf></lf></cr>	1 – down	
ETH-PORT	Set Ethernet port	COMMAND	portType - TCP/UDP	Set the Ethernet port protocol
	protocol.	#ETH-PORT_portType,ETHPort <cr></cr>	ETHPort – TCP/UDP port number	for TCP to port 12457:
		FEEDBACK		#ETH-PORT_0,1245/ <cr></cr>
		~nn@ETH-PORT_portType,ETHPort <cr><lf></lf></cr>		
ETH-PORT?	Get Ethernet port	COMMAND	portType - TCP/UDP	Get the Ethernet port protocol
		#ETH-PORT?_portType <cr></cr>		#ETH-PORT?1 <cr></cr>
		FEEDBACK	ETHPort – TCP / UDP port number	-
			(0 – 65534)	
FACTORY	default configuration.	#FACTORY <cr></cr>	•	default configuration:
		FEEDBACK		#FACTORY <cr></cr>
	(i) This command deletes all user data from	~nn@FACTORY_OK <cr><lf></lf></cr>		
	the device. The deletion			
	can take some time.			
	Your device may require			
	powering off and			
	powering on for the changes to take effect			
FCT-MAC	Set MAC address.	COMMAND	mac_address - Unique MAC	
	To activate the	#FCT-MAC_mac_address <cr></cr>	address. Format: XX-XX-XX-XX-XX-	
	change, reset the device.	FEEDBACK	where X is a hex digit	
		~nn@FCT-MAC_mac_address <cr><lf></lf></cr>	5	
FCT-MODEL	Set model name.	COMMAND	model_name – String of printable	
	(i) Used where a single	#FCT-MODEL_model_name <cr></cr>	ASCII chars (up to 19 chars)	
	firmware file is adaptable	FEEDBACK	•	
	for many devices, but the	~nn@FCT-MODEL_model_name <cr><lf></lf></cr>		
	protocol) which specific			
TICH CN	model is used.	COMMAND	conial number 14 decimal digits	
FCT-SN	Set senar number.	#FCT-SN serial number <cr></cr>	serial_number = 14 decimal digits	
		FEEDBACK		
		~nn@FCT-SN_serial_number <cr><lf></lf></cr>	·	
FORMAT	Format file system.	COMMAND		#FORMAT <cr></cr>
	Response could take	#FORMAT <cr></cr>	-	
	several seconds until	FEEDBACK		
	formatting completes.	~nn@FORMAT_OK <cr><lf></lf></cr>		
FS-FREE?	Get file system free	COMMAND	free_size - Free size in device file	#FS-FREE?_ <cr></cr>
	space.	#FS-FREE?_ <cr></cr>	system in bytes	
		FEEDBACK	•	
		~nn@FS_FREE_iree_size <cr><lf></lf></cr>		
GEDID	Get EDID support on	COMMAND	stage – Input/Output	Get EDID support information
	for old devices that do not support this command, ~nn@ERR		1 – Output	#GEDID_0,1 <cr></cr>
		TEEDBACK	2 – Default EDID 3 – Custom EDID	_
	002 <cr><lf> is</lf></cr>		stage_id – Number of chosen stage	
	receivea.		size – Size of data to be sent from	
			device, 0 means no EDID support	
GET	Get file.	COMMAND	file_name – Name of tile to get	#GET_file_response.dat<
			contents – Byte stream of file	
		Multi-line:	contents	
		<pre>~nn@GET_file_name,file_size_READY<cr><lf></lf></cr></pre>	sends it in response to give user a	
		contents	chance to get ready)	
		~nn@GET_file_name_OK <cr><lf></lf></cr>		
HDCP-MOD	Set HDCP mode.	COMMAND	inp_id – Input number:	Set the input HDCP-MODE of
	(i) Set HDCP working	#HDCP-MOD_inp_id,mode <cr></cr>	1 – IN 1	IN 1 to Off:
	mode on the device input:	FEEDBACK		#RDCP-MOD_1,U <cr></cr>
	HDCP supported	<pre>~nn@HDCP-MOD_inp_id,mode<cr><lf></lf></cr></pre>	4-IN 4	
	HDCP_ON [default].		5– IN 5	
	HDCP not supported		6-IN 6	
	HDCP OFF.		7 – IN 7 8 IN 8	
	HDCP support changes		mode – HDCP mode:	
	following detected sink -		0-HDCP Off	
	MIRROR OUTPUT.		1 – HDCP On	

Function	Description	Suntay	Baramatara/Attributas	Example
Function	Description	Syntax	Parameters/Attributes	Example
HDCP-MOD?	Get HDCP mode.	COMMAND	inp_id – Input number:	Get the input HDCP-MODE of
	Set HDCP working	#HDCP-MOD?_inp_id <cr></cr>	1 – IN 1	
	mode on the device input:	FEEDBACK	2 - IN 2 2 IN 2	#HDCP-MOD?_I <cr></cr>
		~nn@HDCP-MOD_inp_id,mode <cr><lf></lf></cr>	3 - IN 3	
	HDCP supported -		5 - IN 5	
	HDCP_ON [default].		6-IN 6	
	HDCP not supported -		7–IN 7	
	HDCP OFF.		8– IN 8	
	HDCP support changes		mode - HDCP mode:	
	following detected sink -		0 – HDCP Off	
	MIRROR OUTPUT.		1 – HDCP On	
HDCP-STAT?	Get HDCP signal status.	COMMAND	stage – Input/Output	Get the output HDCP-STATUS
	(i) On output – sink	<pre>#HDCP-STAT?_stage,stage_id<cr></cr></pre>	0 – Input	of IN 1:
	status.	FEEDBACK	1 – Output	#HDCP-STAT?_0,1 <cr></cr>
		<pre>~nn@HDCP-STAT_stage,stage_id,status<cr><lf></lf></cr></pre>	stage_id - Number of chosen stage	
	On input – signal status.		status - Signal encryption status -	
			valid values On/Off	
			0-HDCP Off	
			1 – HDCP On	
			2 – Follow input	
			3 – Mirror output ("MAC mode")	
HELP	Get command list or help	COMMAND	command – Name of a specific	Get the command list:
	for specific command.	#HELP <cr></cr>	command	#HELP <cr></cr>
		#HELP_command_name <cr></cr>		
		FEEDBACK		To get help for
		1. Multi-line:		
		~nn@Device_command,_command <cr><lf></lf></cr>		HELF AV-SW-TIMEOUT CIV
		To get help for command use: HELP (COMMAND NAME) <cr><lf></lf></cr>		
		<pre>~nn@HELP.command:<cr><lf></lf></cr></pre>		
		description		
		USAGE:usage <cr><lf></lf></cr>		
LDEDID	Write EDID data from	COMMAND	dst_type - EDID destination type	Write the EDID data from an
	external application to		(usually input)	external application to the
	device.	Step 1	0 – Input	adjustment attempts:
	(i) When the unit	#LDEDID dst type.dest bitmask.size.safe mode <cr></cr>	2 Default EDID	#LDEDID 0,0x1,2340,0 <cr< td=""></cr<>
	receives the LDEDID		3 – Custom EDID	>
	command it replies with	Response I.	dest bitmask - Bitman	Write the EDID data from an
	READY and enters the	LE>	representing destination IDs. Format:	external application to HDMI In
	mode. In this mode the	ar	0x********, where * is ASCII	1 and PC In inputs with
	unit can receive only		presentation of hex digit. The binary	adjustment attempts:
	packets and not regular		presentation of this number is a bit	#LDEDID_0,0x5,2340,1 <cr< td=""></cr<>
	protocol commands.	Step 2: If ready was received, send EDID_DATA	means EDID data has to be copied to	3
	If the unit does not	TRESPONSE Z.	this destination	
	receive correct packets	· Interprotection of the second	size – EDID data size	
	for 30 seconds or is	or	safe_mode -	
	anterrupted for more than	~nn@LDEDID_ERRnn <cr><lf></lf></cr>	0 – Device accepts the EDID as is	
	receiving all packets, it		1 Device tries to adjust the EDID	
	sends timeout error		EDID DATA - Data in protocol	
	~nn@LDEDID_ERR01 <c< td=""><td></td><td>packets</td><td></td></c<>		packets	
	R> <lf> and returns to</lf>		Using the Packet Protocol	
	the regular protocol		Send a command: LDRV, LOAD,	
	data that is not a correct		ROUT, LDEDID Receive Ready or ERR###	
	packet, it sends the		If Ready:	
	corresponding error and		a. Send a packet.	
	returns to the regular		b. Receive OK on the last	
	protocor mode.		packet,	
			c. Receive UK for the command	
			Packet ID (1 2 3 ) (2 hytes in	
			length)	
			Length (data length + 2 for	
			CRC) – (2 bytes in length)	
			Data (data length -2 bytes)	
			Packet ID Length Data CRC	
			5. Response:	
			~NNNN_OK <cr><lf> (Where</lf></cr>	
			NNNN is the received packet ID	
			in ASCII hex digits.)	

Function	Description	Syntax	Parameters/Attributes	Example
LDFPGA	Load new FPGA file.	COMMAND	size – Size of firmware data that is	
		<pre>Step 1: #LDFPGA_size,CRC,fpga_id,force<cr></cr></pre>	sent CRC – FPGA file CRC	
		Step 2: If ready was received, send FPGA_DATA	The polynomial for the 16-bit CRC is: $CRC - CCITT: 0 \times 1021 = \times 16 + \times 12 + \times 5$	
		FEEDBACK Response 1:	+1	
		~nn@LDFPGA_size_READY <cr><lf></lf></cr>	Final XOR Value: 0	
		or	For a code example, see:	
		~nneLDFw_ERRnn <cr><lf></lf></cr>	free.org/133/crc_16_ccitt_in_csharp.h	
		~nn@LDFPGA_size_OK <cr><lf></lf></cr>	CRC example:	
			Data = "123456789" Result => 0x31C3	
			fpga_id - FPGA ID (if there are	
			force – 1, ignore CRC calculation	
			<b>FPGA_DATA</b> – *. <b>rbf</b> file in protocol	
			Using the Packet Protocol	
			IROUT, LDEDID	
			Receive Ready or ERR###	
			a. Send a packet,	
			b. Receive OK on the last packet.	
			c. Receive OK for the command	
			Packet structure: Packet ID (1, 2, 3) (2 bytes in	
			length) Length (data length + 2 for	
			CRC) – (2 bytes in length)	
			CRC – 2 bytes	
			01 02 03 04 05 Packet ID Length Data CBC	
			5. Response:	
			~NNNN_OK <cr><lf> (Where NNNN is the received packet ID</lf></cr>	
			in ASCII hex digits.)	
LDFW	Load new firmware file.	Step 1:	size – Size of firmware data that is sent	
	(i) In most devices firmware data is saved to	#LDFW_size <cr></cr>	FIRMWARE_DATA - HEX or KFW file	
	flash memory, but the	Step 2: If ready was received, send FIRMWARE_DATA	Using the Packet Protocol	
	until receiving the	Response 1:	IROUT, LDEDID	
	"UPGRADE" command and is restarted.	~nn@LDFW_size_READY <cr><lf></lf></cr>	Receive Ready or ERR###	
		~nn@LDFW_ERRnn <cr><lf></lf></cr>	a. Send a packet,	
		Response 2:	b. Receive OK on the last packet.	
		~nn@LDFW_size_OK <cr><lf></lf></cr>	c. Receive OK for the command	
			Packet structure. Packet ID (1, 2, 3) (2 bytes in	
			length) Length (data length + 2 for	
			CRC) – (2 bytes in length)	
			CRC – 2 bytes	
			01 02 03 04 05 Packet ID Length Data CRC	
			5. Response:	
			<b>NNNN_OK<cr><lf></lf></cr></b> (Where <b>NNNN</b> is the received packet ID	
1010	Load file to device	COMMAND	in ASCII hex digits.)	Load the file, response dat file
LOAD	Load me to device.	#LOAD_file_name,size <cr></cr>	device	to the device:
		FEEDBACK	<b>size</b> – Size of file data that is sent <b>Using the Packet Protocol</b>	<pre>#LOAD_file_response.dat ,5360<cr></cr></pre>
		* Device -	Send a command: LDRV, LOAD, IROUT, I DEDID	
		~01@LOAD_file_name,size_READY <cr><lf></lf></cr>	Receive Ready or ERR###	
		* End User (+Device)- Send file in Protocol Packets	If Ready: <b>a</b> . Send a packet.	
		* Device -	<b>b</b> . Receive OK on the last	
		~OI@LOAD_TITE_name,SIZE_OK <cr><lf></lf></cr>	<b>c</b> . Receive OK for the command	
			Packet structure: Packet ID (1, 2, 3,) (2 bytes in	
			length)	
			CRC) - (2 bytes in length)	
			Data (data length -2 bytes) CRC – 2 bytes	
			01 02 03 04 05	
			5. Response:	
			~NNNN_OK <cr><lf> (Where NNNN is the received packet ID</lf></cr>	
			in ASCII hex digits.)	
LOCK-FP	LOCK the front panel.	COMMAND #LOCK-FP_Lock/Unlock <cr></cr>	0-Off unlocks EDID	UNIOCK Tront panel: #LOCK-FP.0 <cr></cr>
	(i) In NT-52N, this command includes the	FEEDBACK	1 – On locks EDID	<b>-</b> * *
	PortNumber (1-2)	~nn@LOCK-FP_Lock/Unlock <cr><lf></lf></cr>		

<b>E</b> umotion	Description	Curretour	Denomentano / Attaileutee	Evenuela
Function	Description	Syntax	Parameters/Attributes	Example
LOCK-FP?	Get the front panel lock	COMMAND	Lock/Unlock – On/Off	#LOCK-FP?_ <cr></cr>
	state.	#LOCK-FP?_ <cr></cr>	1 On locks EDID	
	(i) In NT-52N, this	FEEDBACK		
	command includes the	~nn@LOCK-FP_Lock/Unlock <cr><lf></lf></cr>		
	PortNumber (1-2)			
LOGIN	Set protocol permission.	COMMAND	login level - Level of permissions	Set the protocol permission
200211		<pre>#LOGIN_login_level,password<cr></cr></pre>	required (End User or Admin)	level to Admin (when the
	(i) For devices that	FEEDBACK	password - Predefined password (by	password defined in the PASS
	support security, LOGIN	~nn@LOGIN login level.password OK <cr><lf></lf></cr>	PASS command). Default password is	command is 33333):
	commands with an End	or	an empty string	#LOGIN_Admin, 33333 <cr></cr>
	User or Administrator	~nn@LOGIN ERR 004 <cr><lf></lf></cr>		
	permission level.	(if had password entered)		
	In each device, some			
	connections allow logging			
	In to different levels.			
	security at all.			
	Connection may long ut			
	after timeout			
	and uncout.			
	The permission system			
	works only if security is			
	"SECUR" command.			
LOGIN?	Get current protocol	COMMAND	login_level - Level of permissions	#LOGIN?_ <cr></cr>
	permission level.	#LOGIN?_ <cr></cr>	required (End User or Admin)	_
	(i) For devices that	FEEDBACK	password – Predefined password (by	
	support security, LOGIN	~nn@LOGIN_login_level <cr><lf></lf></cr>	an empty string	
	allows to the user to run			
	commands with an End			
	permission level.			
	In each device, some			
	in to different levels.			
	Some do not work with			
	security at all.			
	Connection may logout			
	after timeout.			
	The permission system			
	works only if security is			
	enabled with the			
	"SECUR" command.			
LOGOUT	Cancel current			#LOGOUT <cr></cr>
	permission level.			
	Logs out from End			
	User or Administrator			
	Secure.			
MACH-NUM	Set machine number.	COMMAND	machine_number - New device	
	Como devisos de not	#MACH-NUM_machine_number <cr></cr>	machine number	
	set the new machine number until the device is	FEEDBACK		
		~nn@MACH-NUM_machine_number <cr><lf></lf></cr>		
	restarted.			
	Some devices can			
	change the machine			
	number only from DIP-			
	Switches.		Prodel name String of up to 10	Cot the device model:
MODEL?	Get device model.		printable ASCII chars	
	<li>This command</li>			#MODEL!
	identifies equipment			
	connected to Step-in	~nn@MODEL_model_name <cr><lf></lf></cr>		
	notifies of identity			
	changes to the connected			
	equipment. The Matrix			
	memory to answer			
	REMOTE-INFO requests.			
MTX-MODE	LEGACY COMMAND.	COMMAND	<pre>output_id - 1 to number of system</pre>	Set output to last connected:
	Set auto-switch mode.	#MTX-MODE_output_id,mode <cr></cr>	outputs	#MTX-MODE_1,2 <cr></cr>
	(i) Not recommended for	FEEDBACK	noce –	
	new devices.	~nn@MTX-MODE_output_id,mode <cr><lf></lf></cr>	1 – auto priority	
			2 – auto last connected	
MTX-MODE?	LEGACY COMMAND.	COMMAND	output_id - 1 to number of system	#MTX-MODE?2 <cr></cr>
	Get auto-switch mode.	#MTX-MODE?_output_id <cr></cr>	outputs	
	(i) Not recommended for	FEEDBACK	mode –	
	new devices.	~nn@MTX-MODE_output_id,mode <cr><lf></lf></cr>	1 – auto priority	
			2- auto last connected	
L	1		1	1

Function	Description	Syntax	Parameters/Attributes	Fxample
NAME	Set machine (DNS)	COMMAND	machine name - String of up to 15	Set the DNS name of the
INAMIS	name.	#NAME_machine_name <cr></cr>	alpha-numeric chars (can include	device to room-442:
	The machine name is	FEEDBACK	hyphen, not at the beginning or end)	#NAME_room-442 <cr></cr>
	not the same as the	~nn@NAME_machine_name <cr><lf></lf></cr>		
	model name. The			
	identify a specific			
	machine or a network in			
	use (with DNS feature			
NAME?	Get machine (DNS)	COMMAND	machine name - String of up to 15	Get the DNS name of the
	name.	#NAME?_ <cr></cr>	alpha-numeric chars (can include	device:
	(i) The machine name is	FEEDBACK	hyphen, not at the beginning or end)	#NAME?_ <cr></cr>
	not the same as the	~nn@NAME_machine_name <cr><lf></lf></cr>		
	model name. The			
	identify a specific			
	machine or a network in			
	on).			
NAME-RST	Reset machine (DNS)	COMMAND		Reset the machine name (S/N
	name to factory default.	#NAME-RST <cr></cr>		last digits are 0102):
	Factory default of	FEEDBACK		RST_KRAMER_0102 <cr></cr>
	machine (DNS) name is	~nn@NAME-RST_OK <cr><lf></lf></cr>		
	digits of device serial			
	number.			
NET-DHCP	Set DHCP mode.		id – Network ID-the device network	Enable DHCP mode for port 1,
	Only 1 is relevant for	#NET-DRCP_Id, mode <cr></cr>	Counting is 0 based, meaning the	#NET-DHCP_1,1 <cr></cr>
	the mode value. To	FEEDBACK	control port is '0', additional ports are	_
	must configure a static IP		1,2,3 mode –	
	address for the device		1- Try to use DHCP. If unavailable.	
	Connecting Ethernet to			
	devices with DHCP may			
	take more time in some			
	-			
	randomly assigned IP by			
	DHCP, specify the device			
	DNS name (if available)			
	command. You can also			
	get an assigned IP by			
	direct connection to USB or RS-232 protocol port if			
	available.			
	For proper settings			
	consult your network			
	administrator.			
	For Backward			
	compatibility, the id			
	parmeter can be omitted.			
	ID, by default, is 0, which			
	is the Ethernet control			
NET-DUCD2	Get DHCP mode	COMMAND	id – Network ID-the device network	Get DHCP mode for port 1:
Mar blier .	For Backward	#NET-DHCP?id <cr></cr>	interface (if there are more than one).	#NET-DHCP?_1 <cr></cr>
	compatibility, the id	FEEDBACK	Counting is 0 based, meaning the	
	parmeter can be omitted.	~nn@NET-DHCP_id,mode <cr><lf></lf></cr>	1,2,3	
	ID, by default, is 0, which		mode -	
	is the Ethernet control		U - Do not use DHCP. Use the IP	
	port.		NET-IP OF NET-CONFIG	
			command.	
			1 – I ry to use DHCP. If unavailable, use the IP set by the factory or	
			using the NET-IP or NET-	
			CONFIG command.	
NET-GATE	Set gateway IP.		ip_address - Format:	Set the gateway IP address to
	<ul> <li>A network gateway</li> </ul>	#NET-GATE_1p_address <cr></cr>	****	#NET-
	connects the device via	<pre>&gt;</pre>		GATE_192.168.000.001 <cr< td=""></cr<>
	maybe over the Internet.			>
	Be careful of security			
	settings consult your			
	network administrator.			
NET-GATE?	Get gateway IP.	COMMAND	ip_address - Format:	Get the gateway IP address:
	<ol> <li>A network gateway</li> </ol>	#NET-GATE?_ <cr></cr>	XXX.XXX.XXX.XXX	#NET-GATE? <mark>_<cr></cr></mark>
	connects the device via			
	another network and maybe over the Internet	-IIIGNFI-GAIF ID_GOULGSS <ck><tr></tr></ck>		
	Be aware of security			
	problems.		in address Ferret	Sot the ID address to
NET-IP	Set IP address.	#NET-IP ip address <cr></cr>	xxx.xxx.xxx.xxx	192.168.1.39:
	(i) For proper settings	FEEDBACK		#NET-
	administrator.	~nn@NET-IP_ip_address <cr><lf></lf></cr>		IP_192.168.001.039 <cr></cr>
	1		1	1

FullCulinity         OBSC/IP(00)         CPAINANC         FullCuling         Cather P address         Cather P addres         Cather	NET-MAC? Get	et IP address.	COMMAND #NET-IP?_ <cr> FEEDBACK ~nn@NET-IP_ip_address<cr><lf></lf></cr></cr>	ip_address - Format:	Get the IP address: #NET-IP?_ <cr></cr>
NET-1P7     Ust if address.     Description       NET-1P7_COD     Image: Display the identification COD of P     Image: Display the identification COD of P       NET-MACK     Of MAC address.     ColMMAND       NET-MACK     Of submet mask.     ColMMAND       NET-MACK     ColMMAND     Image: Display the identification COD of P       NET-MACK     ColMMAND     Image: Display the identification COD of P       NET-MACK     ColMMAND     Image: Display the identification COD of P       NET-MACK     ColMMAND     Image: Display the identification COD of P       NET-MACK     ColMMAND     Image: Display the identification COD of P       NET-MACK     ColMMAND     Image: Display the identification COD of P       NET-MACK     ColMMAND     Image: Display the identification COD of P       NET-MACK     ColMMAND     Image: Display the identification COD of P       NET-MACK     ColMMAND     Image: Display the identification COD of P       NET-MACK     ColMMAND     Image: Display the identification COD of P       NET-MACK     ColMMAND     Image: Display the identification COD of P       NET-MACK     ColMMAND     Image: Display the identification COD of P       NET-MACK     ColMMAND     Image: Display the identification COD of P       Net     ColMMAND     Image: Display the identification COD of P       Net <td>NET-IP? Get</td> <td>et IP address.</td> <td>HRT-IP:_<cr> FEEDBACK ~nn@NET-IP_ip_address<cr><lf></lf></cr></cr></td> <td>1p_address - Format: xxx.xxx.xxx.xxx</td> <td>Get the IP address: #NET-IP?_<cr></cr></td>	NET-IP? Get	et IP address.	HRT-IP:_ <cr> FEEDBACK ~nn@NET-IP_ip_address<cr><lf></lf></cr></cr>	1p_address - Format: xxx.xxx.xxx.xxx	Get the IP address: #NET-IP?_ <cr></cr>
NET - MACY         Get MAC address         ComMAND         Matter - MACY         Get MAC address         Matter - MACY         Id - Network (ID-the device network programmatic), the identical parameter can be onlined parameter can be onlined parameter can be onlined in by ordin, the Notice of the can be onlined parameter can be onlined parating parameter parameter parating parameter paramete	NET-MAC? Get	et MAC address.	FEEDBACK ~nn@NET-IP_ip_address <cr><lf></lf></cr>	000000.000.000	#14151 - 1F ( <mark>_ &lt; CK</mark> 2
NET - MACT         Get MAC address         Got MALAD         Id - Network (D-the device network) interface (f here are more than on printing to based, meaning the compatibility, the id compatibility, the id compati	NET-MAC? Get	et MAC address.	~nn@NET-IP_ip_address <cr><lf></lf></cr>		
NET-MACP         Get MAC address.         MET-MAC_Lid.CD>           NET-MACP         Interface (f these are more than only. Doung to black meaning to be only. Interface (f these are more than only. Doung to black meaning to be only. Interface (f these are more than only. Doung to black meaning to be only. Interface (f these are more than only. Doung to black meaning to be only. Interface (f these are more than only. Doung to black meaning to be only. Interface (f these are more than only. Doung to black meaning to be only. Interface (f these are more than only. Doung to black meaning to be only. Interface (f these are more than only. Doung to black meaning to be only. Interface (f these are more than only. Doung to black meaning to be only. Interface (f these are more than only. Doung to black meaning to be only. Interface (f these are more than only. Doung to black meaning to be only. Interface (f these are more than only. Doung to black meaning to be only. Interface (f these are more than only. Doung to black meaning to be only. Interface (f these are more than only. Doung to black meaning to be only. Interface (f these are more than only. Doung to black meaning to be only. Interface (f these are more than only. Doung to black meaning to be only. Interface (f these are more than only. Doung to black meaning to be only. Interface (f these are more than only. Doung to black meaning to be only. Interface (f these are more than only. Doung to black meaning to be only. Interface (f these are more than only. Doung to black meaning to be only. Interface (f these are more than only. Doung to black meaning to be only. Interface (f these are more than only. Doung to black meani	NET-MAC? Get i	et MAC address.			1
RET - MALE       Oct MALA MARES, Sec. 1990       Fill - MALES, Sec. 1990       Fill - MALES, Sec. 1990         RET - MALES, Sec. 1990       Fill - MALES, Sec. 1990       Fill - MALES, Sec. 1990       Fill - MALES, Sec. 1990         NET - MALES, Sec. 1990       Fill - MALES, Sec. 1990       Fill - MALES, Sec. 1990       Fill - MALES, Sec. 1990         NET - MALES, Sec. 1990       COMMAND       Fill - MALES, Sec. 1990       Fill - MALES, Sec. 1990         NET - MALES, Sec. 1990       COMMAND       Fill - MALES, Sec. 1990       Fill - MALES, Sec. 1990         NET - MALES, Sec. 1990       COMMAND       Fill - MALES, Sec. 1990       Fill - MALES, Sec. 1990         NET - MALES, Sec. 1990       COMMAND       Fill - MALES, Sec. 1990       Fill - MALES, Sec. 1990         NET - MALES, Sec. 1990       Fill - MALES, Sec. 1990       Fill - MALES, Sec. 1990       Fill - MALES, Sec. 1990         NET - MALES, Sec. 1990       Fill - MALES, Sec. 1990       Fill - MALES, Sec. 1990       Fill - MALES, Sec. 1990         NET - MALES, Sec. 1990       Fill - MALES, Sec. 1990       Fill - MALES, Sec. 1990       Fill - MALES, Sec. 1990         NET - MALES, Sec. 1990       Fill - MALES, Sec. 1990       Fill - MALES, Sec. 1990       Fill - MALES, Sec. 1990         NET - MALES, Sec. 1990       Fill - MALES, Sec. 1990       Fill - MALES, Sec. 1990       Fill - MALES, Sec. 1990         N	NET-MAC? Get com	et wind address.		d Notwork ID the device native	
PASS     Det is usual weak and the second and the secon	com	Eor Backword	USUMMAND #NET-MAC2 id <cr></cr>	interface (if there are more than one)	#NET-MAC?_id <cr></cr>
Particle can be omitted in this case, the Norther D, by default, 8, which is the Elhernic control pot.	pari	mpatibility, the id		Counting is 0 based, meaning the	
In this case, the Network is the Ethernet control point, it case, the Network is the Ethernet control point, the Network is the Network is the Pass, the Case, the Network is the Network is the Ethernet control point, the Network is the password of the press, the Internet control point, the Network is an empty string.     Set the password for the press, the Network is an empty string.     Set the password of the press, the Network is an empty string.     Set the password of the press, the Network is an empty string.     Set the password of the press, the Network is an empty string.     Set the password of the press, the Network is an empty string.     Set the password of the press, the Network is an empty string.     Set the password of the press, the Network is an empty string.     Set the password of the press, the Network is an empty string.     Set the password of the press, the Network is an empty string.     Set the password of the press, the Network is an empty string.     Set the password of the press, the Network is an empty string.     Set the password of the press, the Network is an empty string.     Set the password of the press, the Network	parmeter can be omitted.	armeter can be omitted.	~nn@NET-MAC id_mac_address <cr><lf></lf></cr>	control port is '0', additional ports are	
International Bound and Section of point         address Format XX,XXX,XXX,XXXXXXXXXXXXXXXXXXXXXXXXXX		this case, the Network		mac address – Unique MAC	
port.         XX where X is has digit           NET-MASK         Set subnet mask.         COMMAND           NET-MASK?         Get password for login level, password GCB>         Iogin_level - Level of login to set [End User Administrato), password GCB>           is an empty string.         Get password for login level, password GCB>         Iogin_level - Level of login to set [End User Administrato), password GCB>           PRIO         Set input priority.         Get password for login level, password GCB>         Input _ id - Window number setting areas - Gate mask assword for login level, password GCB>           PRIO         Set input priority.         Get input priority.         Get input priority.         <	is th	the Ethernet control	e Ethernet control	address. Format: XX-XX-XX-XX-XX-	
NET-MASK       Set subnet mask.       COMMAND       Intel_mask        Set subnet mask.	port	ort.		XX where X is hex digit	
WALF PARK_INC	NET-MASK Set	et subnet mask.		net_mask – Format: xxx.xxx.xxx.xxx	Set the subnet mask to
Image: Section of the subset of the subset in the subse	con	onsult your network	#NET-MASK_met_mask <cr></cr>		#NET-
INTEL: MARK_NOLL Constant       Set         INTEL: MARK_NOLL Constant       Cold Hashing         Intel: mark	adn	Iministrator.	PREDBACK		MASK_255.255.000.000 <cr< td=""></cr<>
NET-MARY       Get subnet mask.       COMMAND       net_mask - Format: xxx.xxx.xxx.       Get the subnet mask:         PASS       Set password for login level.       image:					>
PASS     Set password for login level.     COMMAND     Iogin_level-Level of login to set (EEDBACK -nm8PET-MARK_net_mask <cr>     Set the password of the inpet string.     Set the password of the inpet</cr>	NET-MASK? Get	et subnet mask.	COMMAND	net_mask - Format: xxx.xxx.xxx	Get the subnet mask:
FEEDBACK       nmRRET-RART_not_mask/CR> <lf>       login_level - Level of login to set (End User or Administrator), below is an empty string.       Set the password        Set the password or the figin_level.       Set the password or the login_level. Up to 15 printable ASCII chars       Set the password or the login_level. Up to 15 printable ASCII chars       Set the password or the login_level. Up to 15 printable ASCII chars       Set the password or the login_level. Up to 15 printable ASCII chars       Set the password or the login_level. Up to 15 printable ASCII chars       Set the password or the login_level. Up to 15 printable ASCII chars       Set the password or the login_level. Up to 15 printable ASCII chars       Set the password or the login_level. Up to 15 printable ASCII chars       Set the password or the login_level. Up to 15 printable ASCII chars       Set the password or the login_level. Up to 15 printable ASCII chars       Set the password or the login_level. Up to 15 printable ASCII chars       Set the password or the login_level. Up to 15 printable ASCII chars       Set the password or the login_level. Up to 15 printable ASCII chars       Set the password or the login_level. Up to 15 printable ASCII chars       Set the password or the login_level. Up to 15 printable ASCII chars       Set the password or the login_level. Up to 15 printable ASCII chars       Set the password or the login_level. Up to 15 printable ASCII chars       Set the password or the login_level. Up to 15 printable ASCII chars       Set the password or the login_level. Up to 15 printable ASCII chars       Set the password or the login_level. Up to 15 printable ASCII chars       Set the password or the login_level. Up to 15 printable ASCII chars       Set the passw</lf>			#NET-MASK?_ <cr></cr>		#NET-MASK <cr></cr>
PASS       Set password for login level.       COMMAND (D The default password is an empty string.       COMMAND (PASS_login_level, password <cr>       login_level - Level of login to set (End User or Administrator), password = Password for the login_level.       Set the password for the Admin protocol permiss (gin_level. Up to 15 printable ASCII thans       Set the password for the login_level.         PASS?       Cet password for login level.       COMMAND       Input: Jata Pass_login_level, password CR&gt;<lp>       Commans (D The default password is an empty string.       Commans (D The PRIO max value may vary for different devices.       Commans (D The PRIO max value may vary for different devices.       Commans (D The PRIO max value may vary for different devices.       Commans (D Programs matrix action as a response (r extensil event (programmable button pressed).       Commans (D Programs matrix (D The PRIO max value may vary for different devices.       Commans (D Programs matrix action as a response (r extensil event (programmable button pressed).       Commans (D Programs matrix (D Programs matrix</lp></cr>			FEEDBACK		
PASS       Set password for login level.       COMMAND PASS_login_level,password <ce>       Iogin_level - Level of login to set (End User or Administrator). password of rolgin level.       Set the password for the login_level. Up to 15 printable ASCII PASS_login_level.       Set the password for login password of rolgin level.       Set the password for login password for login level.       Set the password for login password for login</ce>			~nn@NET-MASK_net_mask <cr><lf></lf></cr>		
Image: Additional participation of the parameter of the para	PASS Set	et password for login	COMMAND	login_level – Level of login to set	Set the password for the
(i) The default password (Fried) is an empty string.       FEEDBACK       login_level. Up to 15 printable ASCII       #PASS_idmin,33333:         PASS?       Get password for login level.       GOMMAND       login_level.       login_level. Up to 15 printable ASCII       #PASS_idmin,33333:         PASS?       God fault password for login level.       God fault password for login level.       login_level.       login_level.       Get the password for doministrator).       Get the password for the login. level.       Get the password for the login.       Get the password for doministrator).       password - Password for the login.       Get the password for doministrator).       Get the password for doministrator).       Passs.2, admin.2, 23.25, admin.2			#FRAD_10g1n_1evel,password <cr></cr>	password – Password for the	level to 33333:
PASS?       Get password for login level.       COMMAND       Iogin_level.cevel (field User or Administrator). password of the login_level.cevel (field User or Administrator).       Get the password for the Admin protocol permises password of the login_level.cevel (field User or Administrator). password of the login_level.cevel (field User or Administrator).       ##ASS*_dmin <cm> ##ASS*_dmin<cm> ##ASS*_dmin<cm> ##ASS*_dmin<cm> ##PASS*_login_level.cevel chars         PRIO       Set input priority. (i) The PRIO max value may vary for different devices.       COMMAND #PRIO_input_id,prio<ccp> FEEDBACK -mm@PRIO_input_id,prio<ccp>(E) FEEDBACK -mm@PRIO_input_id,prio<ccp>(C) FEEDBACK -mm@PRIO_input_id,prio<ccp>(c) FEEDBACK -mm@PRIO_input_id,prio<ccp>(c) FEEDBACK -mm@PRIO_input_id,prio<ccp>(c) FEEDBACK -mm@PRIO_input_id,prio<ccp>(c) FEEDBACK -mm@PRIO_input_id,prio<ccp>(c) FEEDBACK -mm@PRIO_input_id,prio<ccp>(c) FEEDBACK -mm@PRIO_input_id,prio<ccp>(c) FEEDBACK -mm@PRIO_input_id,prio<ccp>(c) FEEDBACK -mm@PRIO_input_id,actions_bitmap<cp>(c) FEEDBACK -mm@PROO_ACTION_port_type,<direction_type>.<port_type>.<port_id =="" attributes<br="" following="" the="">comprise the port ID: .       Set step-in button action input 3: #PROO- co IN co OUT co BOTH .       Set step-in button action input 3: #PROO- co IN co OUT co BOTH co HDMI co HDDT co HDMI co HDDT       ANNIOG AUDIO comprise the port ID:</port_id></port_type></direction_type></cp></ccp></ccp></ccp></ccp></ccp></ccp></ccp></ccp></ccp></ccp></ccp></cm></cm></cm></cm>	( ) ·	) The default password		login_level. Up to 15 printable ASCII	<b>#PASS_</b> Admin,33333< <cr></cr>
PASS?       Get password tor login level.       COMMAND       Get the password for login is an empty string.       Get the password of the login_level.	lis a	an empty string.	~IIII@FA55_t0gtn_tevet,password <ck><lf></lf></ck>	chars	
Image: Processed of the second state of the second stat	PASS? Get	et password for login	COMMAND	login_level – Level of login to set	Get the password for the
Image is an empty string.       PEEDEACK       -mageAsS_login_level.password <cr><lf>       fogin_level.Up to 15 printable ASCII       #PASS?_idmin<cr>         PRIO       Set input priority.       (i) The PRIO max value may vary for different devices.       Input_id,prio<cr>       input_id_prio<cr>       input_id_prio<cr>       input_id_mode number setting new source prio - Assigned priority (1max priority)       #PRIO_2.1<cr>         PRIO?       Get input priority.       (i) The PRIO max value may vary for different devices.       #PRIO?_input_id,prio<cr>       input_id_PRIO?_input_id,prio<cr>       input_id_PRIO?_input_id,prio<cr>       input_id_PRIO?_input_id,prio<cr>       input_id_PRIO?_input_id,prio<cr>       input_id_PRIO?_input_id,prio<cr>       input_id_PRIO?_input_id_prio<cr>       input_id_PRIO?_input_id_prio<cr>       input_id_PRIO?_input_id_prio<cr>       input id_PRIO?_input_id_prio<cr>       input id_PRIO?_input_id_PRIO?_</cr></cr></cr></cr></cr></cr></cr></cr></cr></cr></cr></cr></cr></cr></cr></lf></cr>			#FEDDAOK	password – Password for the	level:
PRIO       Set input priority.       COMMAND       input_id_prio <cr>       input_id_mov number setting new source prio - Assigned priority (1max priority)       #PRIO_2.1<cr>         PRIO?       Get input priority.       COMMAND       input_id_prio<cr>       input_id_CR&gt;       input_id_CR&gt;       prio - Assigned priority (1max priority)       #PRIO?_input_id<cr>         (i) The PRIO max value may vary for different devices.       COMMAND       input_id_CR&gt;       input_id_CR&gt;       input_id_CR&gt;       prio - Assigned priority (1max priority)       PRIO#PRIO?_I<cr>         PROG-ACTION       Set Step-In button action bitmap.       COMMAND       input_id_prio<cr>       prot_type - Input/Output       Set step-in button action input 3: #PROG-ACTION_port_type, <direction_type>.<port_type>.<port_id attributes="" comprise="" di:<="" following="" port="" td="" the="">       Set step-in button action input 3: #PROG-ACTION_port_type, <direction_type>.<port_type>.<port_id attributes="" comprise="" di:<="" following="" port="" td="" the="">       o IN       o N         (programmable button pressed).       OUT       0 N       0 OUT       0 N       0 N       0 OUT       0 N       0 OUT       0 N       0 OUT       0 N       0 OUT       0 N       0 N       0 OUT       0 N       0 N       0 OUT       0 N       0 N       0 N       0 OUT       0 N       0 N       0 OUT       0 N       0 N       0 OUT       0 N       0 N</port_id></port_type></direction_type></port_id></port_type></direction_type></cr></cr></cr></cr></cr></cr>	( ) ·	) The default password		login_level. Up to 15 printable ASCII	<b>#PASS?_</b> Admin <cr></cr>
PRIO       Set input priority.       input_id - Window number setting may vary for different devices.       input_id,prio <cr>       input_id,prio<cr>       input_id,prio<cr>       input_id,prio<cr>       input_id,prio<cr>       prio       Assigned priority (1max priority)         i The PRIO max value may vary for different devices.       COMMAND       input_id,prio<cr>       input_id - Window number setting new source prio - Assigned priority (1max priority)       PRIO?       input_id.prio<cr>       input_id.prior(CR&gt;       input_id.prior(CR&gt;       priority)       PRIO?       input_id.prio<cr>       input_id.prio<cr>       input_id.prior(CR&gt;       input_id.prior(CR&gt;       priority)       PRIO?       PRIO?       input_id.prior(CR&gt;         i The PRIO max value may vary for different devices.       COMMAND       #PRIO?_input_id.CR&gt;       input_id.prio<cr>       priority       priority       PRIO?       PRIO?       CR&gt;         PROG-ACTION       Set Step-In button action bitmap.       COMMAND       #PROG-ACTION_type, <direction_type.<<port_index< td="">       port_type - Input/Output       Set step-in button action input input id.prior       Set step-in button action input input id.prior       input in</direction_type.<<port_index<></cr></cr></cr></cr></cr></cr></cr></cr></cr></cr>	is a	an empty string.	-Imerop_togin_tevel, password <ck><lk></lk></ck>	chars	
Image:	PRIO Set	et input priority.	#PRTO input id priocCP	<pre>input_id - Window number setting new source</pre>	<pre>#PRIO_2,1<cr></cr></pre>
may vary for different devices.       FEEDBACK       priority)         PRIO?       Get input priority.       input_id.prio <cr><lf>       input_id - Window number setting new source prio - Assigned priority (1max priority)       PRIO#PRIO?_1<cr>         PROG-ACTION       Set Step-In button action bitmap.       iPrograms matrix action as a response for external event (programmable button pressed).       COMMAND       port_type - Input/Output 0max       Set step-in button_id, actions_bitmap<cr>         FEEDBACK       -nm@PROG-ACTION_oport_type,<direction_type>.<port_type>.<port_index< td="">       port_type - Input/Output 0max       Set step-in button action input 3: #PROG-ACTION_oport_type,<direction_type>.<port_index< td="">         Image: Programmable button       feeDBACK       -nm@PROG-ACTION_oport_type,<direction_type>.<port_type>.<port_type -="" 0max<="" input="" output="" td="">       Set step-in button action input 3: #PROG-ACTION_oport_type,<direction_type>.<port_id -="" attributes="" comprise="" following="" id:<="" port="" td="" the="">       .         Image: Programmable button       feeDBACK       -nm@PROG-ACTION_oport_type,<direction_type>.<port_type>.       Image: Programmable button input 3: #PROG-ACTION_oport_type,<direction_type>.       Programmable button input 3: #PROG-ACTION_oport_type = .       Image: Programmable button input 3: #PROG-ACTION_oport_type = .</direction_type></port_type></direction_type></port_id></direction_type></port_type></port_type></direction_type></port_index<></direction_type></port_index<></port_type></direction_type></cr></cr></lf></cr>	() ·	) The PRIO max value		prio – Assigned priority (1max	
PRIO?       Get input priority.       COMMAND       input_id-Window number setting new source prio - Assigned priority (1max priority)       PRIO#PRIO?_l <cr>         PROG-ACTION       Set Step-In button action bitmap.       @OMMAND       #PROG-ACTION_type,<direction_type>.<port_index< td="">       port_type - Input/Output       Set step-in button action input 3:         ImageRight Processed).       @OMMAND       #PROG-ACTION_type,<direction_type>.<port_type>.<port_type>.<port_type>.<port_tidex< td="">       Set step-in button action input 3:       #PROG-ACTION_oport_type,<direction_type>.<port_type>.<port_tide -="" attributes="" comprises="" following="" id:<="" port="" td="" the="">       Set step-in button action input 3:       #PROG-ACTION_oport_type,<direction_type>.<port_type>.<port_type>.<port_type>.<port_type>.<port 0:<="" p="">       .</port></port_type></port_type></port_type></port_type></direction_type></port_tide></port_type></direction_type></port_tidex<></port_type></port_type></port_type></direction_type></port_index<></direction_type></cr>	may	ay vary for different	reperto input id priocescles	priority)	
PRIO?       Get input profity.       imput_id < Window number setting may car for different devices.	dev	vices.			
Image: Set Step-In button action bitmap.       Image: Set Step-In button action bitmap. <td< td=""><td>PRIO? Get</td><td>et input priority.</td><td>#PPTO2 input idcCP</td><td><pre>input_id - vvindow number setting new source</pre></td><td>PRIO#PRIO?_1<cr></cr></td></td<>	PRIO? Get	et input priority.	#PPTO2 input idcCP	<pre>input_id - vvindow number setting new source</pre>	PRIO#PRIO?_1 <cr></cr>
may vary for different devices.       Image Priod input_id.priodCR>       priority)       priority)         PROG-ACTION       Set Step-In button action bitmap.       COMMAND       port_type - Input/Output       Set step-in button action input 3:         (i) Programs matrix action as a response for external event (programmable button pressed).       FEEDBACK       Description (Description)       Set step-in button_id, actions_bitmap <cr>       Description (Description)       Set step-in button action input 3:       #PROG-ACTION_type, <direction_type>.       Set step-in button action input 3:         rm@PROG-ACTION_port_type, <direction_type>.       rm@PROG-ACTION_port_type, <direction_type>.       Port_type&gt;.       Set step-in button action input 3:         (programmable button pressed).       FEEDBACK       -mm@PROG-ACTION_port_type, <direction_type>.       Port_type&gt;.       O - Input       ACTION_0, 3, 1, 0x07         (brown of the step of ID:       -tindex&gt;, button_id, actions_bitmap       O - Input       1.       OUT       OUT</direction_type></direction_type></direction_type></direction_type></cr>	() ·	) The PRIO max value		prio – Assigned priority (1max	
PROG-ACTION       Set Step-In button action bitmap.       COMMAND       port_type - Input/Output 0 - Input       port_type - Input/Output 0 - Input       Set step-in button action input 3: #PROG-ACTION_type, <direction_type>.<port_index< td="">       0 - Input       Set step-in button action input 3: #PROG-ACTION_opert_type,<direction_type>.<port_index< td="">       0 - Input       Set step-in button action input 3: #PROG- ACTION_0,3,1,0x07         Image: Description of the step o</port_index<></direction_type></port_index<></direction_type>	may	may vary for different devices.	~nn@PRIO input id.prio <cr><lf></lf></cr>	priority)	
PROG-ACTION       Set Step-in Duiton action       Dott       Set Step-in Duiton action       Dott       Dott       Dott       Dott       Dott       Dott       Set Step-in Duiton action       Imput 3:         PROG-ACTION_programmable button       Pressed).       Pressed).       FEEDBACK       Imput 3:       #PROG-ACTION_port_type, <direction_type>.<port_type>.<port_type>.<port_id -="" attributes<="" following="" td="" the="">       ACTION_0, 3, 1, 0x07         rt_index&gt;, button_id, actions_bitmap<cr>       Imperce_rest       N       OUT       N       OUT       OUT       BOTH         .</cr></port_id></port_type></port_type></direction_type>	dev	vioco.		hours have hours	Pot aton in hutten actions
<pre></pre>	PROG-ACTION Set	tmap.	#PROG-ACTION type, sdirection types, sport types sport index		input 3:
Image: Construction of the section		Deservements - total	<pre>&gt;,button_id,actions_bitmap<cr></cr></pre>	1 – Output	#PROG-
external event (programmable button pressed).  -nm@PROG-ACTION_port_type, <direction_type>.<pre>comprise the port ID: -<direction_type>- o IN O UT O BOTH -<pre>comprise the port ID: -<direction_type>- o IN O UT O BOTH -<pre>comprise the port ID: -<direction_type>- o IN O UT O BOTH -<pre>comprise the port ID: -<direction_type>- o IN O UT O BOTH -<pre>comprise the port ID: -<direction_type>- o IN O UT O BOTH -<pre>comprise the port ID: -<direction_type>- o IN O UT O BOTH -<pre>comprise the port ID: -<direction_type>- o IN O UT O BOTH -<pre>comprise the port ID: -<direction_type>- o IN O UT O BOTH -<pre>comprise the port ID: -<direction_type>- o IN O UT O BOTH -<pre>comprise the port ID: -<direction_type>- o IN O UT O BOTH -<pre>comprise the port ID: -<direction_type>- o IN O UT O BOTH -<pre>comprise the port ID: -<direction_type>- o IN O UT O BOTH -<pre>comprise the port ID: -<direction_type>- o IN O UT O BOTH -<pre>comprise the port ID: -<direction_type>- o IN O UT O BOTH -<pre>comprise the port ID: -<direction_type>- o IN O UT O BOTH -<pre>comprise the port ID: -<direction_type>- o IN O UT O BOTH -<pre>comprise the port ID: -<direction_type>- o IN O UT -</direction_type></pre></direction_type></pre></direction_type></pre></direction_type></pre></direction_type></pre></direction_type></pre></direction_type></pre></direction_type></pre></direction_type></pre></direction_type></pre></direction_type></pre></direction_type></pre></direction_type></pre></direction_type></pre></direction_type></pre></direction_type></pre></direction_type></pre></direction_type>		tion as a response for	FEEDBACK	port_id - The following attributes	ACTION_0,3,1,0x07 <cr></cr>
(programmable button pressed).       rt_index>,button_id,actions_bitmap <cr><lp>       o       N         0       0UT       0UT       0UT         0       0UT       0UT       0UT</lp></cr>	exte	ternal event	<pre>~nn@PROG-ACTION_port_type,<direction_type>.<port_type>.<port_type>.<port_type>.<port_type>.<port_type>.<port_type>.</port_type></port_type></port_type></port_type></port_type></port_type></direction_type></pre>	comprise the port ID:	
	(pro	rogrammable button	rt_index>,button_id,actions_bitmap <cr><lf></lf></cr>	o IN	
	pres	esseu).		• OUT	
				o BOTH	
				<pre>• <port_type> -</port_type></pre>	
				AMPLIFIED AUDIO	
• TOS				• TOS	
○ SPDIF				o SPDIF	
○ MIC				• MIC	
o RS-232				0 KS-232	
o USB B				• USB_B	
<pre><port_index> - The port</port_index></pre>				<pre>ort_index&gt; - The port</pre>	
number as printed on the front or				number as printed on the front or	
rear panel				rear panel	
				button ID	
button ID				actions_bitmap - Bitmap	
button ID actions_bitmap – Bitmap				representing actions to perform after	
button ID actions_bitmap – Bitmap representing actions to perform after reprised in a format in a form				where X is a hex digit. The binarv	
button ID actions_bitmap – Bitmap representing actions to perform after receiving button_id. format: XXXXX, where X is a hex digit. The binary	1 1			form of every hex digit represents	
button ID actions_bitmap – Bitmap representing actions to perform after receiving button_id. format: XXXXX, where X is a hex digit. The binary form of every hex digit represents				actions from the table	
button ID actions_bitmap – Bitmap representing actions to perform after receiving button_id. format: XXXXX, where X is a hex digit. The binary form of every hex digit represents actions from the table 0. Deate to receive					
button ID actions_bitmap – Bitmap representing actions to perform after receiving button_id. format: XXXXX, where X is a hex digit. The binary form of every hex digit represents actions from the table 0 – Echo to controller 1 – Step-in out 1				1 – Ecno to controller	
button ID actions_bitmap – Bitmap representing actions to perform after receiving button_id. format: XXXXX, where X is a hex digit. The binary form of every hex digit represents actions from the table 0 – Echo to controller 1 – Step-in out 1 2 – Steo-in out 2				u – Ecno to controller 1 – Step-in out 1 2 – Step-in out 2	
button ID actions_bitmap – Bitmap representing actions to perform after receiving button_id. format: XXXXX, where X is a hex digit. The binary form of every hex digit represents actions from the table 0 – Echo to controller 1 – Step-in out 1 2 – Step-in out 2 –				1 – Ecno to controller 1 – Step-in out 1 2 – Step-in out 2 –	
button ID actions_bitmap – Bitmap representing actions to perform after receiving button_id. format: XXXXX, where X is a hex digit. The binary form of every hex digit represents actions from the table 0 – Echo to controller 1 – Step-in out 1 2 – Step-in out 2 – N – Step-in out N				u – Echo to controller 1 – Step-in out 1 2 – Step-in out 2 – N – Step-in out N	

Function	Description	Syntax	Parameters/Attributes	Example
PROG-	Get step-in button action	COMMAND	port_type - Input/Output	
ACTION?	piumap.	<pre>#PROG-ACTION?_port_type,<direction_type>.<port_type>.<port _index&gt;,button_id<cr></cr></port </port_type></direction_type></pre>	1 – Output	
	() Programs matrix action as a response for	FEEDBACK	<pre>port_id - The following attributes</pre>	
	external event	<pre>~nn@PROG-ACTION_port_type, <direction_type>. <po rt_index_button_id_actiona_bitman_(d="">_LE&gt;)</po></direction_type></pre>	comprise the port ID: <pre> • <direction type=""> - </direction></pre>	
	(programmable button pressed).	rt_index>,button_id,actions_bitmap <ck><lf></lf></ck>	o IN	
	. ,		• OUT	
			<pre>o bOIH </pre>	
			o HDMI	
			<ul> <li>AMPLIFIED_AUDIO</li> </ul>	
			• TOS	
			o MIC	
			• RS-232	
			olR oUSBA	
			o USB_B	
			<pre>• <port_index> – The port number as printed on the front or</port_index></pre>	
			rear panel	
			button_id – External programmable	
			actions_bitmap - Bitmap	
			representing actions to perform after receiving button id. format: XXXXX,	
			where X is a hex digit. The binary	
			actions from the table	
			0 – Do nothing	
			2 – Step-in out 2	
			–	
			128 – Step-In out 128 129 – Echo to controller	
			Setting '1' says that the corresponding	
PROT-VER?	Get device protocol	COMMAND	version – XX.XX where X is a	Get the device protocol
	version.	#PROT-VER?_ <cr></cr>	decimal digit	version:
		FEEDBACK		
REMOTE-	Get connected Step-in	COMMAND	stage - Input/Output	#REMOTE-INFO? 0.1 <cr></cr>
INFO?	module information.	<pre>#REMOTE-INFO?_stage,stage_id<cr></cr></pre>	0 – Input	
	(i) The matrix uses this	FEEDBACK	1 – Output stage id – # of chosen stage	
	Step-in client changes.	<pre>"mextmore-info_stage.stage_id.connected.model_name.curr_i nput.capabilities.num_of_inputs.num_of_ctl_btn.type1.type2</pre>	(1 to max number of inputs/outputs)	
		typeN <cr><lf></lf></cr>	connected)	
			model_name - Model name string	
			chosen on module	
			capabilities – 0 – module doesn't support Step-in	
			1 – module supports Step-in	
			num_of_inputs – Number of inputs	
			num_of_ctl_btn - Number of	
			control buttons on module	
			according to num_of_inputs	
			2-HDMI	
			3 – DisplayPort 4 – HDBaseT	
			5-SDI	
			6-VGA	
RESET	Reset device.	COMMAND		Reset the device:
	(i) To avoid locking the	#RESET <cr></cr>		#RESET <cr></cr>
	port due to a USB bug in	reedback		
	USB connections			
	immediately after running this command. If the port			
	was locked, disconnect			
	to reopen the port.			
ROUTE	Set layer routing.	COMMAND	layer Layer Enumeration	Route video HDMI IN 2 to
	(i) This command	FEEDBACK	2 – Audio	#ROUTE_1,8,2 <cr></cr>
	replaces all other routing commands.	~nn@ROUTE_layer,dest,src <cr><lf></lf></cr>	3 – Data	
			4 – IK 5 – USB	
			dest	
			x – ALL x – disconnect, otherwise	
			destination id	

Function	Description	Syntax	Parameters/Attributes	Fxample
POUTE2	Get laver routing	COMMAND	laver Laver Enumeration	Get laver routing:
KOUIE:	Contrayor routing.	#ROUTE?,layer,dest <cr></cr>	1 – Video	#ROUTE?,1,4 <cr></cr>
	(i) This command	FEEDBACK	2– Audio	
	commands	<pre>~nn@ROUTE_layer,dest,src<cr><lf></lf></cr></pre>	3 – Data	
			4– IR	
			5-USB dest	
			* – ALL	
			x – disconnect, otherwise	
			destination id	
anom	Start/stop security	COMMAND	src - Source Id	Enable the permission system:
SECOR	Start/stop security.	#SECUR security mode <cr></cr>	0 – OFF (disables security)	#SECUR 0 <cr></cr>
	() The permission	FEEDBACK	1 – ON (enables security)	
	system works only if security is enabled with	~nn@SECUR_security_mode <cr><lf></lf></cr>		
	the "SECUR" command.	_		
SECUR?	Get current security state.	COMMAND	security_mode -	#SECUR?_ <cr></cr>
	(i) The permission	#SECUR?_ <cr></cr>	1 – OFF (disables security)	
	system works only if	FEEDBACK		
	security is enabled with	~nn@SECUR_security_mode <cr><lf></lf></cr>		
SIGNAL?	Get input signal status.	COMMAND	inp id – Input number	Get the input signal lock status
		#SIGNAL?_inp_id <cr></cr>	1 – Input 1	of IN 1:
		FEEDBACK	n – Input n	#SIGNAL?_1 <cr></cr>
		~nn@SIGNAL_inp_id,status <cr><lf></lf></cr>	status – Signal status according to	
			0 – Off	
			1 – On	
SN?	Get device serial	COMMAND	serial_number - 14 decimal	Get the device serial number:
	number.	#SN?_ <cr></cr>	digits, factory assigned	#SN?_ <cr></cr>
		FEEDBACK		
		~nn@SN_serial_number <cr><lf></lf></cr>	la se til Outrast	
TUNNEL-CTRL	Send an asynchronous	COMMAND		
	command to a remote		1 – Output	
	Step-in equipment.	None	stage_id - Number of chosen stage	
			(1 to max number of inputs/outputs)	
			command – Command to send to the	
UPGRADE	Perform firmware	COMMAND		Perform firmware upgrade:
	upgrade.	#UPGRADE <cr></cr>		#UPGRADE <cr></cr>
	(i) Not necessary for	FEEDBACK		
	some devices.	~nn@UPGRADE_OK <cr><lf></lf></cr>		
	Firmware usually uploads			
	to a device via a			
	command like LDFW.			
	Reset the device to			
	complete the process.			
VERSION?	Get firmware version	COMMAND	firmware_version - XX.XX.XXXX	Get the device firmware
	number.	#VERSION?_ <cr></cr>	major.minor.build version	#VERSION? <cr></cr>
		~nneversion_lirmware_version <cr><lf></lf></cr>		
VID	LEGACY COMMAND.		in – Input number or '0' to disconnect	Switch IN 1 to OUT 3:
			> – Connection character between in	
	(i) The GET command		and out parameters	
	on Step-in clients.		out – Output number or '*' for all	
			outputs	
	The SET command is for			
	Step-in clients			
	(essentially via by the			
	Web).			
	This is a legacy			
	command. New Step-in			
	ROUTE command.			
VID?	LEGACY COMMAND.	COMMAND	in – Input number or '0' to disconnect	Switch IN 1 to OUT 3:
	Get video switch state.	#VID?_out <cr></cr>	output	#VID_1>3 <cr></cr>
	(i) The GET command	FEEDBACK	and out parameters	
	identifies input switching	~nn@VID_in>out <cr><lf></lf></cr>	out – Output number or '*' for all	
	on Step-in clients.		outputs	
	The SET command is for			
	remote input switching on			
	(essentially via by the			
	Web).			
	This is a legacy			
	command. New Step-in			
	modules support the			
VIDEBATTER	Set test pattern on output	COMMAND	output id - 1 to number of system	Switch PATTERN 1 to OUT 2
VID-PAITERN		#VID-PATTERN_output_id,pattern_id <cr></cr>	outputs	#VID-PATTERN_3,1 <cr></cr>
		FEEDBACK	pattern_id - 1 to number of	
		~nn@VID-PATTERN_output_id,pattern_id <cr><lf></lf></cr>	system patterns	

Function	Decorintion	Syntox	Parameters/Attributes	Example
Function	Description	Syntax	Parameters/Attributes	
VID- PATTERN?	output.		output_id = 1 to number of system	WID-DATTERN 3 1-CP
			pattern_id – 1 to number of	
		THE ACK	system patterns	
	Set output resolution		share Input/Output	
VID-RES	Set output resolution.	#VID-RES stage.stage id is native.resolution	0 – Input	
	() "Set" command is only		1 – Output	
	applicable for	~nn@VID-RES_stage,stage_id,is_native,resolution <cr><lf></lf></cr>	<pre>stage_id - Number of chosen stage</pre>	
	stage-output.		(1 to max number of inputs/outputs)	
	"Set" command with		0 – Off	
	resolution on selected		1 – On	
	output (resolution index		resolution – Resolution index	
	sent = 0). Device sends as answer actual VIC ID		U=No Signal (for input) / Native –	
	of native resolution.		1=640x480p@59.94Hz/60Hz	
	"Get" command with		2=720x480p@59.94Hz/60Hz	
	is_native=ON returns		4=1280x720p@59.94Hz/60Hz	
	native resolution VIC,		5=1920x1080i@59.94Hz/60Hz	
	returns current resolution.		6=720(1440)x480i@59.94Hz/60Hz	
	To use "custom		8=720(1440)x240p@59.94Hz/60Hz	
	resolutions" (entries 100-		<b>9=</b> 720(1440)x240p@59.94Hz/60Hz	
	define them using the		10=2880x480i@59.94Hz/60Hz 11=2880x480i@59.94Hz/60Hz	
	DEF-RES command.		12=2880x240p@59.94Hz/60Hz	
			<b>13=</b> 2880x240p@59.94Hz/60Hz	
			<b>15</b> =1440x480p@59.94Hz/60Hz	
			16=1920x1080p@59.94Hz/60Hz	
			<b>17=</b> 720x576p@50Hz <b>18=</b> 720x576p@50Hz	
			<b>19=</b> 1280x720p@50Hz	
			20=1920x1080i@50Hz	
			21=720(1440)x576i@50Hz 22=720(1440)x576i@50Hz	
			23=720(1440)x288p@50Hz	
			<b>24=</b> 720(1440)x288p@50Hz	
			<b>25=</b> 2880x576i@50Hz <b>26=</b> 2880x576i@50Hz	
			27=2880x288p@50Hz	
			<b>28=</b> 2880x288p@50Hz <b>29-</b> 1440x576p@50Hz	
			<b>30=</b> 1440x576p@50Hz	
			31=1920x1080p@50Hz	
			32=1920x1080p@23.97Hz/24Hz 33=1920x1080p@25Hz	
			34=1920x1080p@29.97Hz/30Hz	
			<b>35=</b> 2880x480p@59.94Hz/60Hz <b>36=</b> 2880x480p@59.94Hz/60Hz	
			37=2880x576p@50Hz	
			38=2880x576p@50Hz	
			<b>40</b> =1920x1080i@50Hz <b>40</b> =1920x1080i@100Hz	
			41=1280x720p@100Hz	
			42=720x576p@100Hz	
			<b>44=</b> 720(1440)x576i@100Hz	
			45=720(1440)x576i@100Hz	
			40=1920X10801@119.88/120HZ 47=1280x720p@119.88/120Hz	
			48=720x480p@119.88/120Hz	
			49=720x480p@119.88/120Hz	
			<b>51=</b> 720(1440)x480i@119.88/120Hz	
			52=720x576p@200Hz	
			<b>53</b> =720X576p@200Hz <b>54</b> =720(1440)x576i@200Hz	
			<b>55=</b> 720(1440)x576i@200Hz	
			<b>56=</b> 720x480p@239.76/240Hz	
			<b>58</b> =720(1440)x480i@239.76/240Hz	
			<b>59=</b> 720(1440)x480i@239.76/240Hz	
			60=1280x/20p@23.97Hz/24Hz 61=1280x720p@25Hz	
			62=1280x720p@29.97Hz/30Hz	
			63=1920x1080p@119.88/120Hz	
			65=800x600p@60Hz	
			66-100=(Reserved)	
			100=Custom resolution 1	
			102=Custom resolution 3	
			103=Custom resolution 4	
			104=Custom resolution 5	
			105-254=(Reserved)	

Function	Description	Syntax	Parameters/Attributes	Example
VID-RES?	Get output resolution.	COMMAND	stage – Input/Output	
	"Get" command with	<pre>#VID-RES?_stage_id,is_native <cr></cr></pre>	0 – Input	
	is native=ON returns	FEEDBACK	1 – Output	
	native resolution VIC,	<pre>~nn@VID-RES_stage,stage_id,is_native,resolution<cr><lf></lf></cr></pre>	(1 to max number of inputs/outputs)	
	returns current resolution		is_native - Native resolution flag	
			0 – Off	
	To use "custom resolutions" (entries 100-		1 – Un Resolution index	
	105 In View Modes),		0=No Signal (for input) / Native –	
	define them using the		EDID (for output) 1=640x480p@59 94Hz/60Hz	
	DEF-RES command.		2=720x480p@59.94Hz/60Hz	
			3=720x480p@59.94Hz/60Hz 4=1280x720p@59.94Hz/60Hz	
			5=1920x1080i@59.94Hz/60Hz	
			<b>7</b> =720(1440)x480i@59.94Hz/60Hz	
			8=720(1440)x240p@59.94Hz/60Hz 9=720(1440)x240p@59.94Hz/60Hz	
			10=2880x480i@59.94Hz/60Hz	
			11=2880x480i@59.94Hz/60Hz 12=2880x240p@59.94Hz/60Hz	
			<b>13=</b> 2880x240p@59.94Hz/60Hz	
			<b>15=</b> 1440x480p@59.94Hz/60Hz	
			<b>16</b> =1920x1080p@59.94Hz/60Hz <b>17</b> =720x576p@50Hz	
			18=720x576p@50Hz	
			<b>20=</b> 1920x1080i@50Hz	
			<b>21=</b> 720(1440)x576i@50Hz <b>22=</b> 720(1440)x576i@50Hz	
			23=720(1440)x288p@50Hz	
			24=720(1440)x288p@50Hz 25=2880x576i@50Hz	
			26=2880x576i@50Hz	
			28=2880x288p@50Hz	
			29=1440x576p@50Hz 30=1440x576p@50Hz	
			31=1920x1080p@50Hz	
			<b>33</b> =1920x1080p@25Hz	
			<b>34</b> =1920x1080p@29.97Hz/30Hz <b>35</b> =2880x480p@59.94Hz/60Hz	
			<b>36=</b> 2880x480p@59.94Hz/60Hz	
			37=2880x576p@50Hz 38=2880x576p@50Hz	
			<b>39=</b> 1920x1080i@50Hz	
			41=1280x720p@100Hz	
			42=720x576p@100Hz 43=720x576p@100Hz	
			44=720(1440)x576i@100Hz	
			<b>45=</b> 720(1440)x576(@100H2 <b>46=</b> 1920x1080i@119.88/120Hz	
			47=1280x720p@119.88/120Hz 48=720x480p@119.88/120Hz	
			49=720x480p@119.88/120Hz	
			<b>50=</b> 720(1440)x480(@119.88/120Hz <b>51=</b> 720(1440)x480(@119.88/120Hz	
			52=720x576p@200Hz	
			54=720(1440)x576i@200Hz	
			55=720(1440)x576i@200Hz 56=720x480p@239.76/240Hz	
			57=720x480p@239.76/240Hz	
			<b>59=</b> 720(1440)x480i@239.76/240Hz	
			60=1280x720p@23.97Hz/24Hz 61=1280x720p@25Hz	
			62=1280x720p@29.97Hz/30Hz	
			64=1920x1080p@119.88/120Hz	
			65=800x600p@60Hz 66-100=(Reserved)	
			100=Custom resolution 1	
			101=Custom resolution 2 102=Custom resolution 3	
			103=Custom resolution 4	
			105-254=(Reserved)	
VMUTE	Set enable/disable video	COMMAND	output_id - 1 to number of system	Disable the video output on
		<pre>#VMUTE_output_id,flag<cr></cr></pre>	flag – Video Mute	#VMUTE.2,0 <cr></cr>
	Video mute parameter	TREEDBACK	0 – Video enabled	
	∠ (plank picture) is not supported.	- more output_turtay corver	1 – Video disabled	
1000000	Get video on output	COMMAND	Z - Blank picture	Get video on output status:
VMUTE?	status.	#VMUTE?_output_id_ <cr></cr>	outputs	#VMUTE?_2 <cr></cr>
	Video mute parameter	FEEDBACK	flag – Video Mute	_
	2 (blank picture) is not	~nn@VMUTE_output_id,flag <cr><lf></lf></cr>	U – Video enabled	
	supported.		2 – Blank picture	

## 結果とエラーコード

## シンタックス

エラーが発生した場合、デバイスはエラーメッセージで応答します。エラーメッセージの構文:

- ・~NN@ERR XXX<CR><LF>:一般的なエラーの場合、特定コマンドはありません
- ・~NN@CMD ERR XXX<CR><LF>:特定のコマンドの場合
- ・NN:デバイスのマシン番号、デフォルト = 01
- ・XXX:エラーコード

## エラーコード

	エラー   コード	内容
P3K_NO_ERROR	0	エラーなし
ERR_PROTOCOL_SYNTAX	1	プロトコルシンタックス
ERR_COMMAND_NOT_AVAILABLE	2	コマンドは使用できません
ERR_PARAMETER_OUT_OF_RANGE	3	パラメーターが範囲外
ERR_UNAUTHORIZED_ACCESS	4	不正アクセス
ERR_INTERNAL_FW_ERROR	5	内部 FW エラー
ERR_BUSY	6	Protocol busy
ERR_WRONG_CRC	7	CRCの誤り
ERR_TIMEDOUT	8	タイムアウト
ERR_RESERVED	9	(Reserved)
ERR_FW_NOT_ENOUGH_SPACE	10	データ用に十分な空きが無い (ファームウェア, FPGA…)
ERR_FS_NOT_ENOUGH_SPACE	11	十分な空きが無い : ファイルシステム
ERR_FS_FILE_NOT_EXISTS	12	ファイルが存在しません
ERR_FS_FILE_CANT_CREATED	13	ファイルを作成できません
ERR_FS_FILE_CANT_OPEN	14	ファイルが開けません
ERR_FEATURE_NOT_SUPPORTED	15	機能は対応していません
ERR_RESERVED_2	16	(Reserved)
ERR_RESERVED_3	17	(Reserved)
ERR_RESERVED_4	18	(Reserved)
ERR_RESERVED_5	19	(Reserved)
ERR_RESERVED_6	20	(Reserved)
ERR_PACKET_CRC	21	パケットCRCエラー
ERR_PACKET_MISSED	22	パケット番号がありません(パケットの誤り)
ERR_PACKET_SIZE	23	パケットサイズの誤り
ERR_RESERVED_7	24	(Reserved)
ERR_RESERVED_8	25	(Reserved)
ERR_RESERVED_9	26	(Reserved)
ERR_RESERVED_10	27	(Reserved)
ERR_RESERVED_11	28	(Reserved)
ERR_RESERVED_12	29	(Reserved)
ERR_EDID_CORRUPTED	30	EDIDの破損
ERR_NON_LISTED	31	デバイス固有のエラー
ERR_SAME_CRC	32	ファイルのCRCが同じ:変更されていません
ERR_WRONG_MODE	33	誤った操作モード
ERR_NOT_CONFIGURED	34	デバイス/チップが初期化されていません









SAFETY WARNING Disconnect the unit from the power supply before opening and servicing

For the latest information on our products and a list of Kramer distributors, visit our Web site where updates to this user manual may be found.

We welcome your questions, comments, and feedback.

www.KramerAV.com info@KramerAV.com